

# PARTS & INSTALLATION INSTRUCTIONS MEYER SNOW PLOW MOUNTING 1967 THRU 1977 FORD F250, 4x4 TRUCK

#### **IMPORTANT NOTICE**

End user must be given this instruction sheet prior to delivery of this Snow Plow.

The equipment you have just purchased should only be used on vehicles equipped with the Manufacturer's Snow Plow Preparation Packages. Snow Plowing without the original Snow Plow Preparation Package may damage your vehicle and the added weight to the equipment may impair the operation and control of the vehicle. Snow Plowing with a vehicle that the manufacturer does not recommend for that purpose may void your new vehicle warranty. If your vehicle is not originally equipped with the Snow Plow Package, additional parts may be necessary before snow plowing. Owners of these vehicles should consult their dealers before purchase or installation of such parts. CAUTION: the installation, on any vehicle, of these parts is not a full substitute for the original equipment Snow Plow Preparation Package.

Warning: Lift Arm extends beyond bumper of vehicle. To minimize damage from a front-end collision, Lift Arm should be removed from vehicle when Snow Plow is removed.

		PARTS LIST	
Item	Part No.	Qtv.	Description

Pai	rt NO.	Qty.	Description			
17	7053	1	M	MOUNTING CARTON		
10	365	1	Lift Frame			
10	143	1	Underframe L .H .			
10	144	1	• (	Jnde	rframe R .H .	
10	145	1	Clevis Frame		s Frame	
10	)514	1	• [	Lift Arm		
90	3394	1	• }	HAR	DWARE BAG	
14	193	2	••	Spe	cial Bolt	
20	165	4	••	Bolt	H 3/4-10 x 2-1/4	
20	164	5	••	Bolt	H 3/4-10 x 2	
20	147	2	••	Bolt	H 5/8-11 x 3-1/2	
20	144	1	•• Bolt H 5/8-11 x 2-3/4			
20	085	2	•• Bolt H 7/16-14 x 5			
12 20073		2	•• Bolt H 7/16-14 x 1-1 /2			
13 20310		11	• • Locknut 3/4-10			
14 20309		3	• • Locknut 5/8-11			
15 20306		6	•• Locknut 7/16-14			
20	359	3		• • Flat Washer, 3/4		
20	354	6	•• Flat Washer, 7/16		Washer, 7/16	
				• • Pipe Spacer (see Service Bulletin #88		
11" Sector 1		15" Se	ctor			
	Qty.			Qty.	Description	
16288 1					SECTOR & A-FRAME CARTON	
12326					Sector	
13306				-	A-Frame	
07017				-	Trip Spring	
09916		09916			Marker Kit	
08166		08341		-	PLOW HARDWARE BAG	
09119					Pivot Pin w/Cotter Pin	
11101					• • Hinge Pin	
	1 - 1			_	Hair Pin Cotter	
09122 09124		0912	25	1	• • King Bolt w/Locknut	
	3	0912		4	• • Eye Bolt w/Locknuts	
֡	177 100 100 100 100 100 100 100 100 100	17053 10365 10143 10144 10145 10514 08394 14193 20165 20164 20147 20144 20085 20073 20310 20309 20306 20359 20354 10410 ector	10365	17053 1 MG 10365 1 • L 10143 1 • L 10144 1 • L 10145 1 • L 10514 1 • L 08394 1 • L 14193 2 • • 20165 4 • • 20164 5 • • 20147 2 • • 20144 1 • L 20085 2 • • 20144 1 • • 20085 2 • • 20073 2 • • 20310 11 • • 20309 3 • • 20306 6 • • 20359 3 • • 20354 6 • • 10410 2 • • 20140 2 • • 20141 1 • • 20141	17053	

Parts indented are included in the carton, bag or assembly under which they are indented.

Meyer Products reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligation.



## **GENERAL INFORMATION**

**CAUTION:** Always disconnect battery before beginning installation.

**DO NOT BURN** holes or **WELD** vehicle frame. This may cause frame failure.

After first use, retighten all mounting bolt connections to specified torque. All mounting bolt connections to be checked periodically for tightness.

Locknuts are furnished **DO NOT** tighten bolts and nuts until installation is complete (unless otherwise specified), then be sure to tighten all attaching parts per specified torque chart.


NOTE: It is important that the Meyer harness, all wires from the Meyer light switch, and all other electrical wires be routed around hot or moving engine parts, and any sharp metal. Protection must be provided to guard against wire damage at these points. All excess or loose wires must be neatly secured using wire ties.

Check contents against the parts list to determine all are correct and included, and also to familiarize yourself with them.

SAFETY PRECAUTIONS should be used when Hydraulic Unit is in OPERATION and plow is in a RAISED position. Lower plow to ground when vehicle is PARKED.

**OVERHAUL** and **SERVICE INFORMATION** are covered on separate instructions.

Follow these instructions explicitly. Warranty does not apply to a Meyer product which has been negligently or improperly assembled or installed.

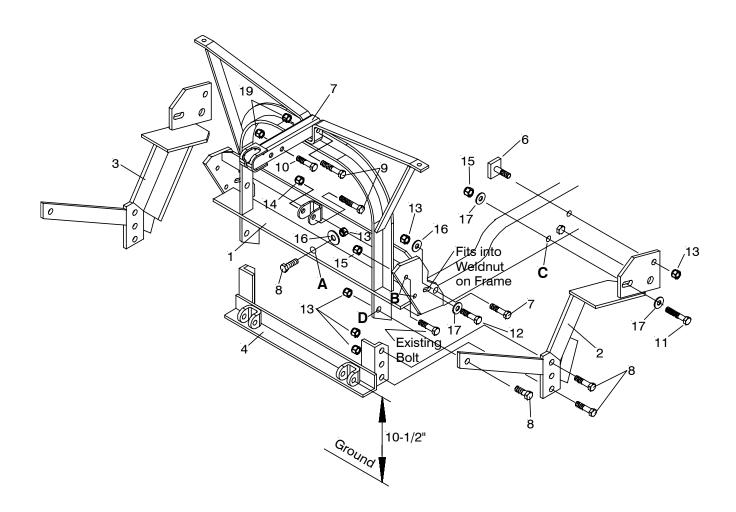

## INSTALLATION INSTRUCTIONS

- A. Remove front bumper and bumper brackets retaining original parts and fasteners.
- **B.** Install Lift Frame (1) to front of vehicle frame and secure at hole "A" with a 3/4 x 2 bolt (8), flat washer (16) and locknut (13). Bolt Lift Frame (1) to vehicle frame with 3/4 x 2 bolts (8), flat washers (16) and locknuts (13) and 7/16 x 1-1/2 bolts (12) flat washers (17) to weldments in frame.
- **NOTE:** On 6 cylinder models, remove existing bolts from vehicle frame and engine mount at holes "C".
- C. Position Side Members (2 & 3) to vehicle frame and secure to Lift Frame (1) at holes "D" with 3/4 x 2 bolts (8) and locknuts (13). Insert Special Bolts (6) from inside vehicle frame and secure with locknuts (13). Install 7/16 x 5 bolts (11) flatwashers (17) and locknuts (15) as shown.
- D. Bolt Clevis Frame (4) between Side Members (2 & 3) using the combination of holes to obtain a dimension of 10-1/2 as shown. Clevis Frame (4) to be parallel to the ground. Secure with 3/4 x 2-1/4 bolts (7) and locknuts (13).
- E. Attach Lift Arm (5) to Lift Frame (1) with 5/8 x 3-1/2 bolt (9) and locknut (14).
- F. Reinstall the bumper assembly by first bolting the bumper brackets to the Lift Frame (1) at holes "B" using original bolts and provided locknuts (15). Fasten the bumper to the brackets using the original fasteners.
- G. Pre-assemble Moldboard Assembly, A-Frame (18), Sector, etc. per separate instructions.
- H. Connect the A-Frame (18) to the Clevis Frame (4) using Hinge Pins (19) and Spring Clips (20).
- Hook the A-Frame chain to the Lift Arm (5) allowing sufficient slack to enable the Moldboard to follow ground contour while plowing.

## TORQUE CHART FOOT LBS.

Bolt Nut Size	Gr. O	Gr. 5	Gr.	
1/4 - 20	4-5			
5/16 - 18	9-11			
3/8 - 16	17 - 20	26 - 29		
7/16 - 14		42 - 46	60 - 66	
1/2 -13		64 - 72	90 - 100	
5/8 - 11		127 - 141	179 - 198	
3/4 - 10		227 - 251		

Meyer Products assumes no responsibility for installations not made in accordance with these instructions.