

# 31553

## MOUNT KIT PERSONAL PLOW

GM K1500 All New Silverado/Sierra	2007 -	___
GM Tahoe/Yukon	2007 -	___
GM 1500 Suburban/Yukon XL	2007 -	___

### Installation Instructions

**⚠ CAUTION**

Read this document before installing the snowplow.

**⚠ CAUTION**

See your sales outlet for specific vehicle application recommendations before installation. The Kit Selection Guide/Selection List has specific vehicle and snowplow requirements.

## SAFETY DEFINITIONS

### WARNING

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious personal injury.

### CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**NOTE:** Indicates a situation or action that can lead to damage to your snowplow and vehicle or other property. Other useful information can also be described.

## SAFETY PRECAUTIONS

Improper installation and operation could cause personal injury and/or equipment and property damage. Read and understand labels and the *Owner's Manual* before installing, operating, or making adjustments.

### WARNING

Lower blade when vehicle is parked. Temperature changes could change hydraulic pressure, causing the blade to drop unexpectedly or damaging hydraulic components. Failure to do this can result in serious personal injury.

### WARNING

The driver shall keep bystanders clear of the blade when it is being raised, lowered, or angled. Do not stand between the vehicle and the blade or within 8 feet of a moving blade. A moving or falling blade could cause personal injury.

### WARNING

Keep hands and feet clear of the blade and A-frame when mounting or removing the snowplow. Moving or falling assemblies could cause personal injury.

### WARNING

Do not exceed GVWR or GAWR including blade and ballast. The rating label is found on driver-side vehicle door cornerpost.

### WARNING

Remove blade assembly before placing vehicle on hoist.

### CAUTION

Refer to the Kit Selection Guide/Selection List for minimum vehicle recommendations and ballast requirements.

**⚠ CAUTION**

To prevent accidental movement of the blade, always turn the ON/OFF switch to OFF whenever the snowplow is not in use. The control indicator light will turn off.

**PERSONAL SAFETY**

- Remove ignition key and put the vehicle in park or in gear to prevent others from starting the vehicle during installation or service.
- Wear only snug-fitting clothing while working on your vehicle or snowplow.
- Do not wear jewelry or a necktie, and secure long hair.
- Wear safety goggles to protect your eyes from battery acid, gasoline, dirt, and dust.
- Avoid touching hot surfaces such as the engine, radiator, hoses, and exhaust pipes.
- Always have a fire extinguisher rated BC handy, for flammable liquids and electrical fires.

**FIRE AND EXPLOSION****⚠ WARNING**

Gasoline is highly flammable and gasoline vapor is explosive. Never smoke while working on a vehicle. Keep all open flames away from gasoline tanks and lines. Wipe up any spilled gasoline immediately.




Be careful when using gasoline. Do not use gasoline to clean parts. Store only in approved containers away from sources of heat or flame.

**VENTILATION****⚠ WARNING**

Vehicle exhaust contains lethal fumes. Breathing these fumes, even in low concentrations, can cause death. Never operate a vehicle in an enclosed area without venting exhaust to the outside.

**TORQUE CHART****⚠ CAUTION**

Read instructions before assembling. Fasteners should be finger tight until instructed to tighten according to the torque chart. Use standard methods and practices when attaching snowplow including proper personal protective safety equipment.

<b>Recommended Fastener Torque Chart (Ft.-Lb.)</b>			
Size	 SAE Grade 2	 SAE Grade 5	 SAE Grade 8
1/4-20	6	9	13
5/16-18	11	18	28
3/8-16	19	31	46
3/8-24	24	46	68
7/16-14	30	50	75
1/2-13	45	75	115
9/16-12	66	110	165
5/8-11	93	150	225
3/4-10	150	250	370
7/8-9	150	378	591
1-8	220	583	893
<b>Metric Grade 8.8 (Ft.-Lb.)</b>			
Size	Torque	Size	Torque
M 6	7	M 12	60
M 8	17	M 14	95
M 10	35	M 16	155
These torque values apply to fasteners except those noted in the instruction.			

## INSTALLATION INSTRUCTIONS

**NOTE:** For easier assembly and installation, vehicle and all snowplow components should be on a smooth, level, hard surface, such as concrete.

1. Remove the bumper. Retain fasteners.
2. Remove the splash shield. Retain fasteners.
3. On the passenger side of the vehicle, remove the front tow hook locknut. Align the front hole in the passenger-side mount plate with the front tow hook cap screw, then reinstall the tow hook locknut to attach the mount plate to the truck frame.




4. Rotate the passenger-side mount plate back, and push it tight up against the bottom of the frame. Clamp the mount plate in place against the frame.




### **⚠ CAUTION**

Use caution not to pinch, cut or drill through any wires or hoses running along the frame rails.

5. Using the holes in the passenger-side mount plate as guides, drill three 17/32" holes into the frame.

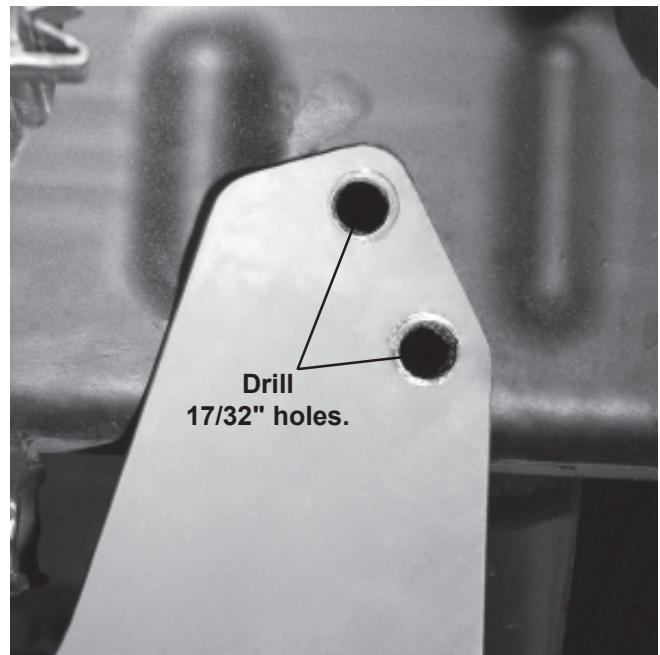

6. Insert two 1/2" x 1-1/4" cap screws with handles and 1/2" flat washers into the inside of the truck frame and out through the rear drilled holes. Attach a 1/2" locknut to each cap screw, and hand tighten.
7. Completely remove the passenger-side tow hook. Retain fasteners.
8. Insert one 1/2" x 1-1/4" cap screw and 1/2" flat washer into the front of the truck frame and out through the rear hole in the front arm of the mount plate. Attach a 1/2" locknut, and hand tighten.
9. Reinstall the passenger-side tow hook using the original fasteners. Remove the clamp from the mount plate.
10. On the driver side of the vehicle, completely remove the tow hook. Retain fasteners.
11. Align the front holes in the driver-side mount plate with the tow hook holes in the truck frame. Reinstall the tow hook fasteners, attaching both the tow hook and the driver-side mount plate to the truck frame.
12. Make sure the driver-side mount plate is tight up against the bottom of the frame. Clamp the mount plate in place against the frame if necessary.
13. Using the holes in the driver-side mount plate as guides, drill two 17/32" holes into the frame.
14. Insert two 1/2" x 1-1/4" cap screws with handles and 1/2" flat washers into the inside of the truck frame and out through the rear drilled holes. Attach a 1/2" locknut to each cap screw, and hand tighten. Remove the clamp from the mount plate, if applicable.
15. Align four holes on each side of the pushbeam with the holes in the mount plates. Choose the set of holes that will bring the pushbeam closest to the dimension shown in the following illustration.

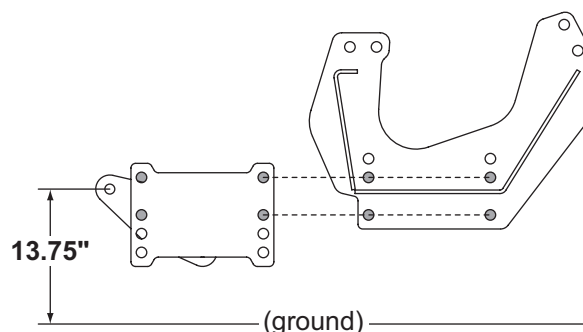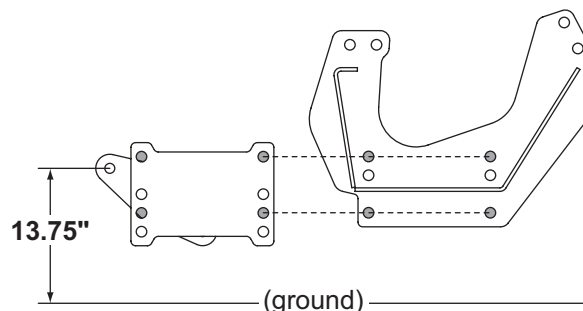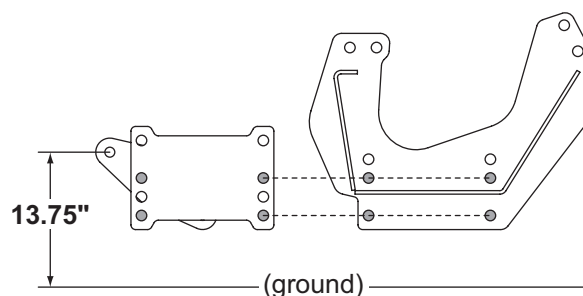

16. Attach the pushbeam to the mount plates using eight 1/2" x 1-1/4" cap screws. Place a 1/2" locknut on each cap screw, and fully tighten according to the torque chart.
17. Push the mount plates tight up against the truck frame, then fully tighten the fasteners securing the mount plates and tow hooks to the frame rails according to the torque chart.
18. Reattach the splash shield using the original fasteners.
19. If the air dam does not clear the pushbeam, remove or notch the air dam as needed.
20. Reattach the bumper using the original fasteners.

**NOTE: After five to ten hours of snowplow usage, retorque all mount assembly fasteners.**

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

**Printed in U.S.A.**

---