


COMMON BELT DRIVE HYDRAULICS with CABLE VALVE PULLAWAY MOUNTING

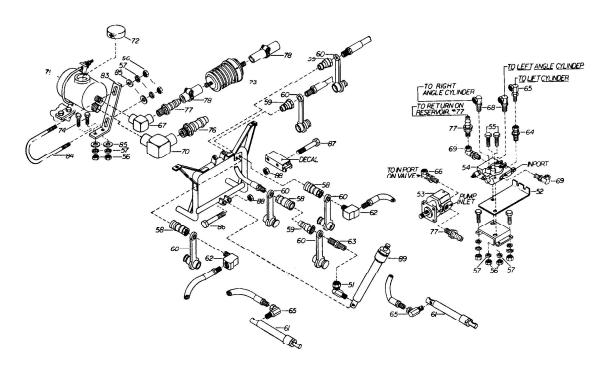

PARTS LIST

ITEM		STOCK	DESCRIPTION	QTY.	ITEM		STOCK	DESCRIPTION	QTY.	
51	*	8752203 004 004	1/4"NPT 45DEG SWIVEL ELB.	1	69	*	8752207 006 006	9/16"0" X 3/8"F SWIVEL ELB.	2	
52		817000 017	VALVE CABLE MOUNT	1	70	*	8754102 008 008	1/2"NPT 90DEG F TO F ELB.	1	
53		816000 164	PUMP	1	71		816000 248	RESERVOIR	1	
54		816000 175	VALVE ASSEMBLY	1	72		816000 176	CAP	1	
55	*	8500003 073	1/4"-20 X 2" NC CAPSCREW	2	73		816000 255	FILTER, INLINE	1	
56	*	20524	1/4"-20 NC NUT	10	74	*	8500003 033	1/4"-20 X 1" CAPSCREW	4	
57	*	20325	1/4" LOCKWASHER	10	76	*	8752501 008 010	1/2"NPT QUILL (5/8" HOSE)	2	
	*	N/A	** DISCONNECT COUPLER	3	77	*	8752501 006 006	3/8"NPT QUILL (3/8" HOSE)	2	
59	*	N/A	** DISCONNECT INSERT	3	78	*	816000 256	CLAMP (FILTER)	2	
60	*	817000 026	DUST PLUG & CAP	6	83		816000 253	RESERVOIR BRACKET	2	
61		817000 020	10" STROKE SA.CYLINDER	2	84		816000 254	RESERVOIR "U" BOLT	2	
62	*	8752515 004 004	1/4" BRASS BAR ST. ELB.	2	85	*	20351	1/4" FLATWASHER	6	
63	*	8752101 004 004	1/4" HEX CLOSE NIPPLE	1	86	*	20146	5/8"-11 X 3-1/4" CAPSCREW	1	
64	*	8752206 006 004	9/16"0" X 1/4" NPT (F) STR SW	1	87	*	20151	5/8"-11 X 4-3/4" CAPSCREW	1	
65	*	8752202 004 004	1/4"NPT 90 DEG SWIVEL ELB.	3	88	*	20309	5/8" LOCKNUT	2	
66	*	8752202 006 006	3/8"NPT 90 DEG SWIVEL ELB.	1	89		817000 116	8" STROKE LIFT CYLINDER	1	
67	*	8754102 006 006	3/8"NPT 90 DEG F TO F ELB.	1			812000 022	DECAL (LIFT ARM)	1	
68	*	8752201 006 004	9/16"0" X 1/4"F SWIVEL ELB.	2			816000 009	OWNER'S MANUAL	1	
							82006	LIGHT SWITCH BRKT. KIT	1	

^{*} INCLUDED IN 80073 HARDWARE BAG

Parts indented are included in the assembly under which they are indented.

Diamond Equipment reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without inncurring any obligation.



^{**} AVAILABLE IN COMPLETE SETS ONLY #15741

COMMON BELT DRIVE HYDRAULICS (W/CABLE VALVE) FOR STRAIGHT TRIPEDGE PLOWS (Pull Away Mountings)

81600 MAY 31, 1995

COMMON HYDRAULIC SUPPLEMENTAL INSTRUCTIONS

- 1. Disregard the engine kit instructions concerning mounting the external oil reservoir and attaching and routing the related hoses.
- 2. After the valve assembly (54) has been installed, select a clear area on either the driver's or passenger's side fender well to mount the oil reservoir (71) onto. Vehicle wiring, hoses, accessories, etc. may have to be moved or rearranged slightly to accommodate the oil reservoir assembly.

CAUTION: The oil reservoir assembly (71) should always be mounted level with or higher than the pump (53). Failure to do so can result in oil starvation and severe damage to pump (53).

- 3. The oil reservoir (71) can be mounted directly to flat horizontal or vertical surfaces by drilling four 9/32" DIA. holes in surface and attaching using two 1/4" "U" bolts (84) with 1/4" flatwashers (85), 1/4" lockwashers (57) and 1/4"-20 nuts (56) on back side. It can also be mounted to the two reservoir brackets (83) using the 1/4" "U" bolts (84), 1/4" flatwashers (85) 1/4" lockwashers (57), and 1/4"-20 nuts (56). Then the oil reservoir and bracket assembly can be mounted by drilling four 9/32" DIA. holes in surface and fastened using four 1/4"-20 X 1" capscrews (74), with 1/4" flatwashers (85), 1/4" lockwashers (57), and 1/4"-20 nuts (56) on back side. If necessary, the reservoir brackets (83) can be reshaped to accommodate uneven or irregular surfaces.
- 4. Install a 3/8" NPT. X 90 DEG. female to female elbow (67) onto the return nipple of oil reservoir (71). Install a 3/8" Pushloc quill (77) into the elbow (67). Install the 3/8" low pressure hose (from the particular hydraulic kit) onto the Pushloc quill (77) and route hose to the valve assembly (54). Install 1/2" NPT. X 90 DEG. female to female elbow (70) onto the suction nipple on oil reservoir (71). Install a 1/2" NPT. Pushloc quill (76) into the elbow (70). Install the 5/8" low pressure hose (from the particular hydraulic kit) onto the Pushloc quill (76) and route hose to the pump assembly (53).

Install a 3/8" Pushloc quill (77) into the swivel elbow in the "out" port of valve. Push the free end of 3/8" low pressure onto the 3/8" Pushloc quill (77). Install a 1/2" NPT. Pushloc quill (76) into the suction port on side of pump (53). Push the free end of 5/8" low pressure hose onto the Pushloc quill (76).

CAUTION: Route all hoses away from heat sources and moving parts. Tie or tape all hoses in place. Failure to do so could cause an engine fire.



COMMON BELT DRIVE HYDRAULICS (W/CABLE VALVE) FOR STRAIGHT TRIPEDGE PLOWS (Pull Away Mountings)

81600 MAY 31, 1995

- 5. Install swivel elbows (65) into the ports of angle cylinders (61). Install a 1/4" NPT. X 45 DEG. swivel elbow (51) into the port of the lift cylinder (89). Install a 1/4" NPT. close nipple (63) into the swivel elbow (51). Install a dust plug & cap (60) and male disconnect half (59) onto the close nipple (63). Attach one end of the longest 1/4" high pressure hose to the swivel elbow in the lift cylinder port of valve (54). Route the other end out through radiator web and grill to the lift cylinder. Install a dust plug and cap (60) and a female disconnect half (58) onto free end of the hose. Connect the female disconnect half (58) to the male disconnect half (59) in the lift cylinder. Attach the ends of the two mid-length 1/4" hoses to the swivel elbows in the angle cylinder ports of valve. Route the other ends out through radiator web and grill to the hose plate on vertical frame. Install a dust plug & cap (60) and a male disconnect half (59) onto the end of each hose. Place the male disconnect half on the hose from the valve angle cylinder port (closest to the cable clevises) through the driver's side hole in the hose plate on vertical frame (26). Place the male disconnect half on the hose from the other valve angle cylinder port through the passenger's side hole in the hose plate on vertical frame (26). Install a 1/4" brass bar street elbow (62), a dust plug & cap (60), and a female disconnect half (58) onto one end of the 1/4" high pressure hose 34" long. Attach the other end to the swivel elbow in the driver's angle cylinder. Install a 1/4" brass bar street elbow (62), a dust plug & cap (60) and a female disconnect half (58) onto one end of the 1/4" high pressure hose 40" long. Attach the other end to the swivel elbow in the passenger's side angle cylinder. Attach the female disconnect halves on the ends of the angle cylinder hoses to the corresponding male disconnect halves in the hose plate on vertical frame.
- 6. **INLINE OIL FILTER:** Locate the 3/8" low pressure hose running between the valve (54) and the reservoir (71). In a convenient location, cut the 3/8" low pressure hose with a knife. Place a hose clamp (78) loosely over each end of the cut 3/8" low pressure hose. Install the inline filter (73) between the two cut ends of the low pressure hose, being certain the FLOW ARROW on the Filter is pointing toward the hose end leading to the reservoir. Push the 3/8" hose ends on all the way to the 3/8" quill fittings on the filter. Secure the hose ends with the hose clamps (78).

NOTE: It is recommended 816000 255 Inline Filter be replace once a year.

NOTE: When plow/pushframe assembly is removed from vehicle, insert dust plug & caps (60) into the female disconnect halves (58) on the ends of the angle cylinder hoses. Place dust plugs & caps (60) onto the male disconnect halves (59) in the hose plate on the vertical frame.

NOTICE: Diamond Equipment or Meyer Products assume no responsibility for installations not made in accordance with these instructions.

Instructions are subject to change without notice.

