


Parts & Installation Instructions Model "Vector" 8.5

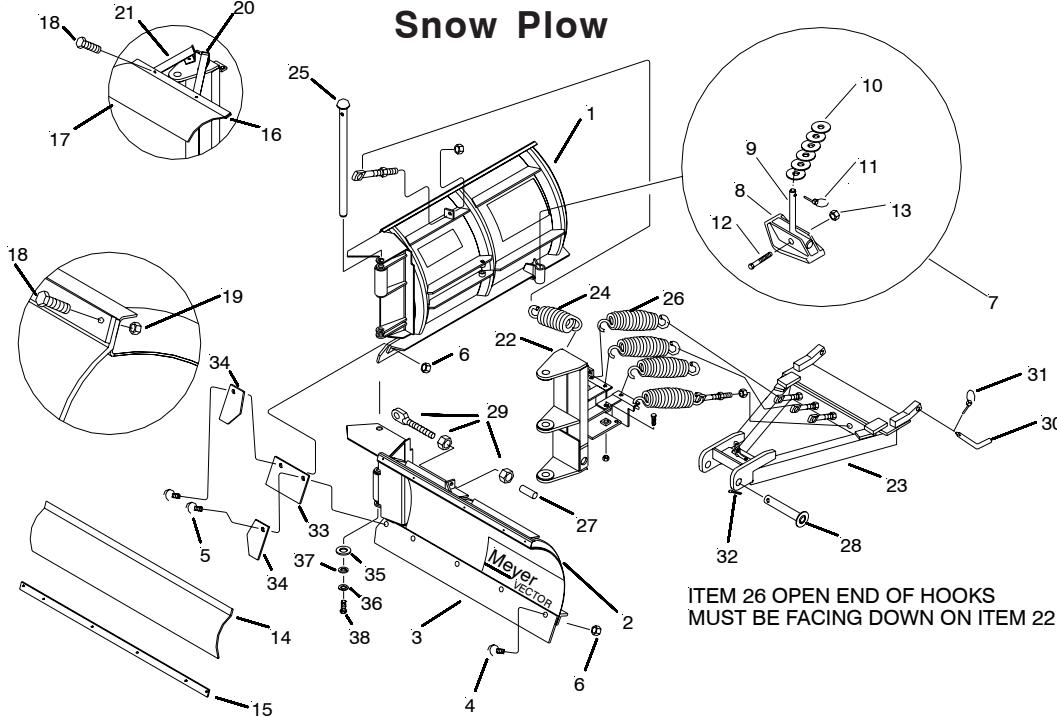

Parts List

Item	8.5	Qty.	Description	Item	8.5	Qty.	Description
1	09258	2	Moldboard R.H. & L.H. Wing	22	16506	1	A-Frame and Pivot Carton
	09254	1	• R.H. Wing	23	13625	1	• Pivot Assembly
2	09255	1	• L.H. Wing	24	13630	1	• A-Frame
3	09259	1	• Cutting Edge (2 sections)	25	07178	2	• Wing Spring
	08692	1	Hardware Bag	26	07069	1	• Hinge Pin
4	21961	8	• • Bolt C 1/2-13 x 2 Gr. 5	27	07216	4	• Trip Spring
5	22066	2	• • Bolt C 1/2-13 x 2-3/4 Gr. 5	28	11793	1	• Lift Arm
6	20307	10	• • Locknut 1/2-13	29	09916	1	• Plow Marker Kit
7	09126	2	Runner & Spindle Assembly	30	08687	1	Hardware Bag
8	07006	1	• • Runner	31	07031	6	• • Eye Bolt Cap
9	12057	1	• • Spindle	32	12396	1	• • Pivot Pin
10	20363	10	• • Flatwasher 1-1/4"	33	09124	6	• • Eye Bolt w/Locknut
11	22083	1	• • Linch Pin	34	11101	2	• • Hinge Pin
12	20101	1	• • Bolt H-1/2-13 x 3"	35	22083	2	• • Linch Pin
13	20307	1	• • Locknut 1/2-13	36	20421	1	• • Cotter Pin 1/4" x 2-1/4"
	12170	1	Snow Deflector KIT (OPTIONAL)	37	12198	1	• • V-Plow Center Edge
14	12189	2	• Deflector	38	12381	2	• • Center Plate
15	12191	2	• Bar	35	20357	1	• • 5/8 Flatwasher
16	12277	1	• Reinforcement Bar	36	20328	1	• • 7/16 Lockwasher
17	12285	1	• Center Deflector & Decal	37	20354	1	• • 7/16 Flatwasher
	08691	1	Hardware Bag	38	20072	1	• • Bolt H 7/16-14 x 1-1/4"
18	20006	18	• • Bolt H 1-1/4-20 x 1-1/4"		07996	1	• • Cable Tie
19	20312	18	• • Nut, Eslok 1/4-20				
20	12275	2	• • Angle				
21	12276	2	• • Deflector Extension				

Parts indented are included in the carton, bag or assembly under which they are indented.

When ordering parts, furnish Part No., Name, and Description. Also furnish Vehicle Model and Year, Type of Hydraulic Unit and Moldboard Size.

Meyer Products reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligation.

INSTALLATION INSTRUCTIONS

Note: The following instructions cover assembly of Moldboard Wings, Pivot Assembly and A-Frame. Refer to separate instructions for installation of plow mounting and hydraulic system.

- A. Assemble Pivot Assembly (22) to A-Frame (23) using Pivot Pin (28) and Cotter Pin (32). **Note: Liberally coat Pivot Pin with a chassis grease/anti-seize lubricant.**
- B. Assemble Eye Bolts W/Locknut (29) to Trip Springs (24&26). Install four Trip Springs (26) onto Pivot Assembly (22). (Open end of hooks must be facing down on pivot assembly.)
- C. Guide Eyebolts into A-Frame (23) Attach Eye Bolts (29) to A-Frame (23),
- D. Make certain each Eye Bolt (29) is in a vertical position as shown in figure 1 so that the Eye Bolt (29) and Trip Spring (26) hinge properly when moldboard trips.

Note: Proper tension is attained when Trip Spring (26) coils just begin to separate and then tightening top locknut four additional turns.
- E. **IMPORTANT : PIVOT ASSEMBLY MUST BE TIGHT AGAINST A-FRAME STOP.**
- F. Assemble L.H. & R.H. Wings to Pivot Assembly using Hinge Pin (25), Washer 5/8 (35), Lockwasher 7/16 (36), Washer 7/16 (37) and Bolt H 7/16-14 x 1-1/4" (38).
- G. Install Power Angling Rams per separate instructions.
- H. Install Wing return Springs (24) using Eyebolts (29) and adjust springs to proper tension.
- I. Discard lift arm in mounting carton (10514).

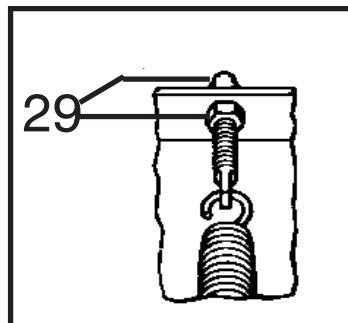


Figure 1

