

U-SET (User Settings) FEATURE

This feature allows the user to customize features on this control to their own preferences. Customizable features include:

* Soft Stop

* Quick Float

Disclaimer: Stork's Automotive, U.P. Controls & Universal Plow Controls are NOT responsible for any damage or injury caused by the use of these customizable features. By changing the settings on the control, you take on all of the liability.

Soft Stop

The standard configuration (out of the box) for this control includes Soft Stop. This feature provides smooth operation and reduces wear on the plows hydraulic system. At times, a plow operator may prefer the plow to have quicker and more precise movements. Follow the instructions below to toggle the Soft Stop feature OFF & ON.



WARNING

Turning OFF the Soft Stop feature could cause damage to your plows hydraulic system and may shorten the life of valves and hoses. Excessive banging may occur with certain manufacturer's plows. Turning OFF the Soft Stop feature is NOT recommended for Meyers/Diamond plows.

1. Turn the control to the OFF position.
2. PRESS and HOLD the "DOWN" button, then turn the control to the ON position. When the indicator light in the center of the keypad flashes BLUE, RELEASE the "DOWN" button.
(You are now in programing mode and the control will not operate the plow)
3. PRESS the "R" or "RIGHT" button once, the indicator light will turn to GREEN. PRESS the "R" or "RIGHT" button again, the indicator light will turn to RED. The indicator light will toggle between GREEN and RED every time you press the "R" or "RIGHT" button.

GREEN = Soft Stop - ON

RED = Soft Stop - OFF

4. Once the indicator light is set correctly (GREEN or RED), PRESS the "UP" button one time. The indicator light will flash BLUE and your chosen setting is now programed.
5. PRESS the "DOWN" button to exit programing mode. The keypad will glow GREEN and your control is ready to use. Test the control to ensure proper changes were made.

Quick Float

The standard configuration (out of the box) for this control does not include the Quick Float feature. This feature reduces operating time by dropping the plow immediately into FLOAT with one touch of the DOWN button. This eliminates the need to hold the DOWN button for the given time to engage FLOAT. Follow the instructions below to toggle the Quick Float feature ON & OFF.



WARNING

When Quick Float is turned ON, the plow will immediately drop into FLOAT with one touch of the DOWN button. When using Quick Float, it is recommended that you raise the plow and turn your control OFF (to avoid accidental activation of Float) when driving on the road.

1. Turn the control to the OFF position.
2. PRESS and HOLD the "DOWN" button, then turn the control to the ON position. When the indicator light in the center of the keypad flashes BLUE, RELEASE the "DOWN" button.
(You are now in programing mode and the control will not operate the plow)
3. PRESS the "L" or "LEFT" button once, the indicator light will turn to GREEN. PRESS the "L" or "LEFT" button again, the indicator light will turn to RED. The indicator light will toggle between GREEN and RED every time you press the "L" or "LEFT" button.

GREEN = Quick Float - OFF

RED = Quick Float - ON

4. Once the indicator light is set correctly (GREEN or RED), PRESS the "UP" button one time. The indicator light will flash BLUE and your chosen setting is now programed.
5. PRESS the "DOWN" button to exit programing mode. The keypad will glow GREEN and your control is ready to use. Test the control to ensure proper changes were made.