

# Cab Control Installation Instructions for Hopper Spreader

May 15, 1999  
Form No. 67535

**NOTE:** The cab control can be top or bottom mounted using the supplied mounting bracket or an existing plow control bracket as shown in Figure 1.

## ⚠ WARNING

Do not install this product in deployment path of an air bag. Refer to vehicle manufacturer's manual for air bag deployment area(s).

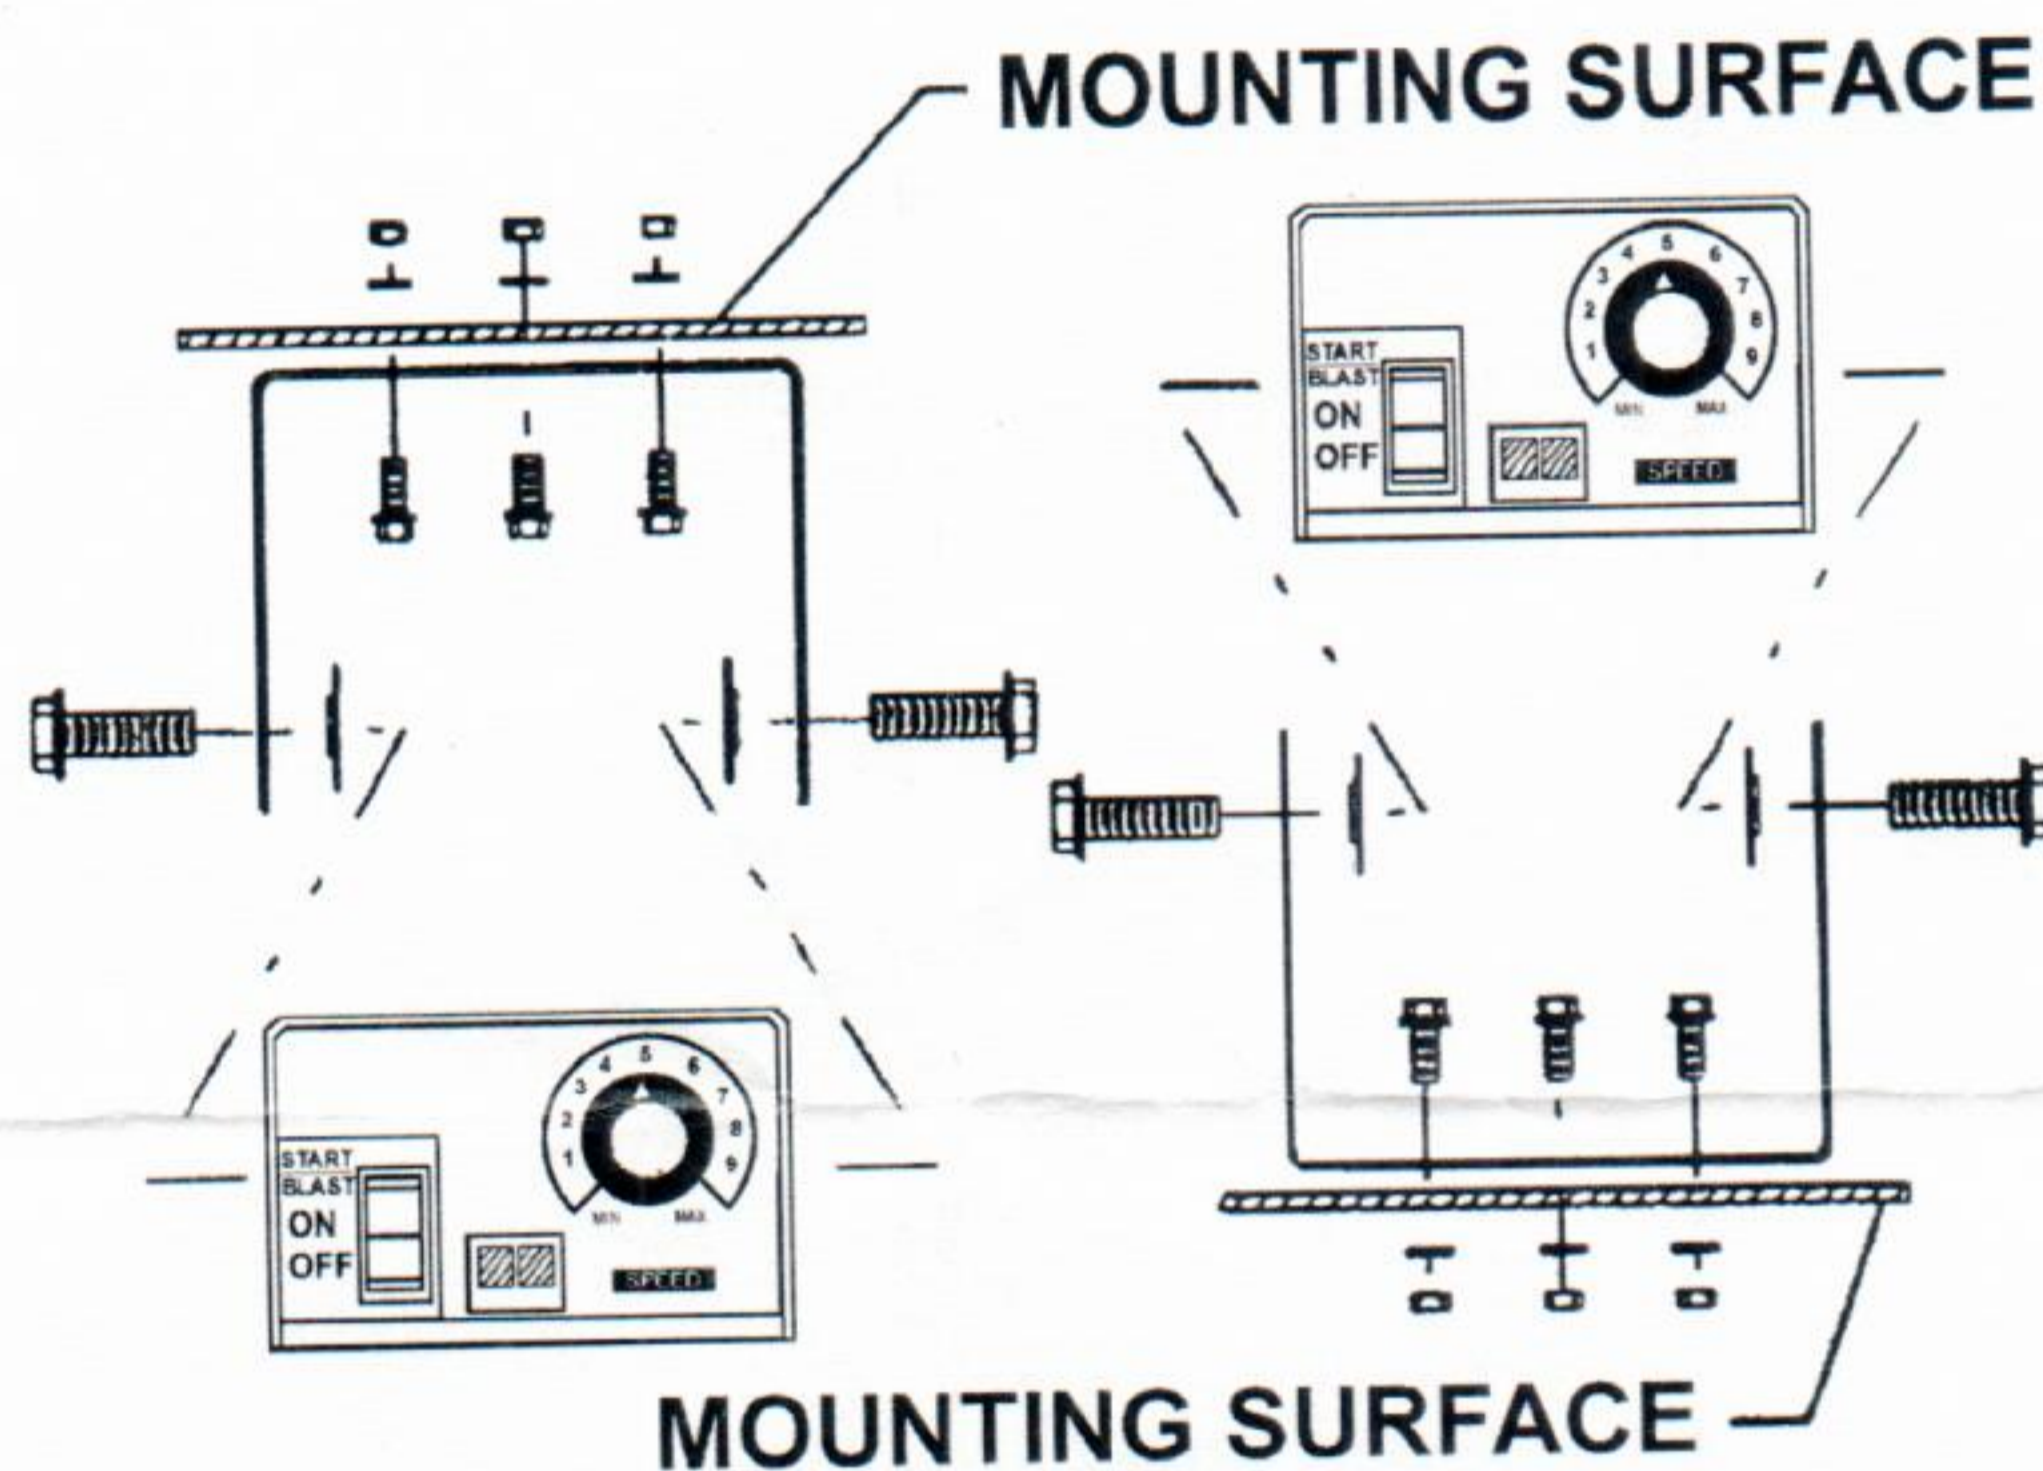


Figure 1

Copyright© 1999 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets is granted.

The company reserves the right under its Product Improvement Policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used herein. The company and the vehicle manufacturer may require and/or recommend optional equipment for ice control. The company offers a limited warranty on the spreaders and accessories. See separately printed page for this important information.