

HANDHELD CONTROL

1. Turn the vehicle ignition switch to the ON position.
2. Turn the ON/OFF switch on the control to the ON position. The control keypad will glow green, indicating the control is on.

NOTE: The ON/OFF switch can be used as an emergency stop when required.

3. To raise the plow, hold the UP key until the blade raises to the desired height. Hold the DOWN key to lower the plow (Float not available on this plow).


Blade Operation Time Outs

The LEFT & RIGHT functions will automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. The LEFT & RIGHT functions will time out after 8.0 seconds. The UP & DOWN functions do not time out.


Automatic Shutdown

After being idle for approx. 22 minutes, the control will automatically turn off and the indicator light located at the center of the keypad (logo) will blink from red to green. To restart the control, turn the control OFF (ON/OFF switch) and then back ON.

NOTE: No FLOAT function available on this plow.

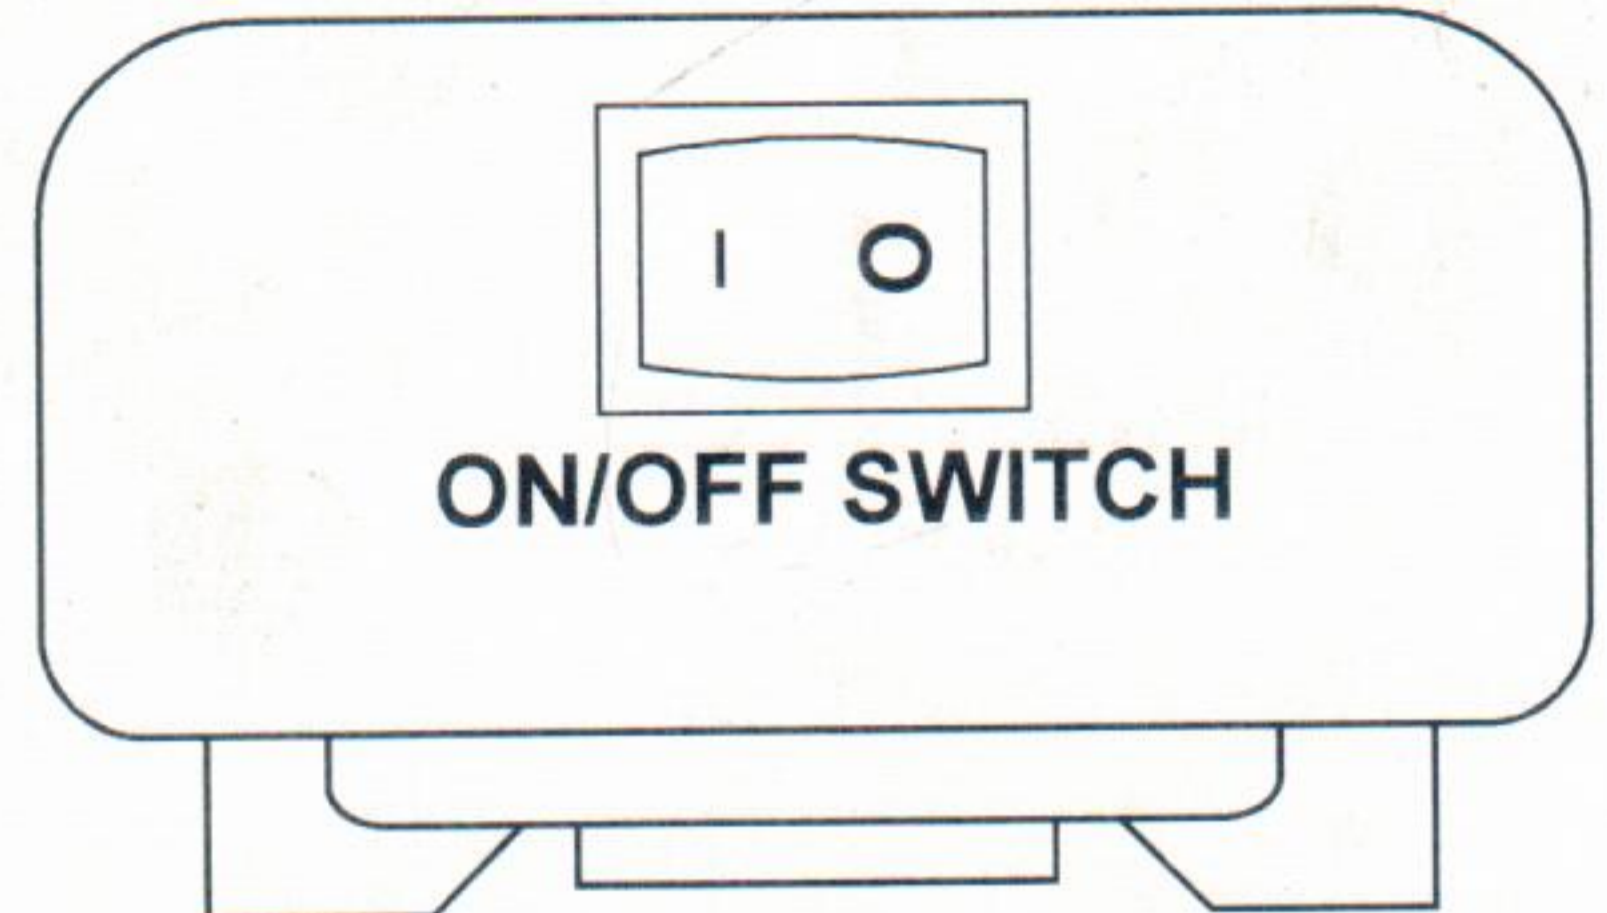

(LOCATED ON TOP OF HANDHELD CONTROL)

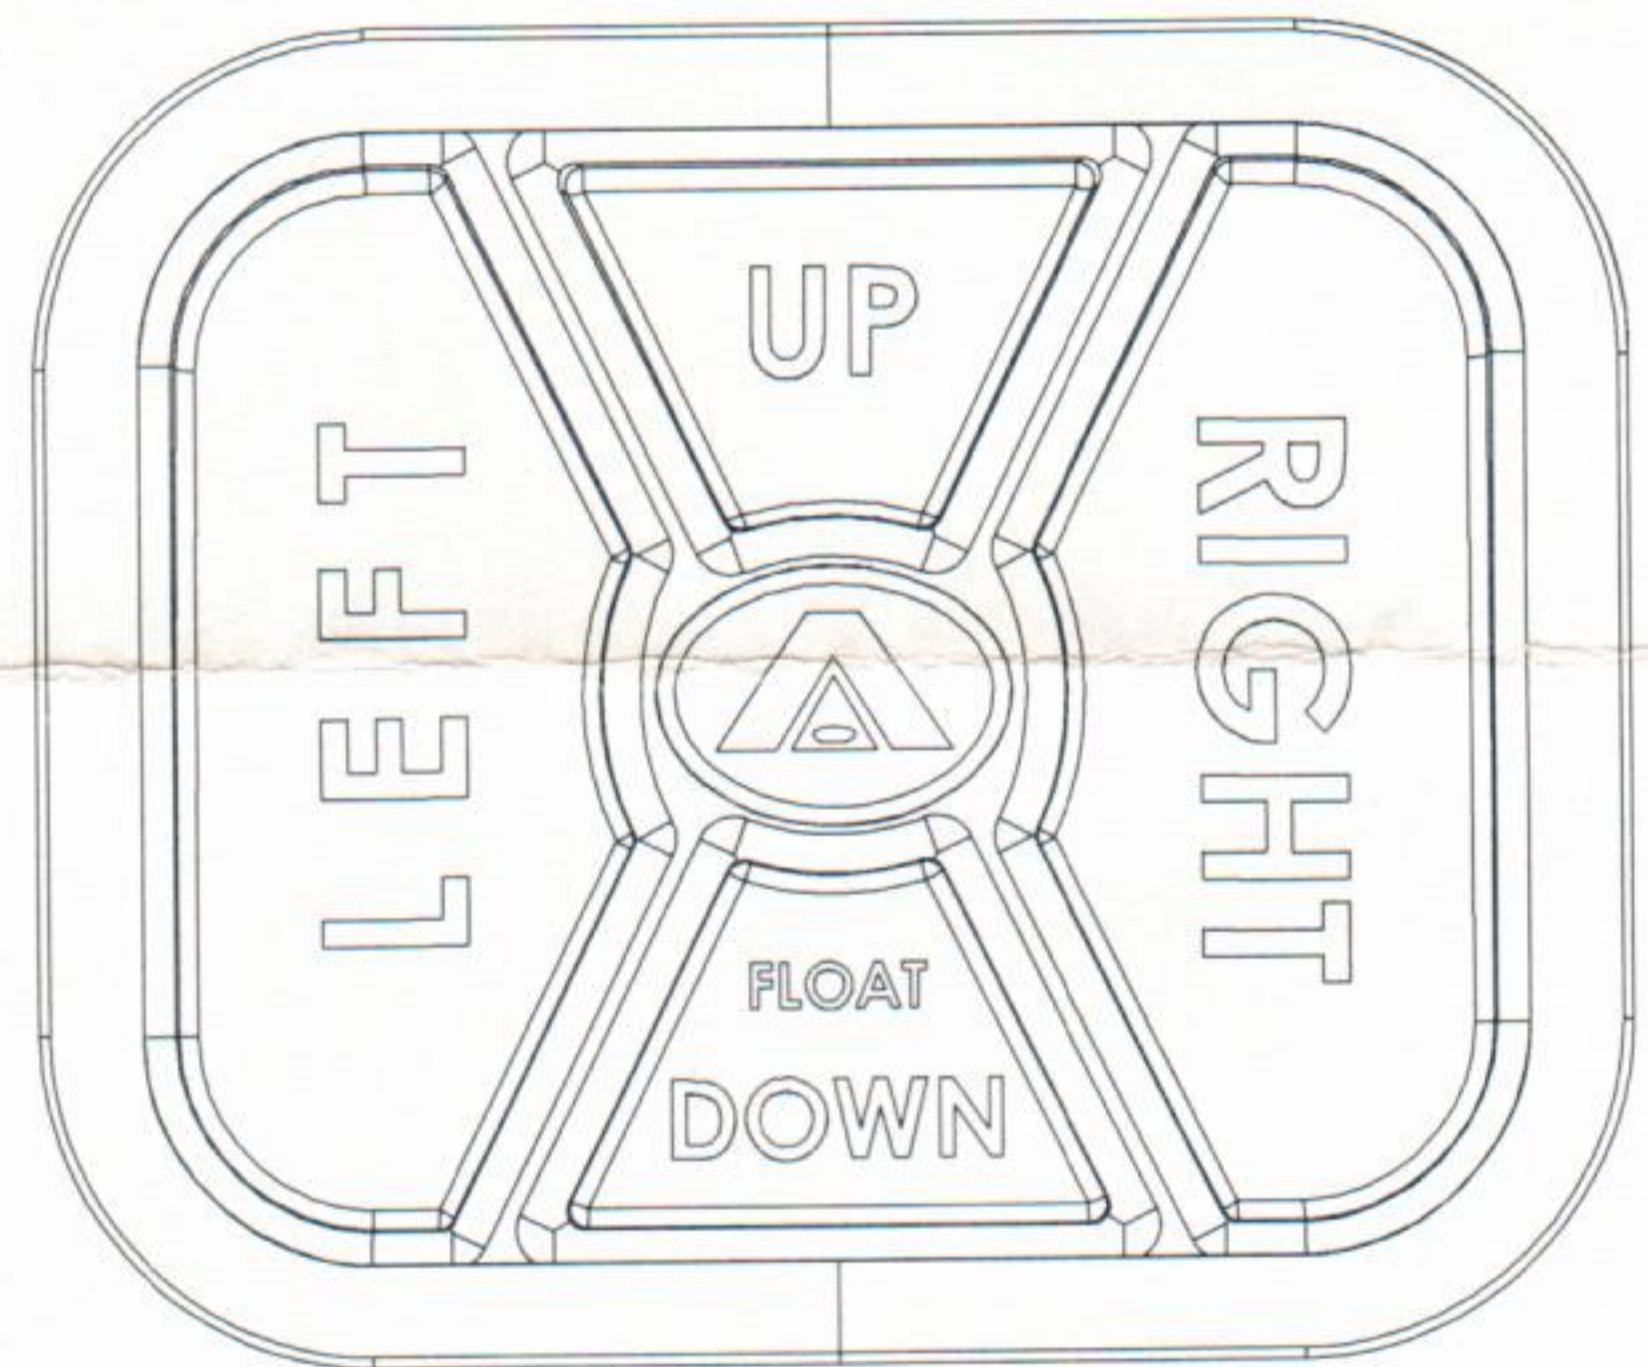

KEYPAD



WARNING

TO PREVENT
ACCIDENTAL ACTIVATION
OF PLOW, TURN PLOW
OFF WHEN NOT IN USE