

www.storksplovs.com  
**Adapter Instructions**

**Kit 28555**



Installation of this adapter is necessary for vehicles requiring snowplow daytime running lights (DRL's).

1. Connect the vehicle lighting harness and both of the plug-in harnesses according to the Isolation Module installation instructions.
2. Plug the 10-position female connector of the adapter into Position 1 on the Isolation Module.
3. Connect the 10-position female connector of the vehicle control harness to the 10-position male connector of the adapter.
4. Splice the black wire from the adapter relay terminal 85 to the park/turn lamp ground wire.
5. Splice the pink wire from the adapter relay terminal 87A to the pink wire from the short plug-in harness.
6. Insert the female terminal found on the brown wire from the adapter relay terminal 86 into cavity H of the 10-position connector of the long plug-in harness.

Removal of the following will be required: 10-position connector from the module, secondary connector lock, and cavity plug from cavity H. Reinstall the secondary connector lock and plug in the 10-position connector after the brown wire has been installed.

7. Cable tie relay and wiring as needed.

**NOTE: The relay attached to the adapter comes pre-installed. If it accidentally becomes detached, reconnect it according to the relay connection illustration.**

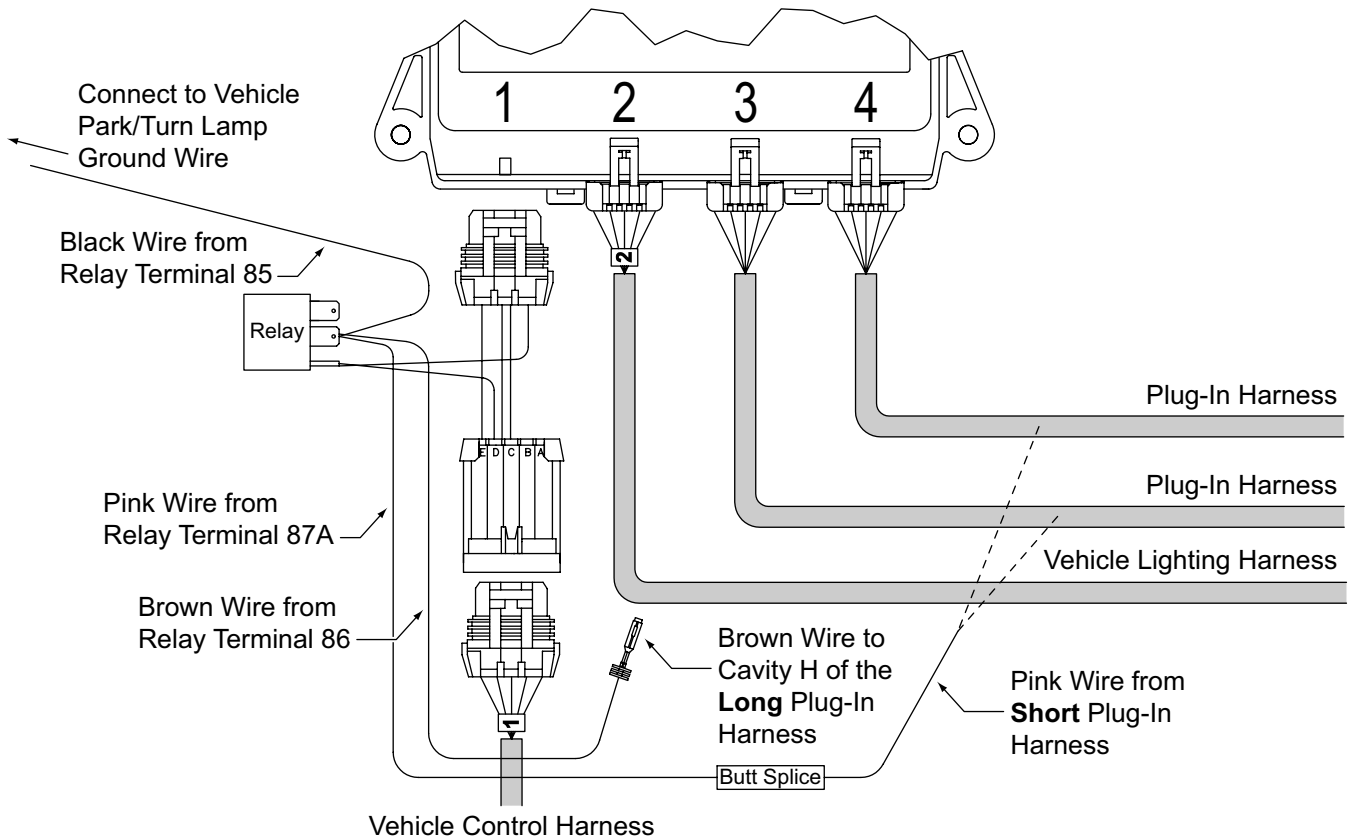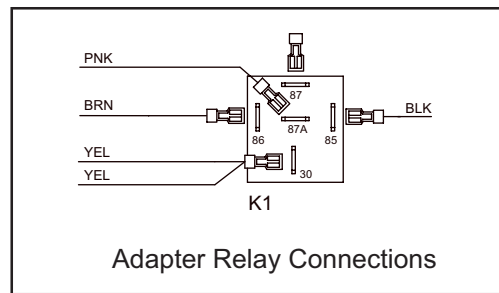

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows. See separately printed page for this important information.