



84400  
84455

TrynEx International, LLC, 531 Ajax Drive, Madison Heights, MI 48071-2429 • www.snowexproducts.com

April 1, 2015  
Lit. No. 52227, Rev. 00

# FLEETFLEX

 
ELECTRICAL SYSTEM

## POWER GRIP™ Hand-Held Control


### For the FLEET FLEX Electrical System

#### Installation Instructions

Straight Blade  
& SPEEDWING™  
Hand-Held Control

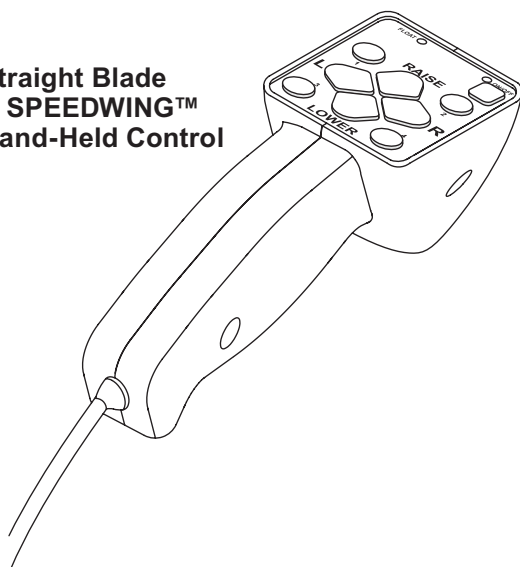

POWER PLOW™  
Hand-Held Control

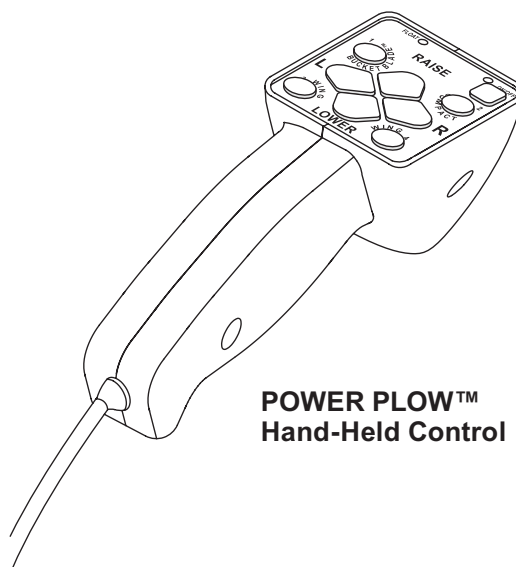 

**⚠ CAUTION**

Read this document before installing the control.

**⚠ CAUTION**

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

**⚠ CAUTION**

See your SnowEx® outlet/Web site for specific vehicle application recommendations before installation. The Power Match selection system has specific vehicle and snowplow requirements.

#### SAFETY DEFINITIONS

**⚠ WARNING**

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious personal injury.

**⚠ CAUTION**

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**NOTE:** Indicates a situation or action that can lead to damage to your snowplow and vehicle or other property. Other useful information can also be described.

## FUSES

The SnowEx® electrical and hydraulic systems contain several blade-style automotive fuses. If a problem should occur and fuse replacement is necessary, the replacement fuse must be of the same type and amperage rating as the original. Installing a fuse with a higher rating can damage the system and could start a fire. Fuse Replacement, including fuse ratings and locations, is located in the Maintenance section of the Owner's Manual.

---

**NOTE: The controls do not contain onboard fuses. Consult your snowplow Owner's Manual for fuse replacement. Fuses are located both under the hood and on the hydraulic unit.**

---

---

**NOTE: Circuit board may be damaged by static electricity. Always touch ground before handling PC board.**

---

## CONTROL BRACKET PLACEMENT

 
### ⚠ CAUTION

**Do not alter, modify, or install additional components in shaded areas of the illustration below. Failure to comply may interfere with air bag deployment or cause injury to operator in an accident.**

### ⚠ CAUTION

**Before drilling holes, check to be sure that no vehicle wiring or other components could be damaged.**

When mounting the control bracket, choose a location that is within easy reach of the vehicle operator and does not restrict access to vehicle controls or vehicle instrumentation. Do not mount the control in areas prohibited by the vehicle manufacturer for crashworthiness. See the vehicle's body builder's book, owner's manual, or service manual for details. The shaded areas in the illustration below show the most commonly restricted areas.

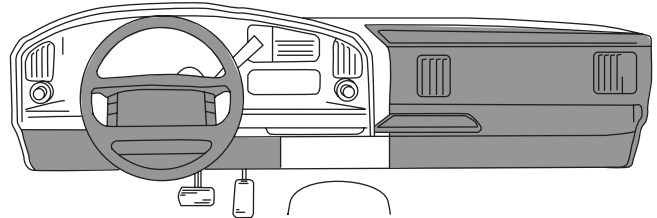

TrynEx International, LLC reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. TrynEx International, LLC or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. TrynEx International, LLC offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, LLC: POWER GRIP™, POWER PLOW™, SnowEx®, SPEEDWING™.

Printed in U.S.A.