

INSTRUCTION SHEET

FOR EFFECTIVE REPAIR, USE ALL PARTS IN KIT REGARDLESS OF ORIGINAL CONDITION


Ring and Pinion Replacement

Read instructions carefully before proceeding.

025377

This service kit applies to axles with Anti-Skid Brakes (ABS) and those without. The kit includes an ABS Sensor Ring (shown at right) which must be installed on all axles equipped with ABS.


When servicing the Ring and Pinion Assembly on axles without ABS, discard the Sensor Ring.

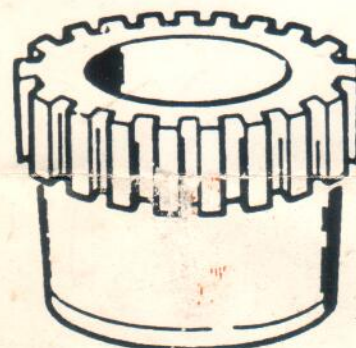

SENSOR RING


Service the Sensor Ring on ABS axles *only* as follows:

REMOVE

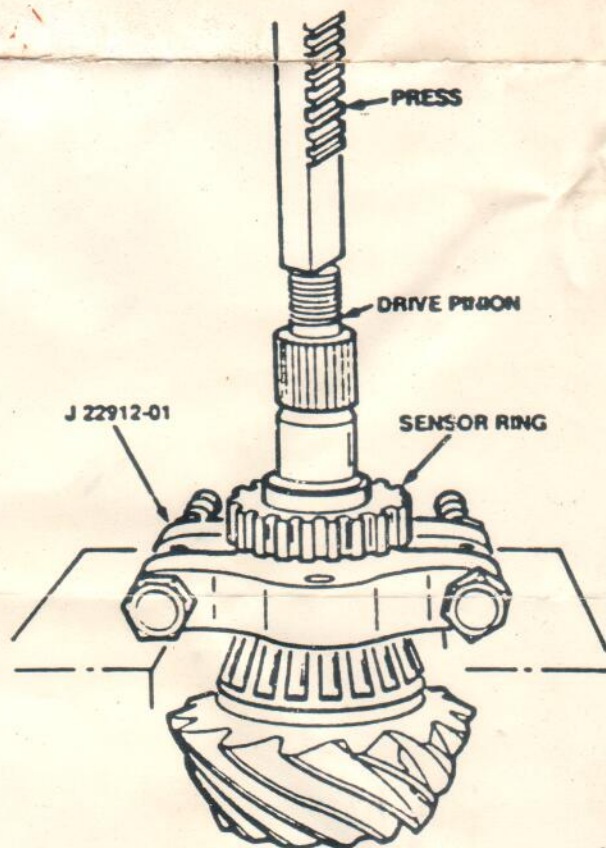

REMOVE WITH FLAT SIDE
OF J 22912-01 FACING
SENSOR RING

INSTALL

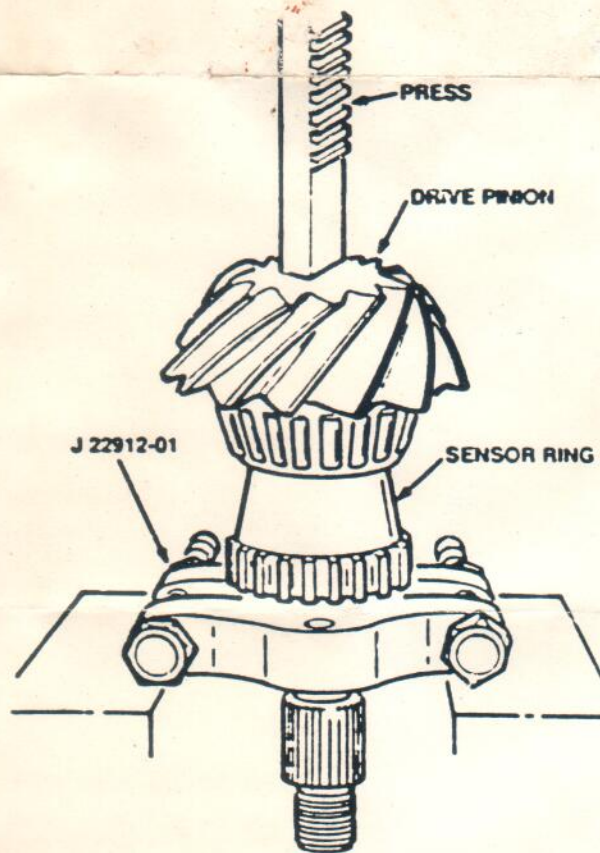

INSTALL WITH FLAT SIDE
OF J 22912-01 FACING
SENSOR RING

26025377