




Regular and High Capacity Hopper Spreaders Owner's Manual

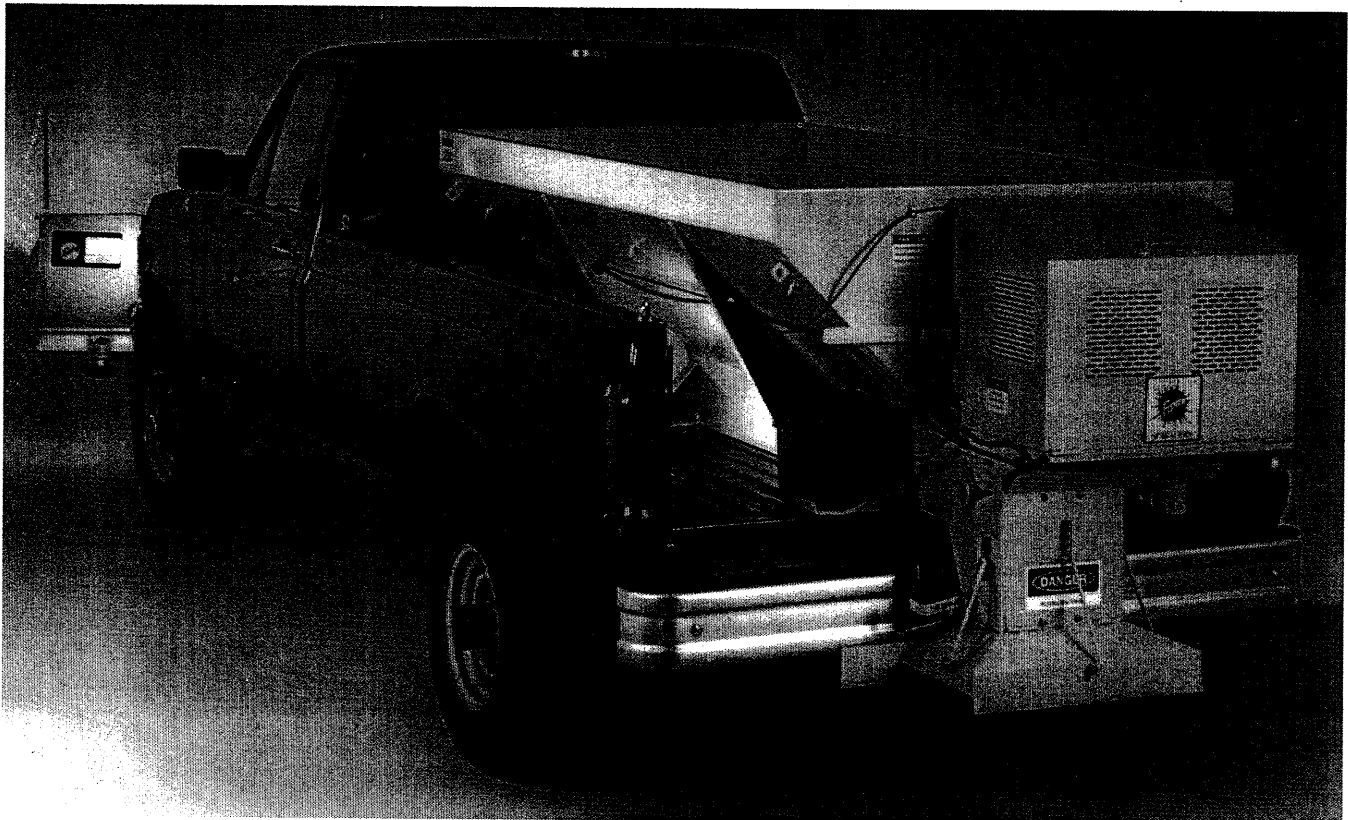

Read this document before operating the spreader.

This manual is for Fisher Regular and High Capacity Hopper Spreaders with serial numbers (3850 -).

TABLE OF CONTENTS

<p>PREFACE</p> <p>TABLE OF CONTENTS</p> <p>SAFETY 1</p> <p style="padding-left: 20px;">Safety Definitions 1</p> <p style="padding-left: 20px;">Safety Precautions 1</p> <p style="padding-left: 20px;">Battery Safety 1</p> <p style="padding-left: 20px;">Spreader Labels 2</p> <p>GENERAL INFORMATION 4</p> <p style="padding-left: 20px;">Torque Chart 4</p> <p style="padding-left: 20px;">Material Weights 4</p> <p style="padding-left: 20px;">Determining Vehicle Payload 5</p> <p>OPERATION 7</p> <p style="padding-left: 20px;">Cab Control Identification 7</p> <p style="padding-left: 20px;">Engine Operation 7</p> <p style="padding-left: 40px;">Starting the Engine 7</p> <p style="padding-left: 40px;">Stopping the Engine 7</p> <p style="padding-left: 20px;">Clutch Operation 8</p> <p style="padding-left: 20px;">Baffle Adjustment 8</p> <p>MAINTENANCE 10</p> <p style="padding-left: 20px;">General 10</p> <p style="padding-left: 20px;">Grease 10</p> <p style="padding-left: 20px;">Chains 10</p> <p style="padding-left: 20px;">Electric Clutch 11</p> <p style="padding-left: 20px;">Engine Service and Repair 11</p> <p style="padding-left: 20px;">Hydraulic Units 12</p> <p>ABBREVIATION KEY 12</p> <p>PARTS DIAGRAMS AND LISTS 13</p> <p style="padding-left: 20px;">Chute Assembly - Regular Capacity . . . 13</p> <p style="padding-left: 20px;">Chute Assembly - High Capacity 14</p> <p style="padding-left: 20px;">Conveyor Drive and Idler - Regular and High Capacity 15</p> <p style="padding-left: 20px;">Conveyor Drive - Hydraulic 17</p> <p style="padding-left: 20px;">Engine Drive with Clutch - Regular and High Capacity 19</p>	<p>Battery Kits 22</p> <p style="padding-left: 20px;">Vehicle Battery Kit 22</p> <p style="padding-left: 20px;">Spreader Battery Kit 22</p> <p>Gear Case 23</p> <p>Gear Case Assembly 24</p> <p style="padding-left: 20px;">Housing Pre-assembly 24</p> <p style="padding-left: 20px;">Cover Pre-assembly 24</p> <p style="padding-left: 20px;">Output Shaft Pre-assembly 24</p> <p style="padding-left: 20px;">Input Shaft Pre-assembly 24</p> <p style="padding-left: 20px;">Assembly of Pre-assembled Parts . . . 24</p> <p>Gear Case Disassembly 25</p> <p>Feed Gate - Regular Capacity 25</p> <p>Feed Gate - High Capacity 26</p> <p>Labels - Regular and High Capacity . . . 26</p> <p>Cab Control 27</p> <p>Clamp Loops 27</p> <p>Vehicle Harness 28</p> <p>Spreader Harness 28</p> <p style="padding-left: 20px;">Plug Cover 28</p> <p style="padding-left: 20px;">Hook 28</p> <p>Electric Throttle 29</p> <p style="padding-left: 20px;">Removal Instructions 29</p> <p style="padding-left: 20px;">Installation Instructions 29</p> <p>ACCESSORIES 30</p> <p style="padding-left: 20px;">Center High-Mounted Stoplight (CHMSL) Kit 30</p> <p style="padding-left: 40px;">Installation Instructions 30</p> <p style="padding-left: 20px;">Inverted Vee Assembly - Regular Capacity Mild Steel 31</p> <p style="padding-left: 40px;">Installation Instructions 31</p> <p style="padding-left: 20px;">Inverted Vee Assembly - Regular Capacity Stainless Steel 32</p> <p style="padding-left: 40px;">Installation Instructions 32</p> <p style="padding-left: 20px;">Inverted Vee Assembly - High Capacity 33</p> <p style="padding-left: 40px;">Installation Instructions 33</p>
--	---

PREFACE

Welcome to the growing family of FISHER® spreader owners.

This manual provides safety, operation, maintenance, repair parts, and accessories information for your new FISHER spreader. To keep your spreader operating safely and efficiently, insist that all operators and maintenance personnel read and understand this manual.

When service is necessary, your local Fisher dealer/distributor knows your spreader best and is interested in your complete satisfaction. Contact your dealer or distributor if you require assistance.

Always obtain original Fisher service parts from your Fisher dealer/distributor. Never accept any

substitute items as they could affect the performance and warranty of this product.

Before using your FISHER spreader, make sure your vehicle is equipped with all vehicle manufacturer's and Fisher's recommended options for spreading. Read this manual and all spreader labels before using the spreader.

<p>CAUTION: This spreader is designed to spread snow and ice control materials only. Do not use the spreader for purposes other than those specified in this manual.</p>

Before using your spreader, read this manual carefully and follow its recommendations.

SAFETY

Safety Definitions



WARNING: The symbol at left identifies a **SAFETY WARNING** that indicates a potentially hazardous situation that, if not avoided, could result in death or serious personal injury.

CAUTION: Indicates a situation that, if not avoided, could result in damage to product or property.

NOTE: Identifies tips, helpful hints, and maintenance information the reader should know.

Safety Precautions

Observe the following safety procedures before and during the use of the spreader. By following these rules and applying common sense, possible injury and potential damage to the product may be avoided.



WARNING: Do not exceed the GVWR or GAWR as found on the driver-side door cornerpost of the vehicle. See page 5 to calculate the physical payload capacity of your vehicle.



WARNING:

- Before working with the spreader, secure all loose fitting clothing and unrestrained hair.
- Before starting the spreader, check that all personnel and equipment are clear of the spreader and the spray area.
- Before operating the spreader, check that all safety guards are in place.

- Stop the spreader before leaving the vehicle to unclog, adjust, oil, or clean the spreader
- Before servicing the spreader, wait for all movement to stop.
- Keep hands, feet, and clothing away from power-driven parts and the conveyor chain.
- Do not climb on or allow others to climb on the spreader at any time while operating.
- While operating the spreader, use auxiliary warning lights except when prohibited by law.

CAUTION:

- Do not operate a spreader in need of maintenance.
- Before operating the spreader, reassemble any parts or hardware that were removed.
- Before operating the spreader, remove materials such as cleaning rags, brushes, and hand tools from the spreader.

Battery Safety




WARNING: Follow these warnings to avoid personal injury and damage to the equipment.

- Avoid exposing battery to a spark or flame.
- Always charge battery in a well ventilated area.
- Avoid contact with battery acid. It can cause serious personal injury and damage to the equipment.
- Always disconnect battery before removing or replacing any electrical components.
- Never lay anything on a battery. This could result in electrical shock or burns, or damage to the vehicle or equipment.

SAFETY


Spreader Labels

The diagram below indicates the location of the safety and identification labels. The numbers in the diagram correspond to the numbers listed below.

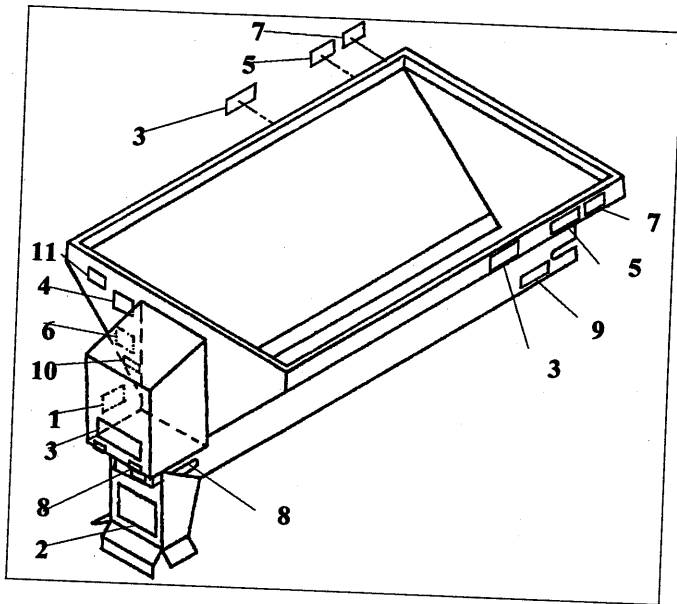

WARNING: Gasoline is flammable.
Turn off engine and allow it to cool before filling gas tank.
DO NOT smoke or use open flame within 25 feet of spreader.
Allow spilled gas to evaporate completely before starting engine.
Gasoline engine produces poisonous gases. DO NOT operate in an enclosed area.
Gasoline engine has hot and moving parts that can cause injury.
Use care when working with or near the gasoline engine and its parts.
Shut off engine when not in use, even for short periods of time, to avoid damage to equipment or property.

PN 9131



WARNING: Rotating spinner and moving conveyor can cause injury.
Turn off spreader and wait for spinner and conveyor to stop before making any adjustments.
Keep hands, feet, and loose clothing away from spinner and conveyor.
Wear eye protection.
Stay minimum 25 feet away while spinner is rotating.

PN 20599

3

FISHER® Decal 4-1/4 X 15
(PN 20724)



WARNING: Improper installation and operation can cause injury, and/or equipment and property damage. Read and understand labels and *Owner's Manual* before installing, operating, or making adjustments to spreader. If a replacement manual is needed, contact your distributor.

PN 20598



WARNING: Overloaded vehicles can cause accidents. Do not exceed GVWR and GAWR ratings. See *Owner's Manual* to determine maximum volumes of spreading material.

PN 9133

6

Serial Number Label (No P.N.)



WARNING: Do not ride on any part of spreader at any time. This can cause injury.

PN 9129

SAFETY

8



WARNING: Moving parts can cause injury.

Always turn spreader off and wait for movement to stop before refilling hopper or making adjustments.

Keep all guards and labels in place.

PN 9134

10



WARNING: Electric shock can cause injury.

Disconnect electric power before servicing or performing maintenance.

PN 20600

9



WARNING: Conveyor can cause injury.

Keep hands, feet, and clothing away from conveyor chain.

Only service conveyor chain after all movement has stopped.

PN 9414

11

CAUTION: Do not leave unused material in hopper.

Material can freeze or solidify causing unit to not work properly. Empty and clean hopper after each use.

PN 20143

GENERAL INFORMATION

Torque Chart

When tightening fasteners, refer to Table 1, Torque Chart, for the recommended fastener torque values.

Table 1: Torque Chart

Recommended Fastener Torque Chart (Ft.-Lb.)			
Size	SAE Grade 2	SAE Grade 5	SAE Grade 8
1/4-20	6	9	13
5/16-18	11	18	28
3/8-16	19	31	46
3/8-24	24	46	68
7/16-14	30	50	75
1/2-13	45	75	115
9/16-12	66	110	165
5/8-11	93	150	225
3/4-10	150	250	370
7/8-9	202	378	591
1-8	300	583	893

Metric Grade 8.8 (Ft.-Lb.)			
Size	Torque	Size	Torque
M 6	7	M 12	60
M 8	17	M 14	95
M 10	35	M 16	155

These torque values apply to mount assembly fasteners except those noted in the instruction.

Material Weights

Refer to Table 2, Material Weights, for the weight per cubic yard of common spreading materials.

Table 2: Material Weights

MATERIAL	WEIGHT (lb. per cubic yd.)
Fine Salt - Dry	2,025
Coarse Salt - Dry	1,431
Coarse Sand - Dry	2,700
Coarse Sand - Wet	3,240
Cinders	1,080

Regular Capacity

See Figure 1 to determine the correct amount of spreading material for the regular capacity hopper spreader.

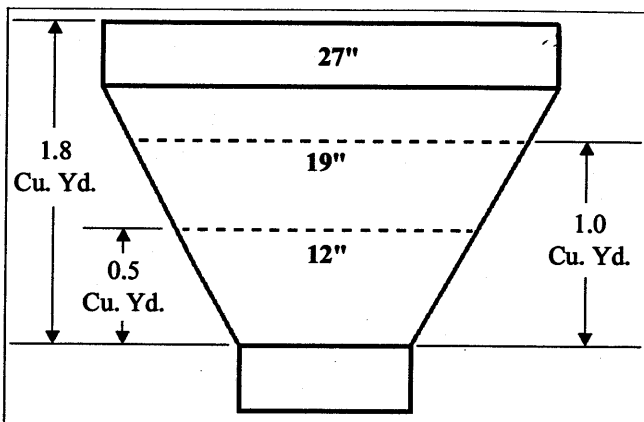


Figure 1

High Capacity

See Figure 2 to determine the correct amount of spreading material for the high capacity hopper spreader.

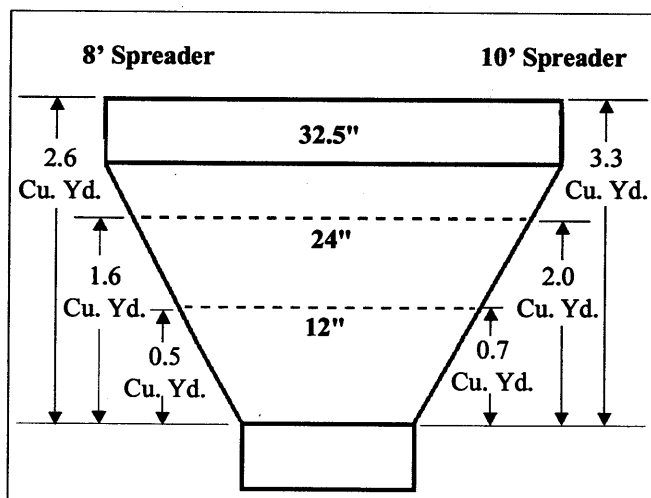


Figure 2

GENERAL INFORMATION

Determining Vehicle Payload



WARNING: Check vehicle's load rating certification sticker for the maximum vehicle capacity. **DO NOT** load beyond the vehicle's GVWR and GAWR ratings. Overloading could result in an accident or damage to the vehicle.

Use Table 3 to record information.

1. Install hopper spreader and optional equipment according to the instructions.
2. Install or attach any other equipment that will be on the vehicle while the hopper spreader will be in use (step bumper, trailer hitch, snowplows, etc.).
Fill gas tanks.
3. Obtain the Gross Vehicle Weight Rating (GVWR), Front Gross Axle Weight Rating (FGAWR), and Rear Gross Axle Weight Rating (RGAWR) from the certification label located inside the driver-side door jam.
4. With the occupants in the truck for normal hopper spreader operation, weigh vehicle to obtain gross vehicle weight (GVW).
5. Subtract the GVW from the GVWR to determine the available material payload.
6. Obtain the weight per cubic yard (lb./cu. yd.) of the desired material from Table 2, page 4.

Divide the weight into the payload to determine the maximum volume of material that can be carried.
7. Compare the maximum volume to Figures 1 or 2 on page 4 to determine the maximum height of the material in the hopper spreader.
8. Fill hopper with the material to the height calculated. Re-weigh vehicle with occupants and verify the GVW, Front Gross Axle Weight, and Rear Gross Axle Weight are less than the vehicle's ratings.
9. Repeat steps 7 and 8 for each type of material.

Refer to Table 3 on page 6 for an example and worksheet.

GENERAL INFORMATION

Table 3: Determining Vehicle Payload

Material Type	Example: Coarse Salt - Dry				
Equipment installed when vehicle was weighed	RC Mild Steel 8' Hopper Spreader				
Front Gross Axle Weight Rating (FGAWR)					
Rear Gross Axle Weight Rating (RGAWR)					
Gross Vehicle Weight Rating (GVWR) (lb.)	8600				
Gross Vehicle Weight (GVW) (lb.) (empty)	- 6500	-	-	-	-
Payload Available (lb.)	= 2100	=	=	=	=
Material Weight (lb./cu. yd.)	+ 1431	+	+	+	+
Maximum Volume (cu. yd.)	= 1.47	=	=	=	=
Maximum Height (Approximate) (in.)	24"				
Loaded Front Gross Axle Weight (FGAW) (lb.)					
Loaded Rear Gross Axle Weight (RGAW) (lb.)					
Loaded Gross Vehicle Weight (GVW) (lb.)					

Table 4: Spreader Specifications

Spreader Description	Overall Spreader Length (inches)	Empty Weight (lb.) (No screen or battery)	Capacity Struck (cu. yd.)	Capacity Rounded (cu. yd.)	Overall Width (inches)	Overall Height (inches)	Recommended Use
Regular Capacity 8' Hopper Body 16 Gauge Stainless Steel	113	624	1.8*	2.3*	50-3/4	32-1/2	3/4 or 1 Ton Pick-up Trucks above 8500 lb. GVWR
Regular Capacity 8' Hopper Body 12 Gauge Mild Steel	113	820	1.8**	2.3**	50-3/4	32-1/2	
High Capacity 8' Hopper Body 12 Gauge Mild Steel	113	1000	2.6	3.2	58	41	Dump or Flat Bed Trucks above 15,000 lb. GVWR
High Capacity 10' Hopper Body 12 Gauge Mild Steel	137	1200	3.3	4.1	58	41	

* Side Extensions are not recommended for the 16 Gauge Stainless Steel Spreader and will void all warranties.

** 6" Side Extension adds 0.6 cu. yd. capacity, 12" Side Extension adds 1.2 cu. yd. capacity.

OPERATION

Cab Control Identification

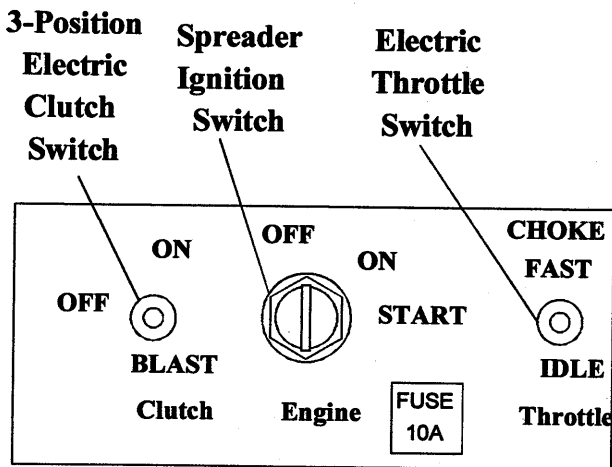


Figure 3

NOTE: The conveyor and spinner will operate when the clutch switch is in the ON or BLAST position.

Engine Operation

Refer to Figure 3 as a reference for starting and stopping the engine.

Starting the Engine

NOTE: Read and understand the engine manufacturer's *Owner's Manual* before starting the engine.

1. Turn the vehicle ignition switch to ON.
2. Verify the clutch switch is OFF.
3. Turn the spreader ignition switch (labeled "Engine" on the cab control) to ON.
4. Move the throttle switch to IDLE and hold for two seconds; release.
5. Turn the spreader ignition switch to START.
6. While the engine is cranking, move the throttle switch to CHOKE/FAST.
7. When the engine starts to fire, release the throttle switch.

8. When the engine starts, release the ignition switch.

NOTE: If the engine does not start after 10 seconds of cranking, turn both vehicle and spreader ignition switches to OFF and see the *Briggs & Stratton Owner's Manual* that is shipped with the spreader.

9. After the engine starts, move the throttle switch to IDLE and hold for 1/2 - 1 second to release the choke.
10. To control the engine speed:
 - *Increase:* hold the throttle switch at CHOKE/FAST.
 - *Decrease:* hold the throttle switch at IDLE.

NOTE: Maximum engine speed is obtained just prior to choking the engine.

Stopping the Engine

1. Move the throttle to IDLE and hold for two seconds.
2. Turn the spreader ignition switch to OFF.

CAUTION: Always empty the spreader when not in use to prevent a frozen conveyor chain. If the chain becomes "stuck" or "frozen," remove the material from the hopper and free the chain, or move the spreader to a warm area to thaw the material.

CAUTION: Do not attempt to free the chain by using a pipe wrench or any other tool on the output shaft of the gear case. The gear case is designed to accept torque from the input shaft only. Attempts to turn the output shaft will strip the gears and void any warranty.

OPERATION

Clutch Operation

1. Start the engine.
2. Adjust the speed to slightly above idle.
3. Move the clutch switch to ON.

CAUTION: To prevent premature spinner chain failure and chain tension loss, engage the electric clutch at the lowest possible RPM without stopping the engine.

4. Increase the engine speed to the desired RPM.


Baffle Adjustment

Spread pattern and the amount of material dispensed depends on engine RPM, gate position, and baffle settings.

- *Decreasing* RPM and/or gate-opening will *decrease* the amount of material coming to the spinner.
- *Increasing* RPM and/or gate-opening will *increase* the amount of material coming to the spinner.

See Figure 4, and Figures 5 and 6 on the next page.


Figure 4

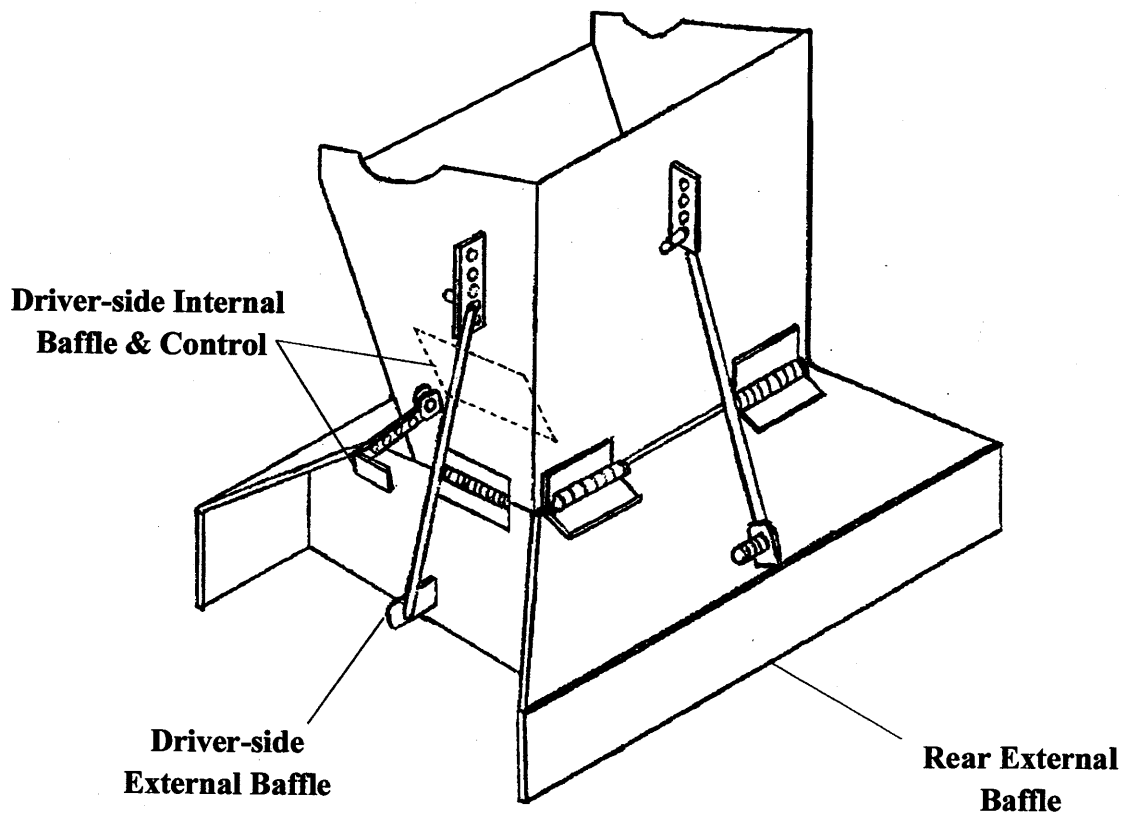

OPERATION


These figures are as viewed from the top of the spinner looking down.

Figure 5

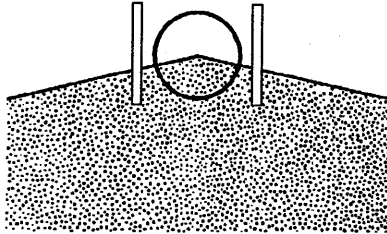


Both internal baffles out


Figure 6

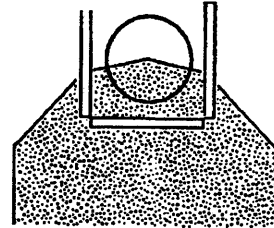


All baffles adjusted down for a confined spread pattern

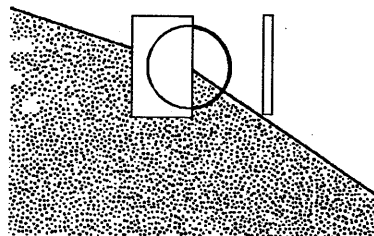


Driver-side baffle in, curb-side baffle out

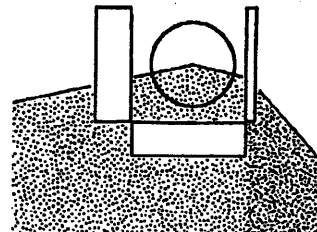

Curb-side baffle deflects material down; heavy on curb side

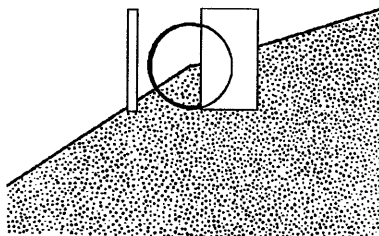

Driver-side baffle out, curb-side baffle in

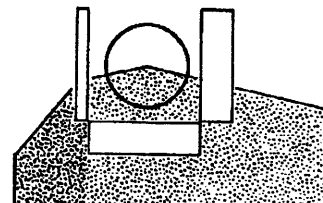

Driver-side baffle deflects material down; heavy on driver side

MAINTENANCE

General

- At the end of the season, oil or paint all bare surfaces after washing and before storing the unit.

Grease

CAUTION: Over-greasing may cause seal damage. The gear case must be filled to the oil-level plug with SAE 90 gear-type lubricant. Keep the breather plug clean.

- Use dielectric grease on all electrical connections at the beginning and end of each season, and as required during the season.
- After every 10 hours of operation, grease the idler bearings on the idler shaft, flanged bearings on the drive shaft and the input shaft above the gear case, and the spinner shaft bearings.
- After every 50 hours of operation, grease the input shaft bearing on the gear case and verify the oil level of the gear case is level with the fill hole.
- Change gear case oil once a year. Drain oil by removing the side cover of the gear case. Refill with SAE 90 weight gear oil. Oil level should be even with the bottom of the fill hole.

Chains

CAUTION: Over-tightening the roller chains may damage the bearings on the gear case, the engine, and/or the spinner shaft. Over-tightening will also shorten the life of the roller chain and of the sprockets.

- At the beginning of each season, and once a month during the season, verify the drive sprocket set screws are tight.

- Maintain spinner shaft-to-gear case roller chain tension. Correct chain tension allows 5/16" deflection midway between the sprockets. See Figure 7.

To increase chain tension: loosen the bearing mounting hardware and pull the spinner shaft away from the gear case. Make sure the spinner shaft is vertical and the sprockets are lined up before re-tightening the fasteners. Oil this chain after each use, and at the end of the season.

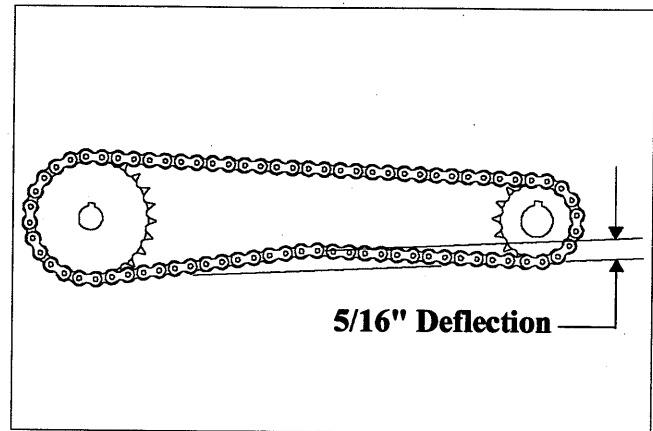


Figure 7

- Maintain engine-to-electric clutch roller chain tension. Correct tension allows 5/16" deflection midway between sprockets. See Figure 8.

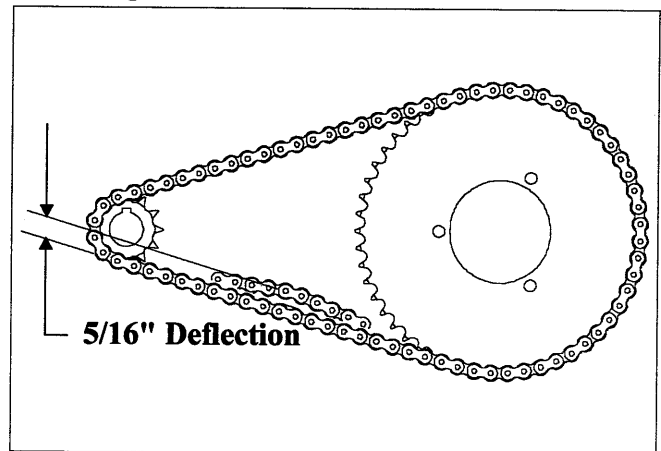


Figure 8

To increase chain tension: loosen the four engine mount-to-engine base bolts and pull the engine away from the electric clutch. Re-tighten bolts. Oil this chain after each use, and at the end of the season.

MAINTENANCE

- Periodically check the conveyor chain tension.
To check the tension, measure in 20"-24" from the rear edge of the sills. Push up on the chain with your hand. The conveyor chain should lift 1"-3" off the conveyor chain guide or cross angles. See Figure 9.

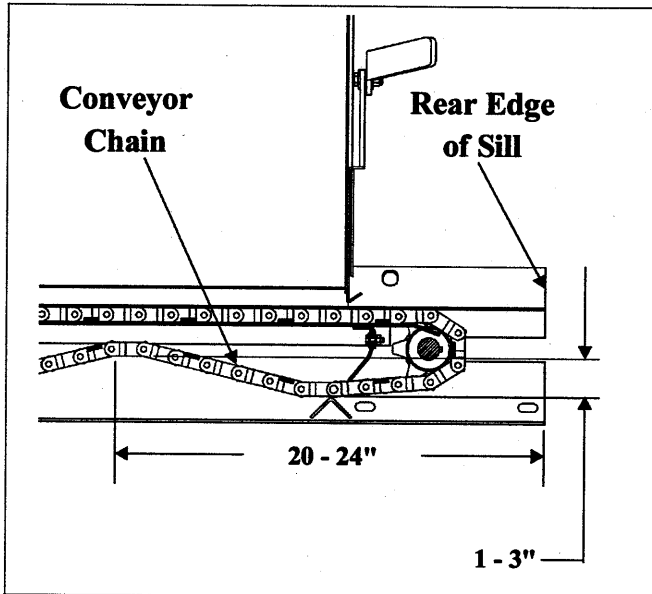


Figure 9

- Use the (2) 5/8" x 6" take-up bolts at the front of the spreader to adjust the conveyor chain tension. Turn both sides equal amounts to ensure the tension is equally distributed across both sides of the conveyor chain.
- Always empty the spreader when it is not in use to prevent a frozen conveyor chain.

Electric Clutch

To minimize problems and extend the life of the electric clutch, do the following:

- At the end of each snow season, remove and clean the clutch.
- After cleaning the clutch, coat both mating surfaces of the clutch with oil or light grease.
- Remove oil and grease prior to using the clutch again.

Engine Service and Repair

Maintain the spreader engine according to the *Briggs & Stratton Engine Owner's Manual* that is shipped with the spreader. Engine warranty is covered by Briggs & Stratton and is described in the back of the manual.

If service or repair is needed, contact an authorized Briggs & Stratton Service Center. To serve you promptly, the Service Center will need the model, type, and code number for your engine.

Your nearest service center is listed in the "Yellow Pages" under "Engines, Gasoline" or "Gasoline Engines."

MAINTENANCE

Hydraulic Hopper Spreaders

1. Check hydraulic fluid level before every use. Add fluid as required.
2. Periodically inspect the hoses and fittings for damage and possible leaks.
3. Change the hydraulic fluid filter after the first 50 hours of operation of a new unit.
4. Reservoir should be drained through the drain plug only, NOT through the suction outlet.

Flush and refill reservoir annually, or sooner if fluid shows signs of break-down or contamination.

The use of proper hydraulic fluid in the system is critical to satisfactory performance. Only clean, new hydraulic fluid, of the proper viscosity, should be used. Keep all hydraulic fluids in original containers. Use only clean measuring containers and funnels when pouring fluids, Keep all container closed when not in use.

TROUBLE SHOOTING for HYDRAULIC UNITS

PROBLEM	CORRECTION
<ol style="list-style-type: none"> 1. Unit speed does not increase with the dial setting 2. Unit stalls under load. 3. Unit speed fluctuates momentarily when control is first turned on. 4. Pump blows seals at start-up. 	<p>A. Increase truck engine speed. B. Check condition of pump C. Check for adequate PTO percent.</p> <p>Check circuit pressure. 900-1, 200 PSI maximum with relief valve dumping at 1,500 PSI.</p> <p>A. Cold oil. Wait until oil has warmed up. B. Change to lighter weight oil.</p> <p>Pump installed backwards. Replace seals and reverse pump in drive line. (Note arrow on pump.)</p>


ABBREVIATION KEY

AR	As Required	HX	Hex (Head)	SDTS	Self-Drilling Tap Screw
ASSY	Assembly	ID	Inside Diameter	SFLS	Serrated Flange Lock Screw
CB	Carriage Bolt	LG	Long	SO	Socket Head
CHMSL	Center High-Mounted Stoplight	LK	Lock	SP	Spring
CNP	Cone Point	MS	Machine Screw (fastener descriptions)	SQ	Square
CS	Cap Screw	MS	Mild Steel (non-fastener descriptions)	SS	Set Screw
DIA	Diameter	NPTF	National Pipe Thread (Fluid)	STD	Standard
ELEC	Electric	NYIS	Nylon Insert	STS	Stainless Steel
EX	External	PH	Cross Recessed (Phillips Head)	T	Tooth/Teeth
FL	Flat	PN	Pan	TFTS	Thread Forming Tapping Screw
G	Grade	PT	Prevailing Torque	TY	Type
HC	High Capacity	RC	Regular Capacity	ZYC	Zinc Yellow Chromate
HP	Horsepower	SAE	Society of Automotive Engineers	ZP	Zinc Plated
HSG	Housing	SBH	Socket Button Head		

PARTS DIAGRAMS AND LISTS

Chute Assembly - Regular Capacity

Items with a single part number or description are common to regular capacity mild steel and 16-gauge stainless steel 14" and 26" chute assemblies.

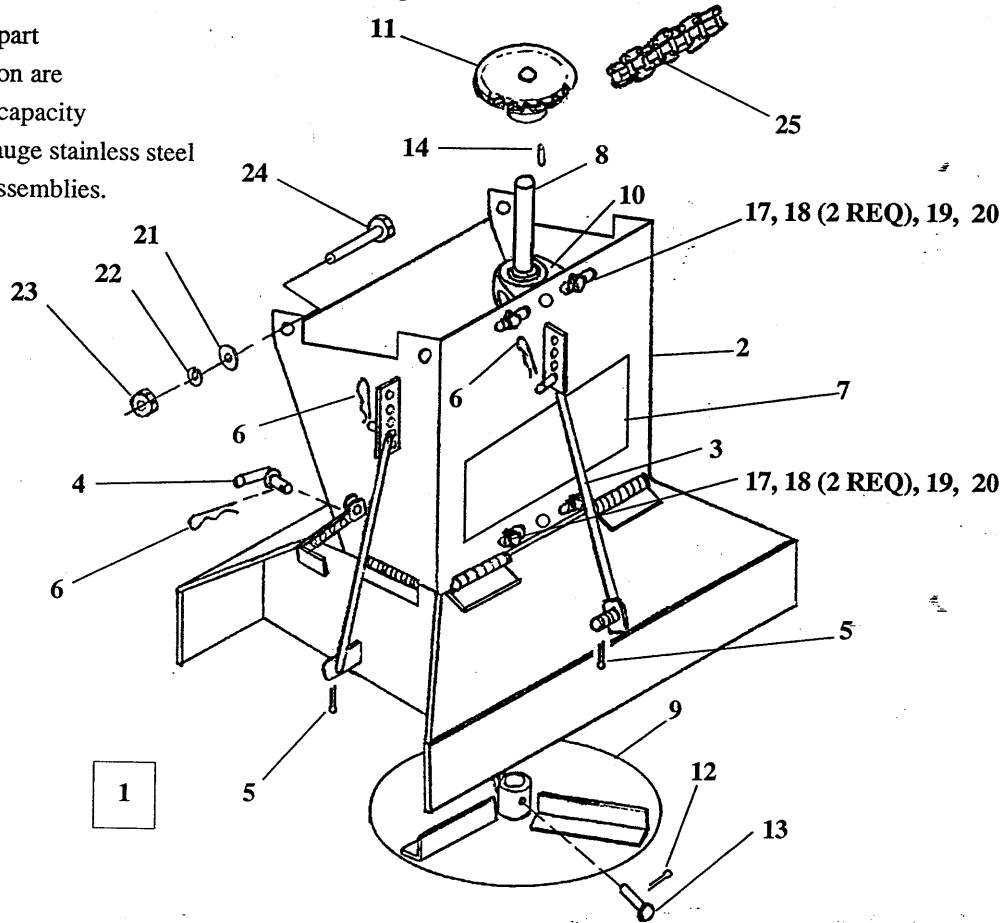

ITEM PART NO. QTY. DESCRIPTION


ITEM PART NO. QTY. DESCRIPTION

1	9189	1	CHUTE ASSY 14" RC MS
1	9031	1	CHUTE ASSY 14" RC STS
1	9194	1	CHUTE ASSY 26" RC MS
1	9032	1	CHUTE ASSY 26" RC STS
2	. 9298	1	CHUTE HSG ASSY 14" RC MS
2	. 20092	1	CHUTE HSG ASSY 14" RC STS
2	. 9299	1	CHUTE HSG ASSY 26" RC MS
2	. 20093	1	CHUTE HSG ASSY 26" RC STS
3	. . 9195	3	CONTROL ROD 10"
4	. . 9201	2	ADJUSTMENT PIN
5	. . 91004	3	1/8X3/4 COTTER PIN ZP
6	. . 9261	5	3/32X2-1/4 HAIRPIN COTTER ZP
7	. . 20599	1	LABEL - INFORMATION (WARNING)
8	. 9191	1	SPINNER SHAFT RC ZYC (14" CHT)
8	. 9192	1	SPINNER SHAFT RC ZYC (26" CHT)
9	. 9196	1	SPINNER DISK RC MS
9	. 20095	1	SPINNER DISK RC STS
10	. 9193	2	3/4" PILLOW BLOCK BEARING
11	. 9187	1	SPROCKET, #40X24TX3/4" ID
12	. 91022	1	1/16X1/2 COTTER PIN
13	. 9265	1	1/4 X 1-1/2 CLEVIS SHEAR PIN
14	. 9197	1	MACHINE KEY, 3/16" SQ X 1" LG

17	. 90966	4	3/8-16X1-1/2 HX CB G2 ZP
17	. 68345	4	3/8-16X1-1/2 HX CB STS
18	. 90315	4	3/8 PLAIN WASHER TY A STD ZP
18	. 91006	4	3/8 PLAIN WASHER TY A STD STS
19	. 90361	4	3/8 SP LK WASHER ZP
19	. 91007	4	3/8 SP LK WASHER STS
20	. 90334	4	3/8-16 HX NUT ZP
20	. 91008	4	3/8-16 HX NUT STS
21	90315	4	3/8 PLAIN WASHER TY A STD ZP
21	91006	4	3/8 PLAIN WASHER TY A STD STS
22	90361	4	3/8 SP LK WASHER ZP
22	91007	4	3/8 SP LK WASHER STS
23	90334	4	3/8-16 HX NUT ZP
23	91008	4	3/8-16 HX NUT STS
24	90965	4	3/8-16X1 CB G5 ZP
24	91023	4	3/8-16X1 CB G5 STS
25	68351	1	#40 ROLLER CHAIN, 28.5" LONG
*	. 20353	1	#40 ROLLER CHAIN MASTER LINK

PARTS DIAGRAMS AND LISTS

Chute Assembly - High Capacity

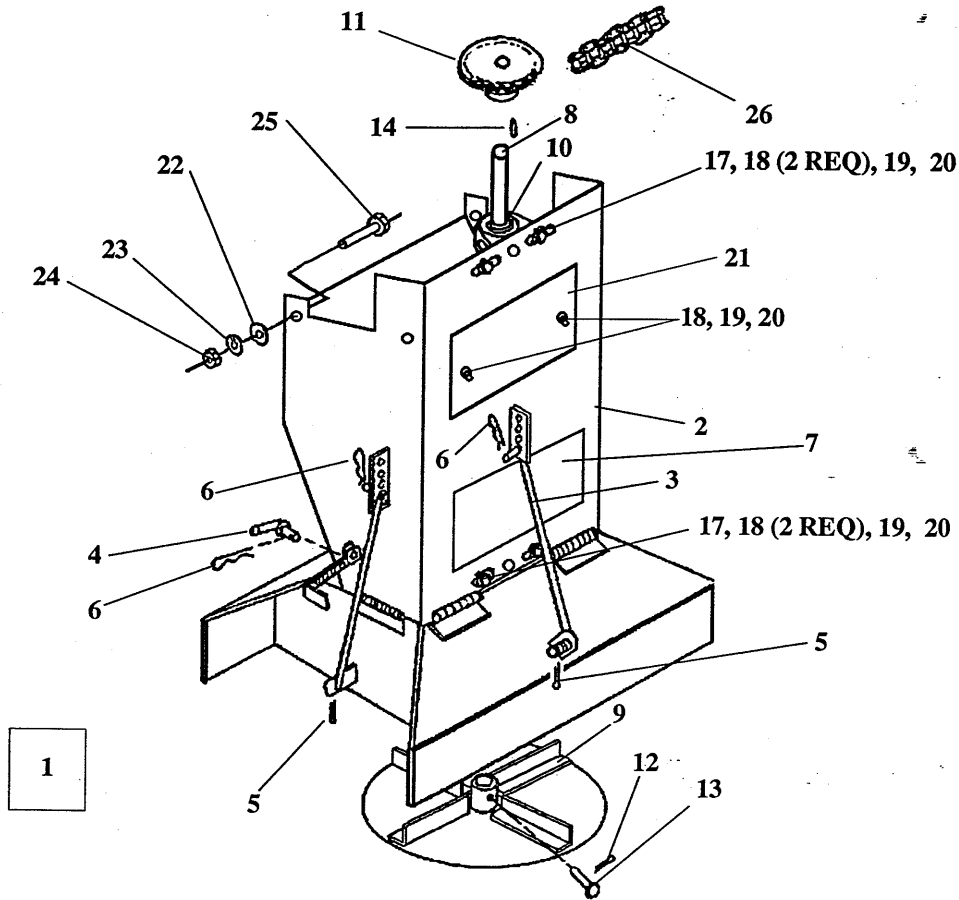

ITEM	PART NO.	QTY.	DESCRIPTION
1	9107	1	CHUTE ASSY 31" HC MS
2	.20318	1	CHUTE HSG ASSY 31" HC MS
3	..9195	3	CONTROL ROD 10"
4	..9201	2	ADJUSTMENT PIN
5	..91004	3	1/8 X 3/4 COTTER PIN ZP
6	..9261	5	3/32X2-1/4 HAIRPIN COTTER ZP
7	..20599	1	LABEL - INFORMATION (WARNING)
8	.20320	1	SPINNER SHAFT HC ZYC (31" CHT)
9	.20321	1	SPINNER DISK HC MS
10	.20322	2	1" PILLOW BLOCK BEARING
11	.20323	1	SPROCKET, #40 X 24T X 1" ID
12	.91022	1	1/16X1/2 COTTER PIN ZP
13	.20351	1	1/4" X 2" CLEVIS PIN ZP
14	.20324	1	MACHINE KEY 1/4" SQ X 1" LG
17	.90966	4	3/8-16/1-1/2 HX CB G2 ZP
18	.90315	6	3/8 PLAIN WASHER TY A STD ZP
19	.90361	6	3/8 SP LK WASHER ZP

ITEM	PART NO.	QTY.	DESCRIPTION
20	.90334	6	3/8-16 HX NUT ZP
21	.65640	1	ACCESS PANEL
22	90315	4	3/8 PLAIN WASHER TY A STD ZP
23	90361	4	3/8 SP LK WASHER ZP
24	90334	4	3/8-16 HX NUT ZP
25	90965	4	3/8-16X1 CB G5 ZP
26	68431	1	#40 ROLLER CHAIN 31.5" LONG
*	.20353	1	#40 ROLLER CHAIN MASTER LINK

*Not Shown


Abbreviation Key found on page 12.

Indented parts are included in the assembly under which they are listed.

Quantities shown are included with the assembly.

PARTS DIAGRAMS AND LISTS

Conveyor Drive and Idler - Regular and High Capacity

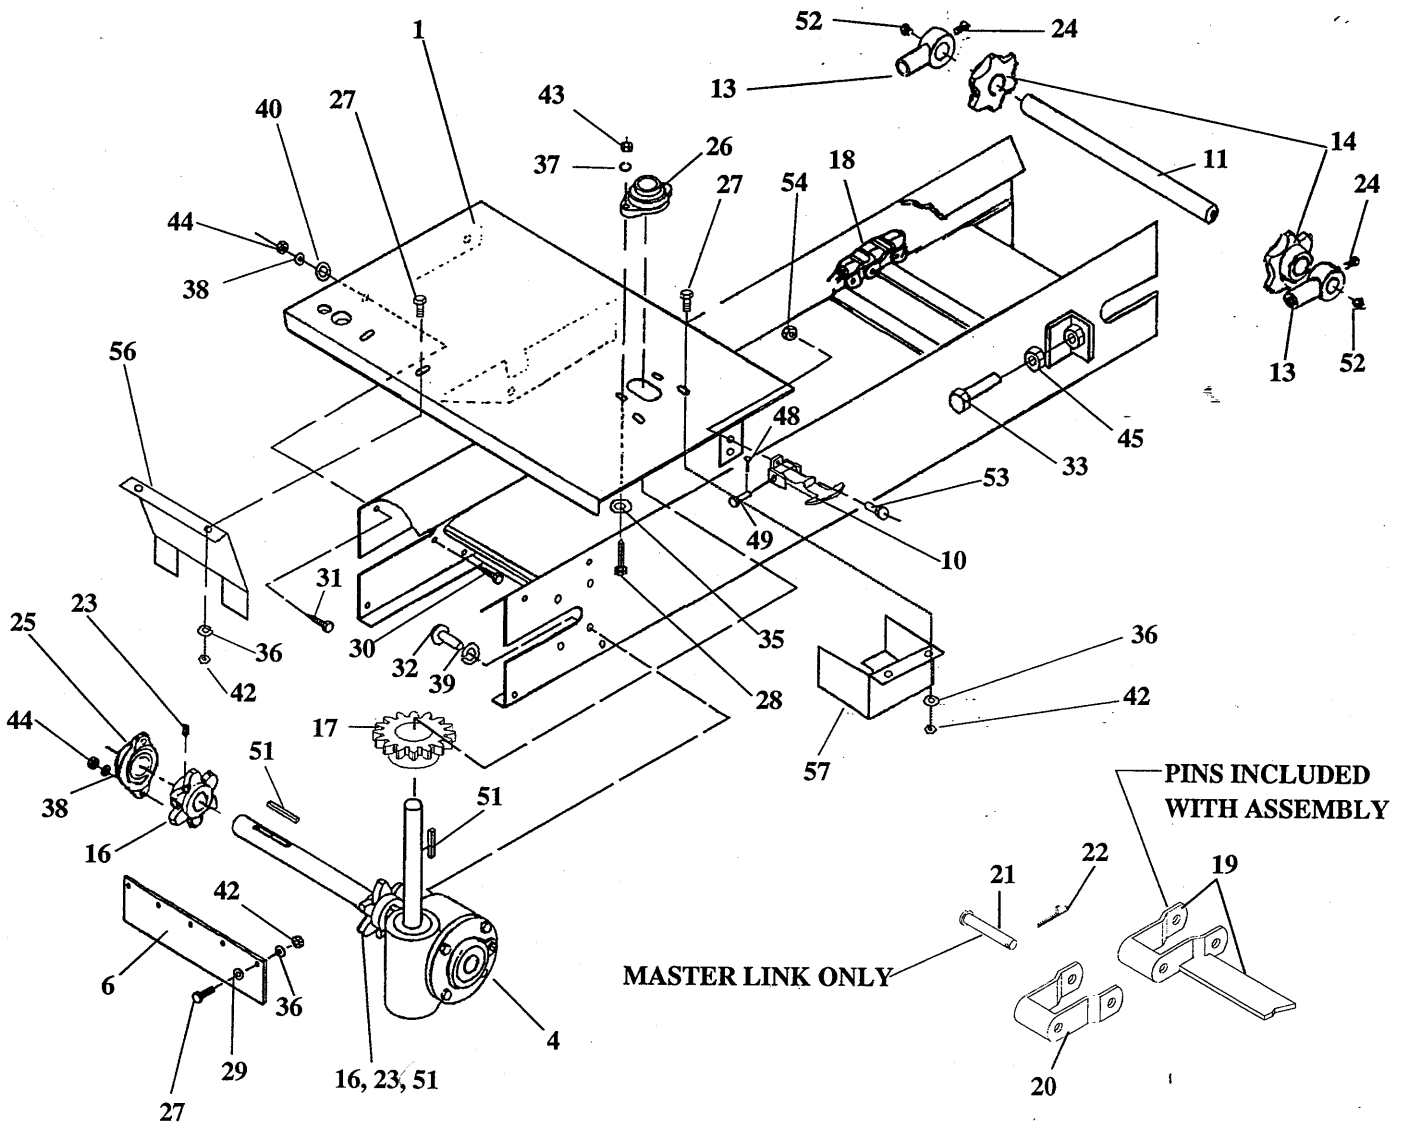

NOTE: Assemble chain link and pin to chain bar as shown, note alignment protrusion and corresponding recess in pin and link.

PARTS DIAGRAMS AND LISTS

Conveyor Drive and Idler - Regular and High Capacity

Items with a single part number or description are common to regular capacity, high capacity mild steel and 16-gauge stainless steel spreaders.

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	68347	1	ENGINE BASE RC MS	31	90103	4	3/8-16X1 HX CS G5 ZP
1	68357	1	ENGINE BASE RC STS	31	91015	4	3/8-16X1 HX CS STS
1	68450	1	ENGINE BASE HC MS	32	68359	4	1/2-13X3/4 SBH CS ZP
4	68384	1	GEAR CASE HC	32	68360	4	1/2-13X3/4 SBH CS STS
4	68374	1	GEAR CASE RC	33	20150	2	5/8-11X6" TAKE UP BOLT ZYC
6	9167	1	WIPER BELT RC	33	20151	2	5/8-11X6" TAKE UP BOLT STS
6	20328	1	WIPER BELT HC	35	90980	2	5/16 PLAIN WASHER TY A STD STS
10	9172	2	STRAP, RUBBER HOLD DOWN				
11	9184	1	IDLER SHAFT RC ZYC	36	90359	11	1/4 SP LK WASHER ZP
11	68434	1	IDLER SHAFT HC ZYC	36	90359	7	1/4 SP LK WASHER ZP (HC Only)
13	9182	2	ROD END	36	91017	11	1/4 SP LK WASHER STS
14	9183	2	IDLER SPROCKET 6T	37	90981	2	5/16 SP LK WASHER STS
16	9163	2	DRIVE SPROCKET 6T	38	90361	6	3/8 SP LK WASHER ZP
17	9174	1	SPROCKET #40X16TX1.0" ID	38	91007	6	3/8 SP LK WASHER STS
18	68349	1	CONVEYOR CHAIN 8' RC (123 LINK)	39	90364	4	1/2 SP LK WASHER ZYC
				39	91018	4	1/2 SP LK WASHER STS
18	68474	1	CONVEYOR CHAIN 8' HC (123 LINK)	40	90315	4	3/8 PLAIN WASHER TY A STD ZP
				40	91006	4	3/8 PLAIN WASHER TY A STD STS
18	68435	1	CONVEYOR CHAIN 10' HC	42	90330	11	1/4-20 HX NUT ZP
19	68375	AR	CONVEYOR REPAIR BAR RC	42	90330	7	1/4-20 HX NUT ZP (HC Only)
19	68492	AR	CONVEYOR REPAIR BAR HC	42	91019	11	1/4-20 HX NUT STS
20	68475	AR	CONVEYOR REPAIR LINK	43	90332	2	5/16-18 HX NUT ZP
21	9179	AR	CONVEYOR CHAIN PIN (MASTER)	43	90988	2	5/16-18 HX NUT STS
22	91010	AR	3/32X1/2 COTTER PIN ZP	44	90334	6	3/8-16 HX NUT ZP
23	68480	2	1/4-20 X 3/8 SO SS CNP	44	91008	6	3/8-16 HX NUT STS
24	91011	2	5/16-18X3/4 SQ SS STS	45	90343	2	5/8-11 HX NUT ZYC
25	9162	1	1-1/8" 2 BOLT FLANGE BEARING	45	91020	2	5/8-11 HX NUT STS
26	9176	1	1" 2 BOLT FLANGE BEARING	48	91022	2	1/16X1/2 COTTER PIN ZP
27	90461	11	1/4-20X3/4 HX CS G2 ZP	49	20189	2	3/16X1-1/4" ZYC CLEVIS PIN
27	90461	7	1/4-20X3/4 HX CS G2 ZP (HC Only)	51	9166	3	MACHINE KEY, 1/4" SQ X1-1/2 LG
27	91012	11	1/4-20X3/4 HX CS STS	52	20188	2	GREASE FITTING - STRAIGHT
28	90054	2	5/16-18X1-1/2 HX CS G5 ZP	*	9333	4	TIE-DOWN CHAIN 36" LONG
28	90977	2	5/16-18X1-1/2 HX CS STS	*	9334	4	LINK - CHAIN TIE DOWN
29	90311	5	1/4 PLAIN WASHER TY A STD ZP	53	67092	4	#10-24 X 1/2 SBH CS STS
29	90311	7	1/4 PLAIN WASHER TY A STD (HC Only)	54	91330	4	#10-24 PT HX LKNUT NYIS STS
				55	68459	AR	CONVEYOR CHAIN PIN
29	91013	5	1/4 PLAIN WASHER TY A STD STS	56	68355	1	SPINNER CHAIN GUARD RC MS
30	67093	2	3/8-16X1-1/4 SBH CS STS	56	68364	1	SPINNER CHAIN GUARD RC STS
				56	68386	1	SPINNER CHAIN GUARD HC
				57	68361	1	CHAIN GUARD


* Not Shown

Abbreviation Key is found on page 12.

Indented parts are included in the assembly under which they are listed. Quantities shown are included with the assembly.

PARTS DIAGRAMS AND LISTS

Conveyor Drive - Hydraulic

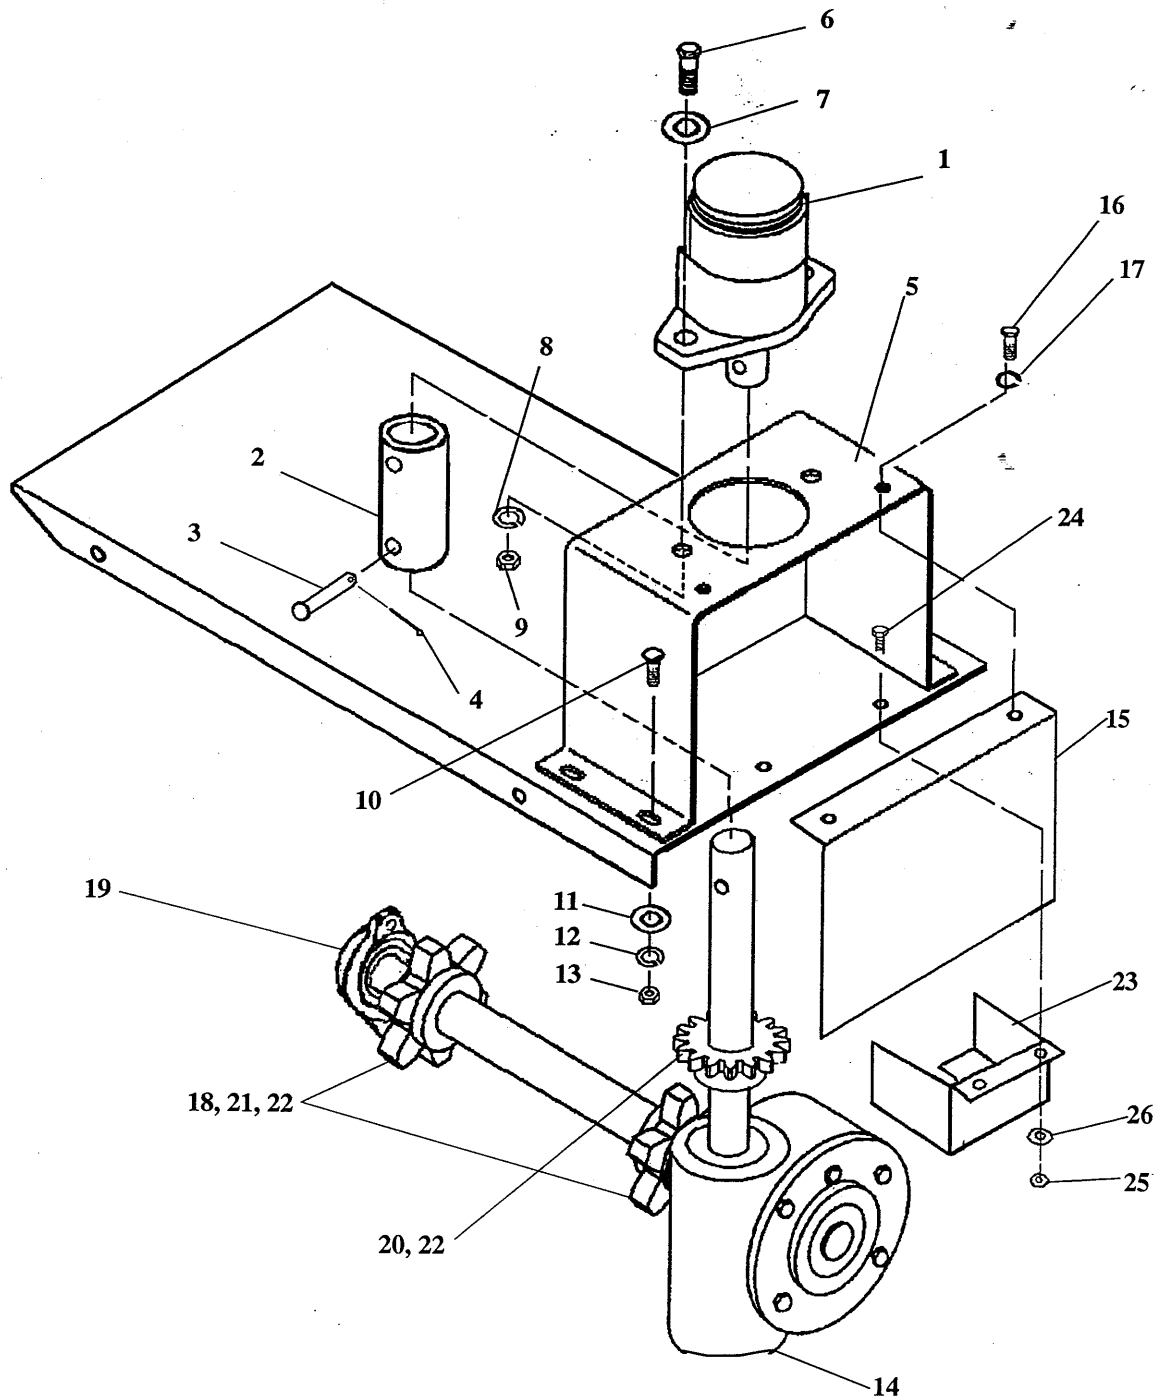

PARTS DIAGRAMS AND LISTS

Conveyor Drive - Hydraulic

ITEM	PART NO.	QTY.	DESCRIPTION
1	68396	1	HYDRAULIC MOTOR
2	68402	1	COUPLING
3	67147	2	3/8 X 2 CLEVIS PIN G5 ZP
4	5923	2	COTTER PIN
5	68397	1	MOUNT - HYDRAULIC MOTOR
6	90210	2	1/2-13 X 1-1/2 HX CS G5 ZP
7	90319	2	1/2 FLAT WASHER ZP
8	90364	2	1/2 SP LK WASHER ZYC
9	91335	2	1/2-13 PT HX LK NUT NYIS ZYC
10	90965	4	3/8-16 X 1 CB G5 ZP
11	90315	4	3/8 PLAIN WASHER TY A STD ZP
12	90361	4	3/8 SP LK WASHER ZP
13	90334	4	3/8-16 HX NUT ZP
14	68412	1	GEAR CASE ASSY RC HYD.
14	68463	1	GEAR CASE ASSY HC HYD.
15	68470	1	MOTOR MOUNT FRONT COVER
16	90676	2	5/16-18 X 5/8 HX CS G5 ZP
17	90360	2	5/16 SP LK WASHER ZP
18	9163	2	DRIVE SPROCKET 6T
19	9162	1	1-1/8" 2 BOLT FLANGE BRG.
20	9174	1	SPROCKET #40 16T X 1" I.D.
21	68480	2	1/4-20 X 3/8" SO SS CNP
22	9166	3	MACHINE KEY 1/4 SQUARE 1.5"
23	68361	1	CHAIN COVER
24	90461	4	1/4-20 X 3/4 HX CS G2 ZP
24	91012	4	1/4-20 X 3/4 HX CS STS
25	90330	4	1/4-20 HX NUT ZP
25	91019	4	1/4-20 HX NUT STS
26	90359	4	1/4 SP LK WASHER ZP
26	91017	4	1/4 SP LK WASHER STS

* Not Shown


Abbreviation Key is found on page 12.

Indented parts are included in the assembly under which they are listed. Quantities shown are included with the assembly.

PARTS DIAGRAMS AND LISTS

Engine Drive with Clutch - Regular and High Capacity

Location of
Engine Model,
Type and Code

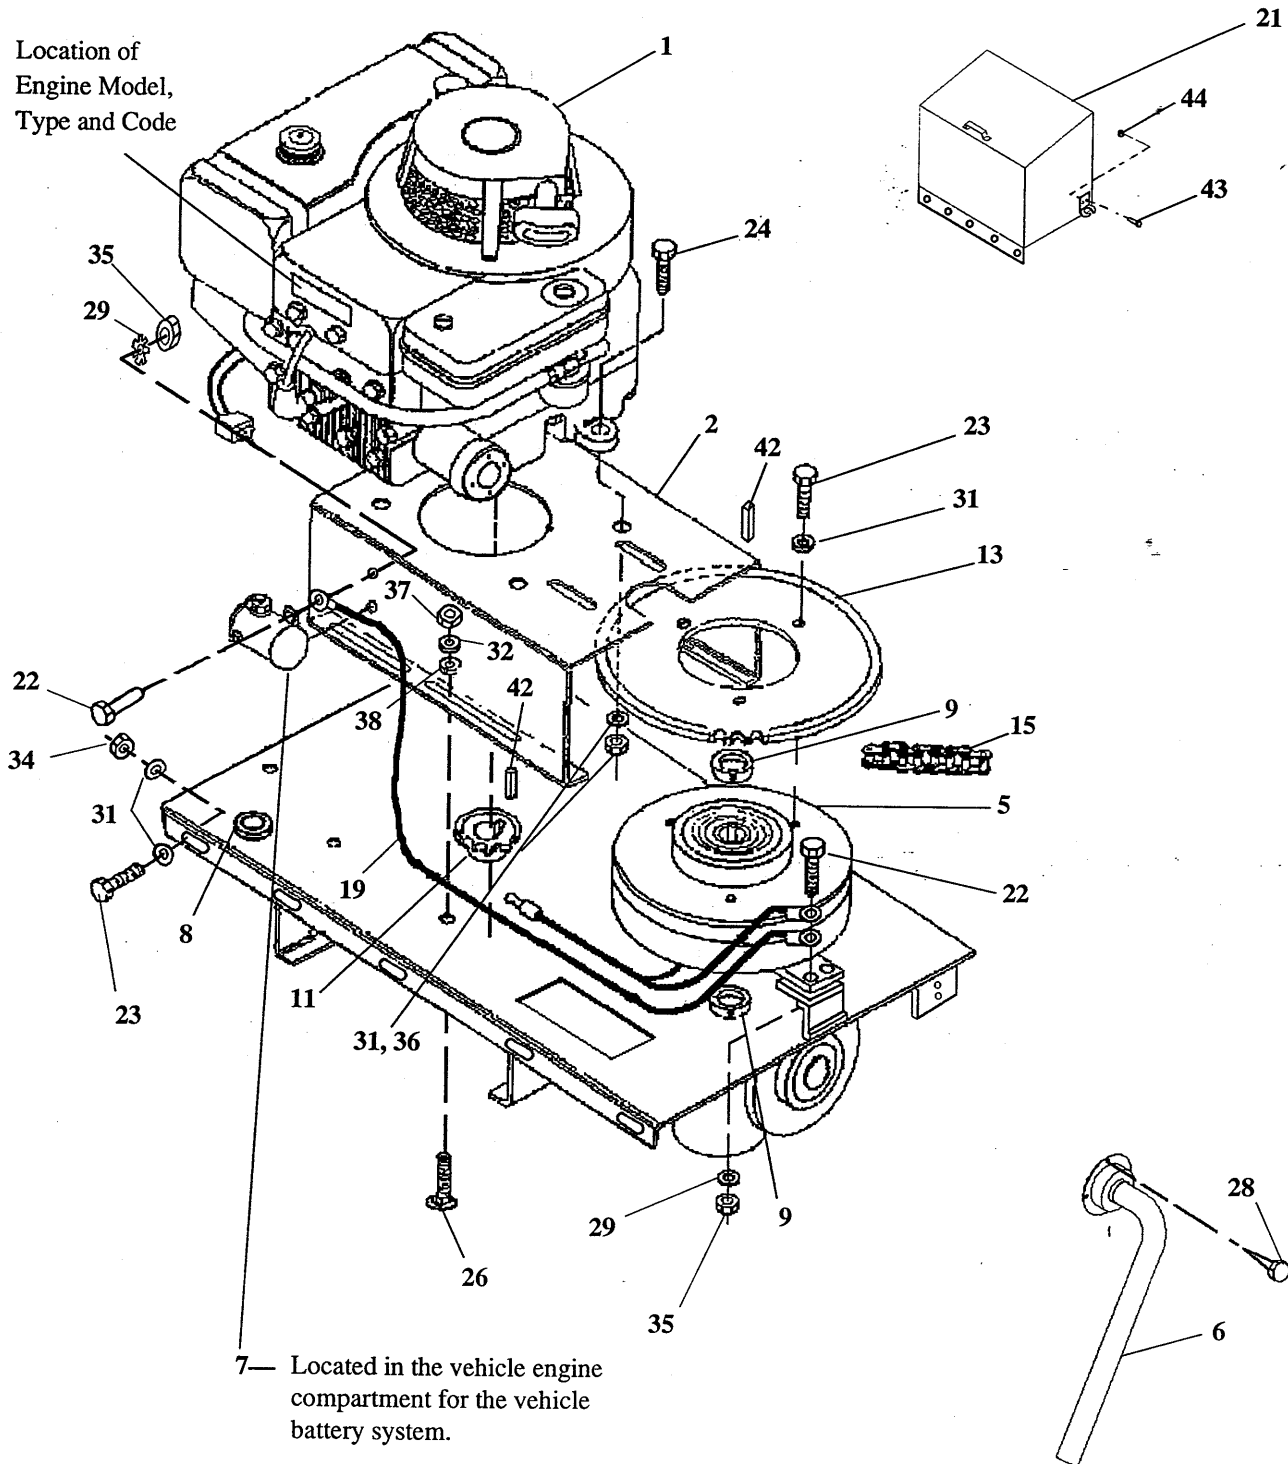

PARTS DIAGRAMS AND LISTS

Engine Drive with Clutch - Regular and High Capacity

ITEM	PART NO.	QTY.	DESCRIPTION
1	9106	1	8.5 H.P. ENGINE
2	20084	1	ENGINE MOUNT RC
2	68450	1	ENGINE MOUNT HC
5	9207	1	ELECTRIC CLUTCH
6	9000	1	TUBULAR EXHAUST EXTENSION
7	20136	1	RELAY - HOPPER SPREADER
8	9221	1	RUBBER GROMMET, 1"
9	9206	2	LOCKING COLLAR, 1"
11	9209	1	SPROCKET, #40 X 12 T X 1.0"
13	9202	1	SPROCKET, CLUTCH (#40 X 52 T)
15	68350	1	#40 ROLLER CHAIN, 29.5" LONG (RC)
15	68417	1	#40 ROLLER CHAIN, 36.5" LONG (HC)
19	67241	1	CLUTCH GROUND WIRE
21	68373	1	ENGINE COVER RC MS
21	68499	1	ENGINE COVER RC STS
21	9281	1	ENGINE COVER HC MS
22	90461	3	1/4-20X3/4 HX CS G2 ZP
22	91012	3	1/4-20X3/4 HX CS STS
23	90974	7	5/16-18X3/4 HX CS STS
24	90054	4	5/16-18X1-1/2 HX CS G5 ZP
26	90965	4	3/8-16X1 CB G5 ZP
26	91023	6	3/8-16X1 CB STS
28	91160	6	#8-18X3/8 SFLS TFTS TY AB ZP
29	91031	3	1/4 EX TOOTH LK WASHER ZP
29	67083	3	1/4 EX TOOTH LK WASHER STS
30	90359	3	1/4 SP LK WASHER ZP
30	91017	3	1/4 SP LK WASHER STS
31	90360	6	5/16 SP LK WASHER STS
32	90361	6	3/8 SP LK WASHER ZP
32	91007	6	3/8 SP LK WASHER STS
33	90980	10	5/16 PLAIN WASHER TY A STD STS
34	90987	4	5/16-18 PT HX LK NUT NYIS STS
35	90330	3	1/4-20 HX NUT ZP
35	91019	3	1/4-20 HX NUT STS
36	90332	4	5/16-18 HX NUT ZP
36	90988	4	5/16-18 HX NUT STS
37	90334	6	3/8-16 HX NUT ZP
37	91008	6	3/8-16 HX NUT STS
38	90315	4	3/8 PLAIN WASHER TY A STD ZP
38	91006	4	3/8 PLAIN WASHER TY A STD STS
42	9166	2	KEY, .25 SQ X 1-1/2" LG
43	67092	4	#10-24X1/2 SBH CS STS
44	91330	4	#10-24 PT HX LKNUT NYIS STS
*	20353	1	#40 ROLLER CHAIN MASTER LINK

*** Not Shown**

Items with a single part number or description are common to regular capacity (mild steel and 16-gauge stainless steel) and high capacity spreaders.


PARTS DIAGRAMS AND LISTS

This page intentionally left blank

PARTS DIAGRAMS AND LISTS

Battery Kits


**SPREADER
BATTERY KIT
SHOWN**

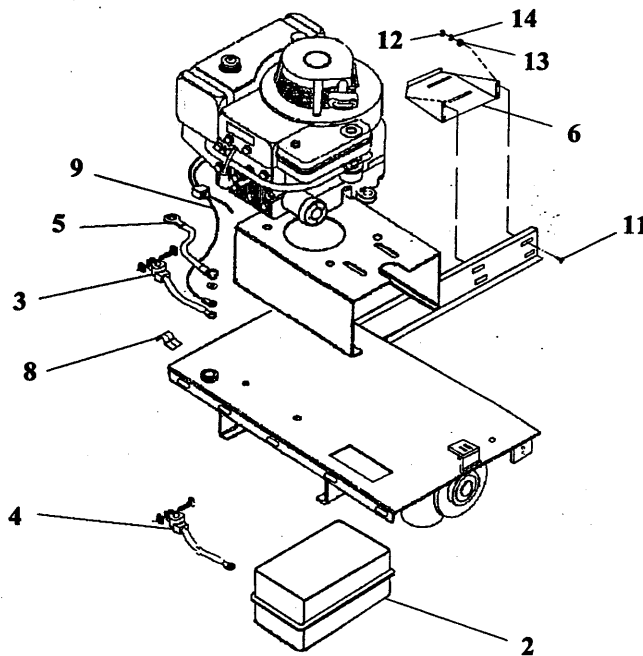

ITEM	PART NO.	QTY.	DESCRIPTION
1	65605	1	SPREADER BATTERY KIT
2	. 9229	1	BATTERY CASE W/STRAP
3	. 9226	1	BATTERY CABLE - RED (POS)
4	. 67239	1	BATTERY CABLE - BLACK - 53" LONG
5	. 9227	1	CABLE STARTER
6	. 65800	1	BATTERY TRAY
7	. 65990	1	PARTS BAG
8	.. 9472	2	CLAMP LOOP #10
9	.. 20194	1	ALTERNATOR WIRE - RED W/PLUG
10	.. 90980	1	5/16 PLAIN WASHER TY A STD STS
11	.. 91023	4	3/8-16 X 1 CB STS
12	.. 91008	4	3/8-16 HEX NUT STS
13	.. 91006	4	3/8 PLAIN WASHER TY A STD STS
14	.. 91007	4	3/8 SP LK WASHERS STS
*	65606	1	VEHICLE BATTERY KIT
*	. 65989	1	PARTS BAG
*	.. 9472	5	CLAMP LOOP #10
*	.. 3666	4	CABLE TIE
*	.. 8291	1	PLUG COVER
*	.. 20128	1	HOOK
*	.. DC5310	1	BATTERY CABLE ADAPTOR
*	.. 20091	1	RELAY WIRE - WHITE
*	.. 90461	2	1/4-20 X 3/4 HX CS G2 ZP
*	.. 90350	2	1/4-20 PT HX LK NUT NYIS ZYC
*	.. 91031	2	1/4 EX TOOTH LK WASHER ZP
*	. 20074	1	VEHICLE CABLE
*	. 20075	1	SPREADER CABLE
*	. 5799	1	BATTERY CABLE 22" RED
*	NOT SHOWN, VEHICLE BATTERY KIT ONLY		

PARTS DIAGRAMS AND LISTS

Gear Case - Regular and High Capacity

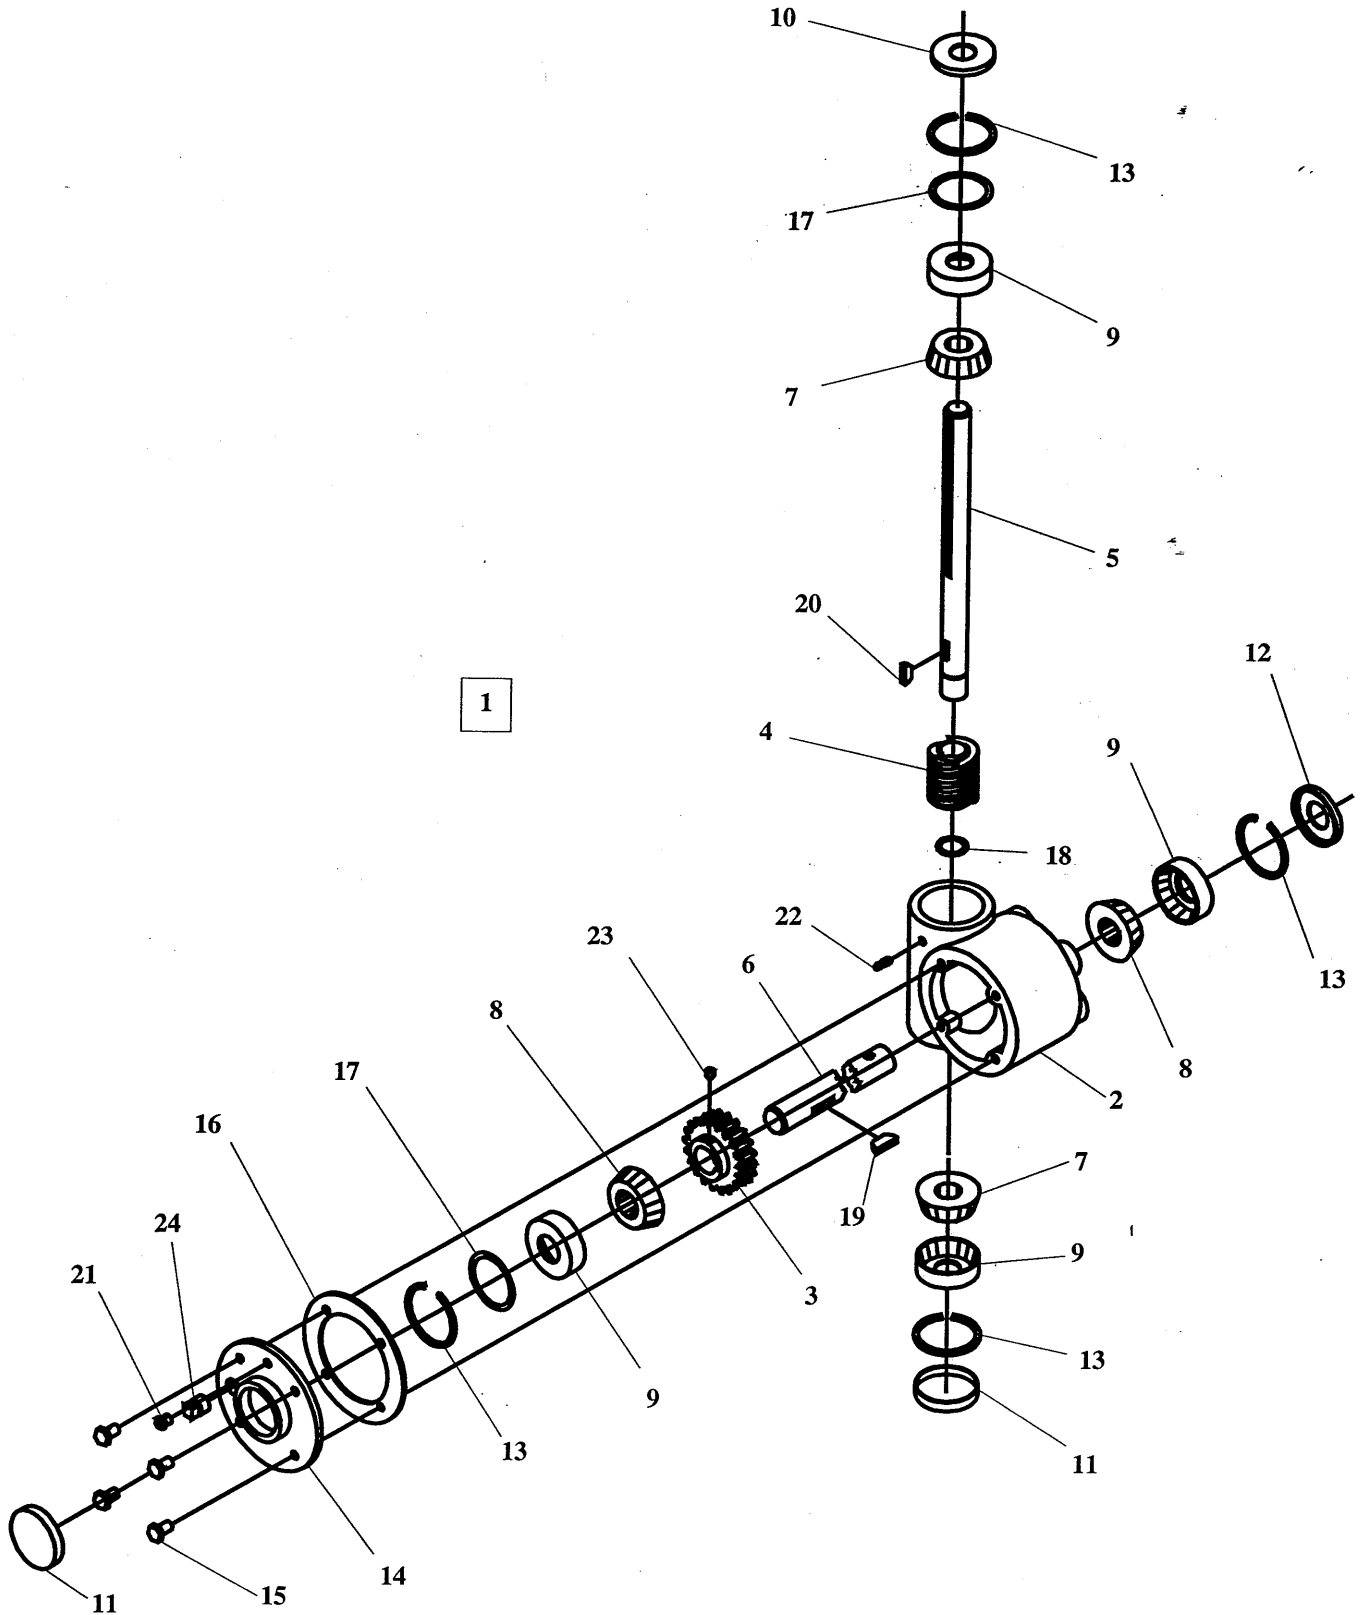

PARTS DIAGRAMS AND LISTS

Gear Case - Regular and High Capacity

ITEM	PART NO.	QTY.	DESCRIPTION
1	68374	1	GEAR CASE RC
1	68384	1	GEAR CASE HC
2	. 67245	1	GEAR CASE HOUSING
3	. 67246	1	GEAR (BRONZE)
4	. 67247	1	WORM GEAR
5	. 68382	1	INPUT SHAFT
5	. 68507	1	INPUT SHAFT HYD.
6	. 68383	1	OUTPUT SHAFT RC
6	. 68387	1	OUTPUT SHAFT HC
7	. 67249	2	BEARING CONE
8	. 67248	2	BEARING CONE
9	. 67250	4	BEARING CUP
10	. 67251	1	SEAL
11	. 67252	1	CAP
12	. 67253	1	SEAL
13	. 67254	2	SNAP RING

14	. 67255	1	COVER
15	. 67256	4	CAP SCREW
16	. 67257	1	GASKET
ITEM	PART NO.	QTY.	DESCRIPTION
17	. 67258	AR	SHIM (0.020" THK)
18	. 67259	1	SNAP RING
19	. 67260	1	WOODRUFF KEY (# 18 - HARDENED)
20	. 67261	1	WOODRUFF KEY ("A" - HARDENED)
21	. 67262	1	1/8 VENT PLUG
22	. 67263	1	ZERK FITTING
23	. 67264	1	SET SCREW
24	. 7621	1	PLUG 3/8 NPTF SQ

* Not Shown

Abbreviation Key is found on page 11.

Indented parts are included in the assembly under which

Gear Case Assembly

Housing Pre-assembly

1. Insert the snap ring into the output bore of the housing.
2. Insert an output bearing cup into the housing bore using a cup driver or a brass drift. Press the cup tight against the snap ring.
3. Insert the snap ring into the input bore opposite the grease zerck hole. Press an input bearing cup tight against the snap ring.
4. Install and tighten the grease zerck into the housing.

Cover Pre-assembly

1. Insert the snap ring into the bore of the cover.
2. Press an output bearing cup in tight against the snap ring.
3. Install all vent and fill plugs into the cover.

Output Shaft Pre-assembly

Install the woodruff key into the keyway.

Input Shaft Pre-assembly

1. Install the snap ring in the snap ring groove.
2. Install the woodruff key into the keyway.
3. Slide the worm gear on tight to the snap ring making sure the key does not fall out.
4. Slide the input shaft bearing cones tight against the worm gear and snap ring.

Assembly of Pre-assembled Parts

1. Insert the input shaft into the housing making sure the shaft extends out the proper side.
2. Press an input bearing cup and install a snap ring into the input bore of the housing.
3. Adjust the bearings by tapping lightly on each end of the shaft with a soft hammer. If endplay exists, add shims under the snap ring and repeat adjustment until the shaft spins freely with no endplay.

Continued on next page.

PARTS DIAGRAMS AND LISTS

4. Insert an output bearing cone and the bronze gear into the housing. Slide the output shaft through the bronze gear and bearing cone, taking care not to scratch the shaft.

NOTE: The end of the output shaft should extend 14.40 RC/18.44 HC beyond the machined mounting surface on the back side of the housing.

Install and tighten the D43 set screw into the bronze gear. Insert an output bearing cone on the shaft until it is tight against the bronze gear.


5. Install a gasket on the cover and insert it over the end of the output shaft. Tighten the cover down.

Adjust the bearings by tapping lightly on each end of the shaft with a soft hammer. If endplay exists, add shims under the snap ring and repeat adjustment until the shaft spins freely with no endplay.

6. Grease the lips of the output and input shaft seals and install the seals. Verify the seals are seated flush (not cocked) in the housing. Use a seal protector when installing any seals over a keyway.
7. Install the caps in the input and output bores using a sealant on both the cap outer diameter and the bore inner diameter.
8. Remove the vent plug and pressurize the housing with low pressure air (about 3 psi). Brush a soap and water mix over the seals, caps, and gaskets and check for leaks.
9. Install the gear case on spreader, grease input shaft bearing, and fill unit with gear oil to a level even with the bottom of the fill hole.

Feed Gate - Regular Capacity

Items with a single part number or description are common to regular capacity, mild steel and 16-gauge stainless steel spreaders.

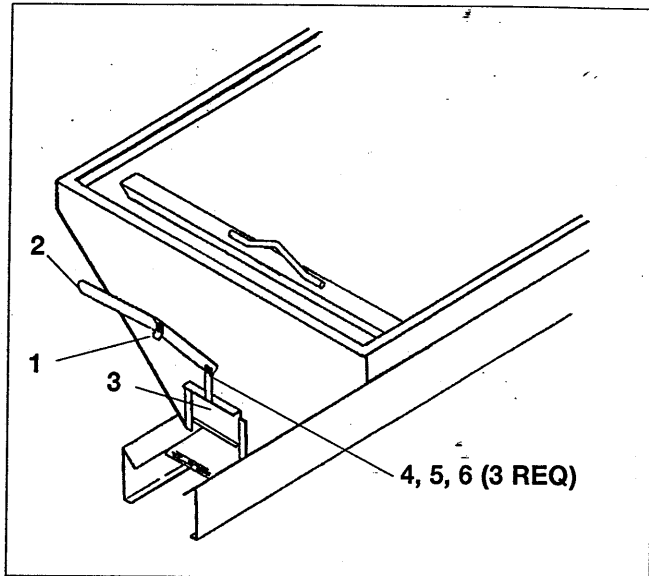


ITEM	PART NO.	QTY.	DESCRIPTION
1	9231	1	WING NUT
1	20098	1	WING NUT - STS
2	9232	1	FEED GATE LEVER RC MS
2	20099	1	FEED GATE LEVER RC STS
3	68408	1	FEED GATE RC MS
3	68409	1	FEED GATE RC STS
4	90965	1	3/8-16X1 CB G5 ZP
4	91023	1	3/8-16X1 CB STS
5	90986	1	3/8-16 PT HX JAM LKNUT NYIS ZP
5	90999	1	3/8-16 PT HX JAM LKNUT NYIS STS
6	90315	2	3/8 PLAIN WASHER TY A STD ZP
6	91006	2	3/8 PLAIN WASHER TY A STD STS

Gear Case Disassembly


To disassemble the gear case, reverse the Gear Case Assembly. Take extreme caution when removing the bearings. A light tap on the bearing cups may be needed to remove the snap rings.

PARTS DIAGRAMS AND LISTS

Feed Gate - High Capacity

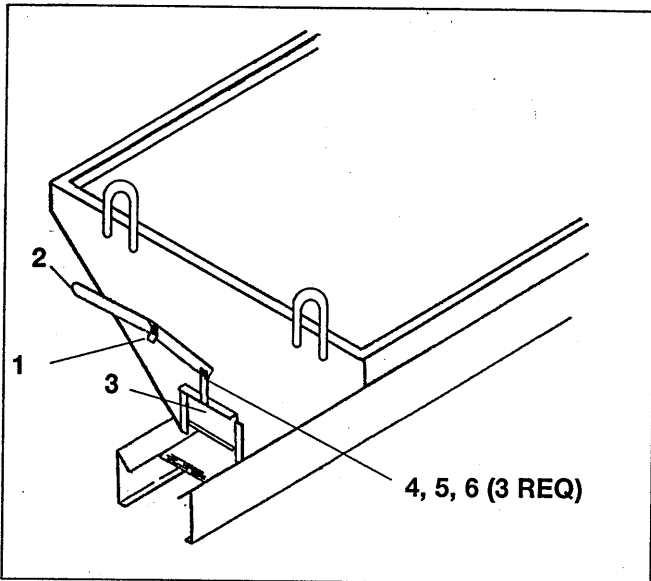

Labels - Regular and High Capacity

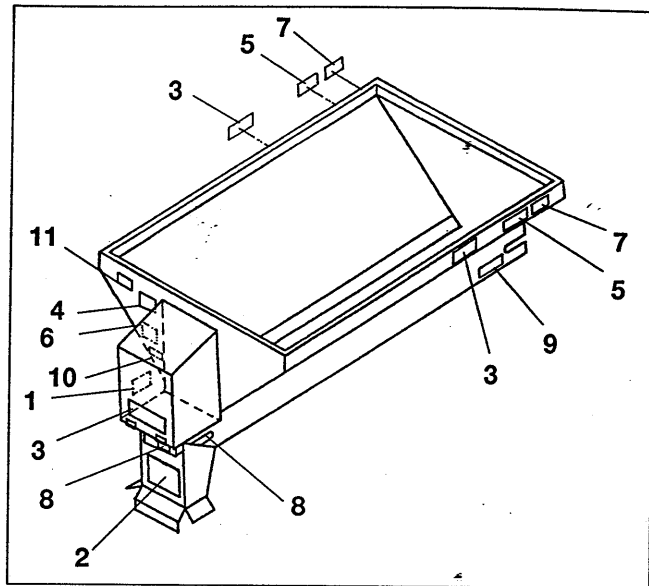

ITEM PART NO. QTY. DESCRIPTION

1	9231	1	WING NUT
2	20344	1	FEED GATE LEVER HC MS
3	68410	1	FEED GATE HC MS
4	90965	1	3/8-16X1 CB G5 ZP
5	90986	1	3/8-16 PT HX JAM LKNUT NYIS ZP
6	90315	2	3/8 PLAIN WASHER TY A STD ZP


ITEM PART NO. QTY. DESCRIPTION

1	9131	1	LABEL - WARNING - Fire Hazard
2	20599	1	LABEL - WARNING - Rotating Spinner
3	20724	3	FISHER® DECAL 4-1/2 X 15
4	20598	1	LABEL - WARNING - Read Instruction Manual
5	9133	2	LABEL - WARNING - Overloaded Vehicles
6		1	LABEL - SERIAL - Serial No.
7	9129	2	LABEL - WARNING - Do Not Ride
8	9134	2	LABEL - WARNING - Moving Parts
9	9414	2	LABEL - WARNING - Conveyor Chain
10	20600	1	LABEL - WARNING - Electric Shock
11	20143	1	LABEL - CAUTION - Unused Material

PARTS DIAGRAMS AND LISTS


Cab Control

Front View

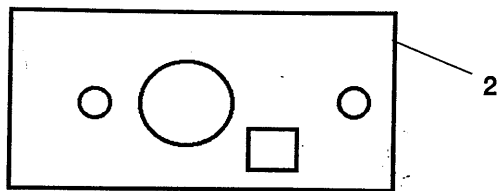

Electric Throttle


Back View

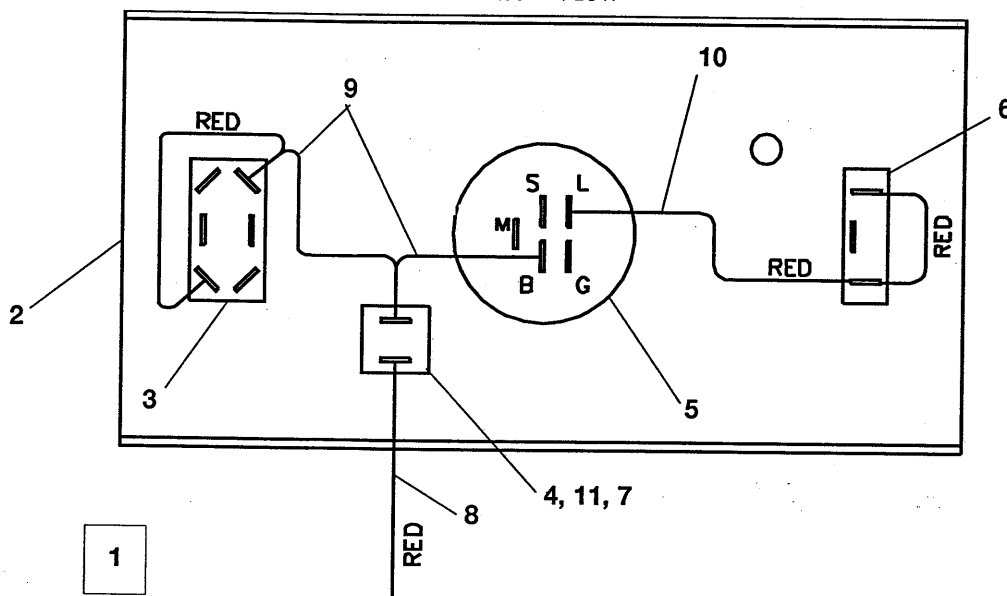

ITEM	PART NO	QTY.	DESCRIPTION
1	20354	1	CAB CONTROL (ELEC. THROTTLE)
2	. 9427	1	CONTROL PANEL - ELEC THROTTLE
3	. 9422	1	ELECTRIC THROTTLE SWITCH
4	. 67026	1	FUSE HOLDER
5	. 20162	1	KEYED IGNITION SWITCH
6	. 9237	1	CLUTCH SWITCH
7	. 67027	1	FUSE CAP
*	. 65368	1	KEY - HOPPER SPREADER
8	. 20088	1	POWER WIRE - RED
9	. 20089	1	JUMPER WIRE - RED - 4 TERMINAL
10	. 20090	1	JUMPER WIRE - RED - 3 TERMINAL
11	. 20086	1	FUSE 3 AG - 10 AMP
12	90681	AR	1/4X3/4 HX SDTS ZP
13	9472	AR	CLAMP LOOP #10
14	9415	AR	CLAMP LOOP #6
*	3042	AR	RUBBER GROMMET 3/8" ID
*	8329	1	DIELECTRIC GREASE TUBE

* Not shown

Clamp Loops


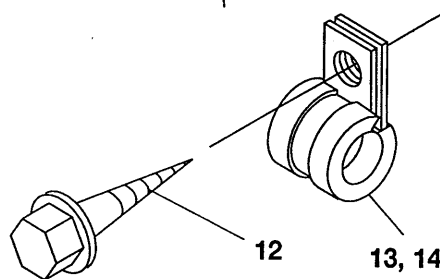


Used to secure spreader harness and spreader cable to the spreader and the cab control.

PARTS DIAGRAMS AND LISTS



Vehicle Harness

Part Number: 20072

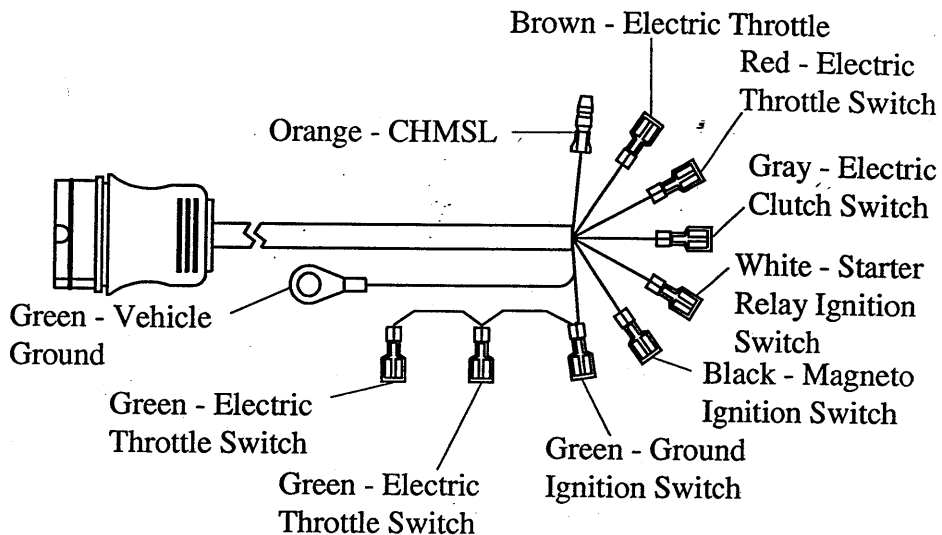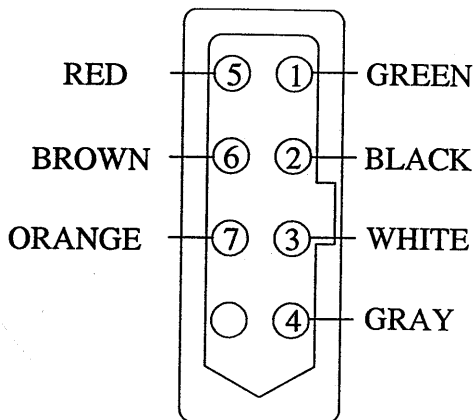


Spreader Harness

Part Number: 20073

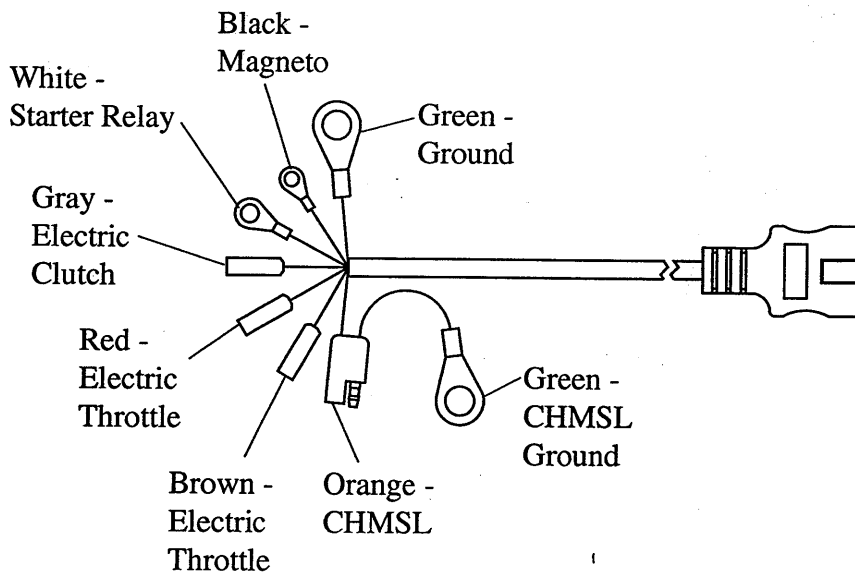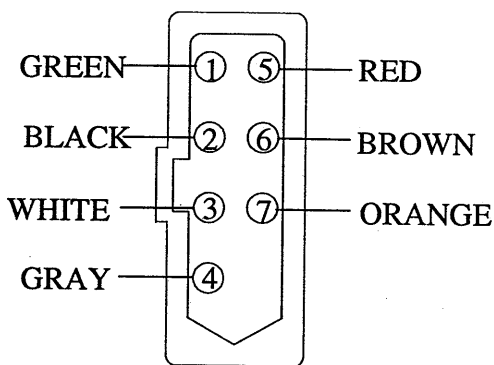


Plug Cover

Part Number: 8291

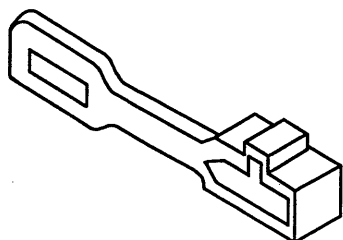


Hook

Part Number: 20128



PARTS DIAGRAMS AND LISTS

Electric Throttle

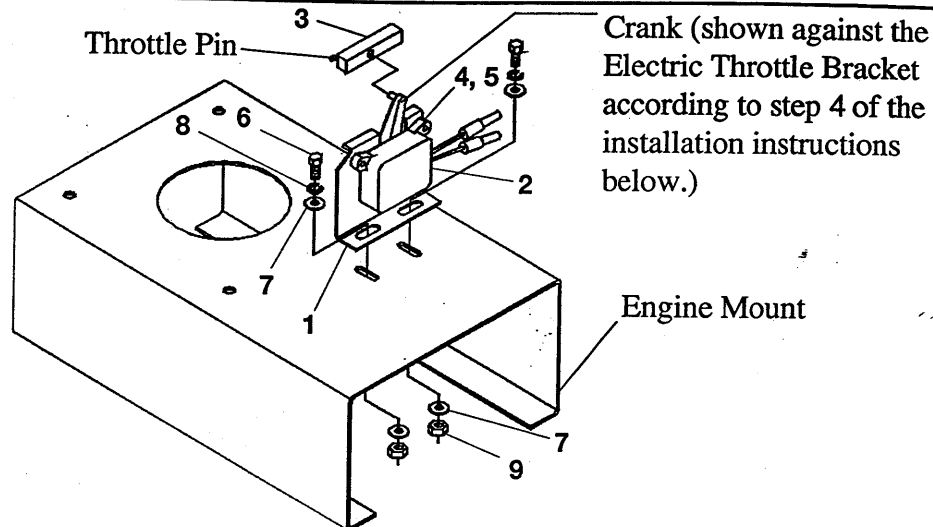

ITEM	PART NO	QTY.	DESCRIPTION
1	20163	1	ELECTRIC THROTTLE BRACKET
2	20134	1	ELECTRIC THROTTLE MOTOR
3	20129	1	ELECTRIC THROTTLE ARM
4	67091	3	#6-32X5/8 SBH CS STS
5	91027	3	#6-32 PT HX LK NUT NYIS STS

ITEM	PART NO	QTY.	DESCRIPTION
6	90461	2	1/4-20X3/4 HX CS G5 ZP
7	90311	4	1/4 PLAIN WASHER TY A STD ZP
8	90359	2	1/4 SP LK WASHER ZP
9	90330	2	1/4-20 HX NUT ZP

Removal Instructions

1. Disconnect the battery cables.
2. Carefully observe the existing installation. Mark the electric throttle bracket position on the engine mount.
3. Disconnect the brown and red spreader harness wires from the electric throttle motor leads.
4. Remove 1/4-20 fasteners that hold the electric throttle bracket to the engine mount.
5. Remove #6-32 fasteners holding the electric throttle motor to the bracket. Remove the electric throttle motor.

3. Fasten the electric throttle motor to the bracket using the existing hardware.
4. Using the electric throttle control, run the new electric throttle motor until the crank is against the bracket as shown in above diagram.
5. Place the electric throttle arm on the crank as shown in the above diagram.
6. Place the electric throttle assembly onto the engine mount inserting the throttle pin into the engine choke/throttle linkage plastic slider (not shown).
7. Loosely bolt electric throttle assembly to the engine mount with the existing hardware.
8. Keeping the electric throttle arm parallel to and against the carburetor control bracket, move the electric throttle bracket forward putting the engine throttle into the full choke position.


Installation Instructions

CAUTION: Improper installation can result in damage to the engine choke/throttle linkage.

1. Connect the brown and red spreader harness wires (not shown) to the corresponding colored electric throttle motor leads.
2. Using the electric throttle control, run the new motor until the crank reaches the 12 o'clock position. (A 9-volt battery can be a substitute for the control.)
9. Tighten the fasteners according to the Torque Chart on page 4.
10. Reconnect the battery cables.
11. Verify the crank is stopped in both directions by the bracket, not the carburetor linkage.

ACCESSORIES

Center High-Mounted Stoplight (CHMSL) Kit

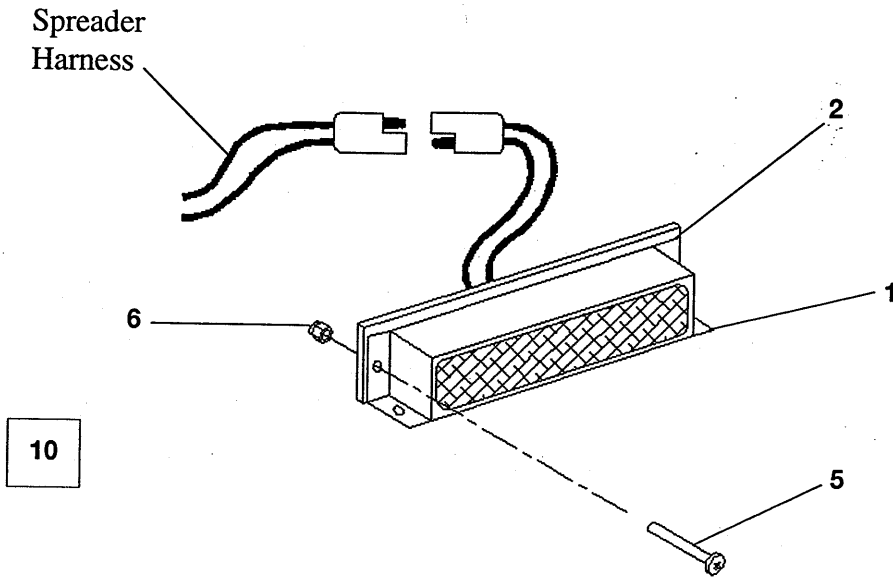

ITEM	PART NO.	QTY.	DESCRIPTION
10	9486	1	STOPLAMP KIT
1	. 9487	1	STOPLIGHT ASSEMBLY W/ GASKET
2	. . 9488	1	STOPLIGHT GASKET
*	. 9489	1	VEHICLE HARNESS-STOPLIGHT
*	. 9493	1	PARTS BAG ASSY
*	. . 9490	1	PROTECTOR PLUG SAE 2 CONTACT

ITEM	PART NO.	QTY.	DESCRIPTION
5	. . 90693	2	#6-32 X3/4 PH PN MS STS
6	. . 90694	2	#6-32 PT HX LK NUT NYIS STS
*	. . 5793	1	BUTT SPLICE
*	. . 8329	1	DIELECTRIC GREASE TUBE
*	. 3666	10	CABLE TIE
*	. 6456	1	9-1-93 LITERATURE CHMSL
*	. 13658	1	CHMSL INSTALLATION

Installation Instructions

Use the CHMSL manual supplied with the kit for installation except for the following situations:


- The CHMSL harness and the protective plug (supplied with the CHMSL kit) are *NOT* used. The CHMSL plugs into the SAE two-pin connector included as part of the spreader harness.
- The orange CHMSL feedwire from the cab control is connected to the vehicle CHMSL signal. See Cab Control and Wire Harness Installation.

Indented parts are included in the assembly under which they are listed. Quantities shown are included with the assembly.

* Not shown

ACCESSORIES

Inverted Vee Assembly - Regular Capacity Mild Steel

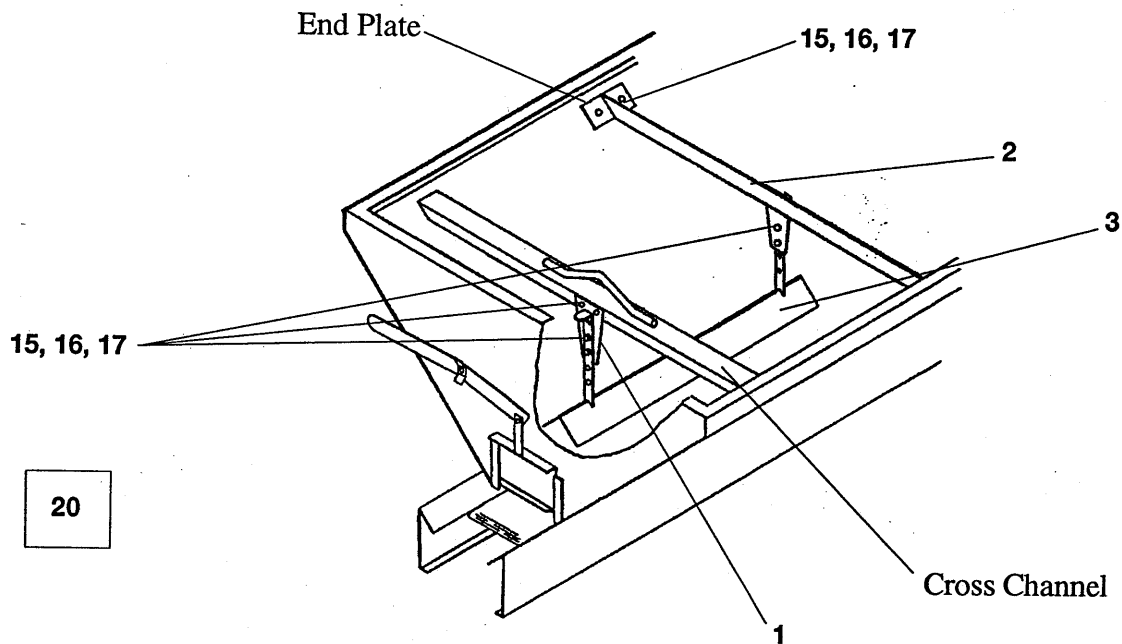

ITEM	PART NO.	QTY.	DESCRIPTION
20	9138	1	INVERTED VEE KIT RC MS
1	20164	1	INVERTED VEE PLATE
2	20165	1	INVERTED VEE SUPPORT
3	65994	1	INVERTED VEE RC MS

ITEM	PART NO.	QTY.	DESCRIPTION
15	90103	10	3/8-16X1 HX CS G5 ZP
16	90361	10	3/8 SP LK WASHER ZP
17	90334	10	3/8-16 HX NUT ZP

Indented parts are included in the assembly under which they are listed.

Installation Instructions

1. Center the inverted vee plate on the engine side of the cross channel with the wide end of the plate facing up.
2. Using the two holes at the wide end of the plate as a template, drill two 7/16" diameter holes through one leg of the cross channel support. Assemble with two 3/8" x 1" hex head cap screws, lock washers, and nuts.

CAUTION: Before drilling any holes, check both sides of the material for any wires, fuel lines, fuel tanks, etc. that may be damaged by drilling.

3. Assemble the inverted vee to the inverted vee support and to the inverted vee plate (installed in step 1) with four 3/8" x 1" hex head cap screws, lock washers, and nuts.


4. Install item 2, inverted vee support, parallel to the top of the hopper. Using the two holes in the end plates of the support as a guide, drill two 7/16" holes through each side of the spreader.

NOTE: Fasten a 3/8" x 1" hex head cap screw, lock washer, and nut in each hole as it is drilled. This will hold the support in place as you drill your next hole.

5. Adjust the height of the inverted vee for the material being spread:
 - *Salt or dry sand* - adjust the vee to the lowest position.
 - *Salt/sand mix* - adjust the vee to the middle position.
 - *Wet sand* - adjust the vee to the highest position.
6. Tighten all fasteners according to the Torque Chart on page 4.

ACCESSORIES

Inverted Vee Assembly - Regular Capacity Stainless Steel

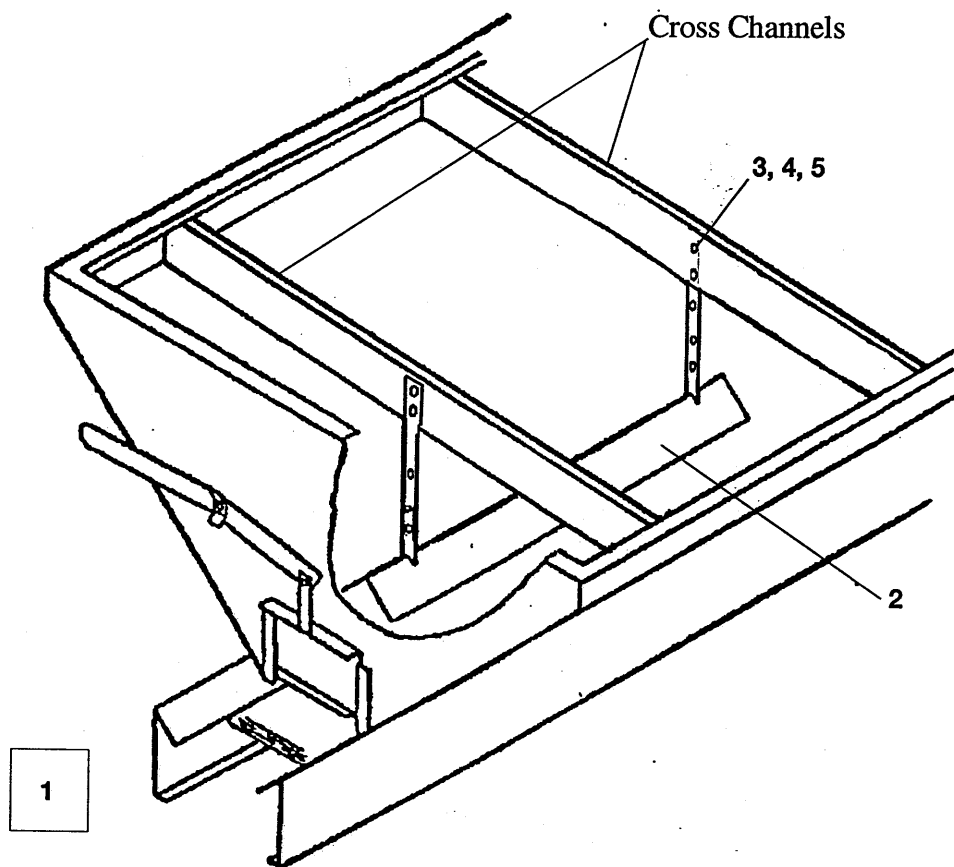

ITEM	PART NO.	QTY.	DESCRIPTION
1	20166	1	INVERTED VEE KIT RC STS
2	. 65995	1	INVERTED VEE RC STS
3	. 91015	4	3/8-16X1 HX CS STS
4	. 91007	4	3/8 SP LK WASHER STS
5	. 91008	4	3/8-16 HX NUT STS

Indented parts are included in the assembly under which they are listed.


Installation Instructions

1. Select the height for the inverted vee for the material being spread:
 - *Salt and dry sand* - adjust the vee to the lowest position.
 - *Salt/sand mix* - adjust the vee to the middle position.
 - *Wet sand* - adjust the vee to the highest position.
2. Attach the inverted vee to the cross channels with the provided fasteners.

3. Tighten all fasteners according to the Torque Chart on page 4.

ACCESSORIES

Inverted Vee Assembly - High Capacity

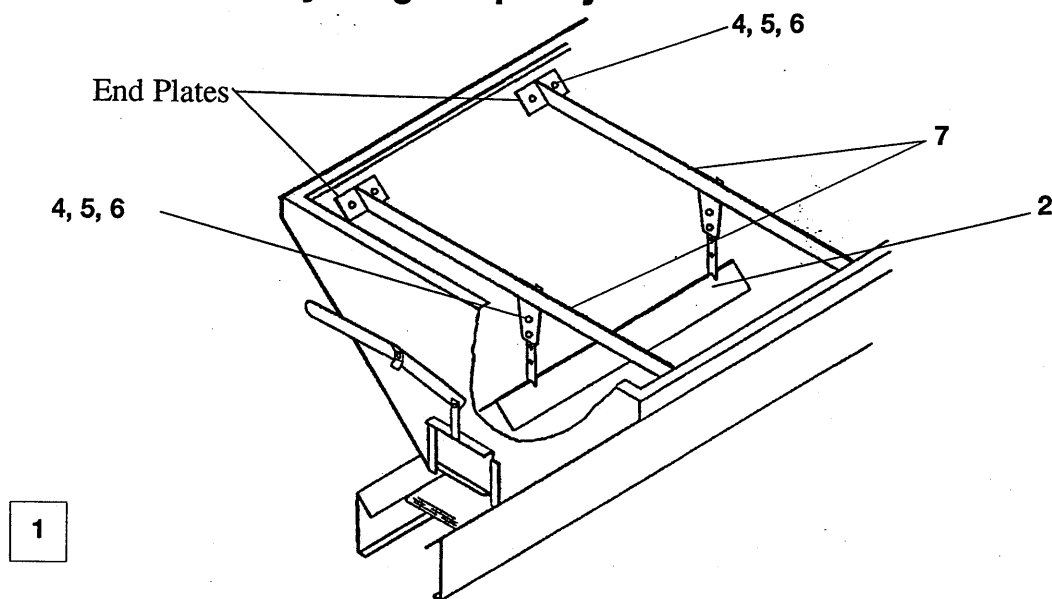

ITEM	PART NO.	QTY.	DESCRIPTION
1	9347	1	INVERTED VEE KIT 8' HC MS
1	9155	1	INVERTED VEE KIT 10' HC MS
2	. 20348	1	INVERTED VEE 8' HC MS
2	. 20349	1	INVERTED VEE 10' HC MS

ITEM	PART NO.	QTY.	DESCRIPTION
4	. 90103	12	3/8-16X1 HX CS G5 ZP
5	. 90361	12	3/8 SP LK WASHER ZP
6	. 90334	12	3/8-16 HX NUT STS
7	. 20165	2	INVERTED VEE SUPPORT

Installation Instructions

1. Assemble the inverted vee to the inverted vee supports using four 3/8" x 1" hex head cap screws, lock washers, and nuts.
2. Place the inverted vee/inverted vee support assembly into the spreader as shown on the above diagram. The end of the inverted vee should be 8-10" away from the feed gate, and the inverted vee supports should be parallel to the top of the spreader.
3. Using the holes in the end plates of the supports as guides, drill 7/16" holes through each side of the spreader.

CAUTION: Before drilling any holes, check both sides of the material for any wires, fuel lines, fuel tanks, etc. that may be damaged by drilling.

CAUTION: Verify the spreader's side supports are not in the way of the holes to be drilled.

NOTE: Fasten a 3/8" x 1" hex head cap screw, lock washer, and nut in each hole as it is drilled. This will hold the support in place as you drill your next hole.

4. Adjust the height of the inverted vee for the material being spread.
 - *Salt or dry sand:* adjust the vee to the lowest position.
 - *Salt/sand mix:* adjust the vee to the middle position.
 - *Wet sand:* adjust the vee to the highest position.
5. Tighten all fasteners according to the Torque Chart on page 4.



FISHER ENGINEERING
12 WATER STREET
P.O. BOX 529
ROCKLAND, MAINE 04841



A DIVISION OF DOUGLAS DYNAMICS, L.L.C.

Copyright © 1998 Douglas Dynamics L.L.C. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of Fisher Engineering. Authorization to photocopy items for internal or personal use by Fisher Engineering outlets is granted.

Fisher Engineering reserves the right under its product improvement procedures to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used herein. Fisher Engineering and the vehicle manufacturer may require and/or recommend optional equipment for hopper spreaders. Fisher Engineering offers a limited warranty for all hopper spreaders. See separately printed pages for this important information. FISHER® is a registered (®) trademark of Douglas Dynamics, L.L.C.