




WESTERN PRODUCTS
 7777 NORTH 73RD STREET
 P.O. BOX 23045
 MILWAUKEE, WISCONSIN 53223

dd
 A DIVISION OF DOUGLAS DYNAMICS, INC.

FLOOR BRACKET

DIAGRAM & INSTRUCTIONS

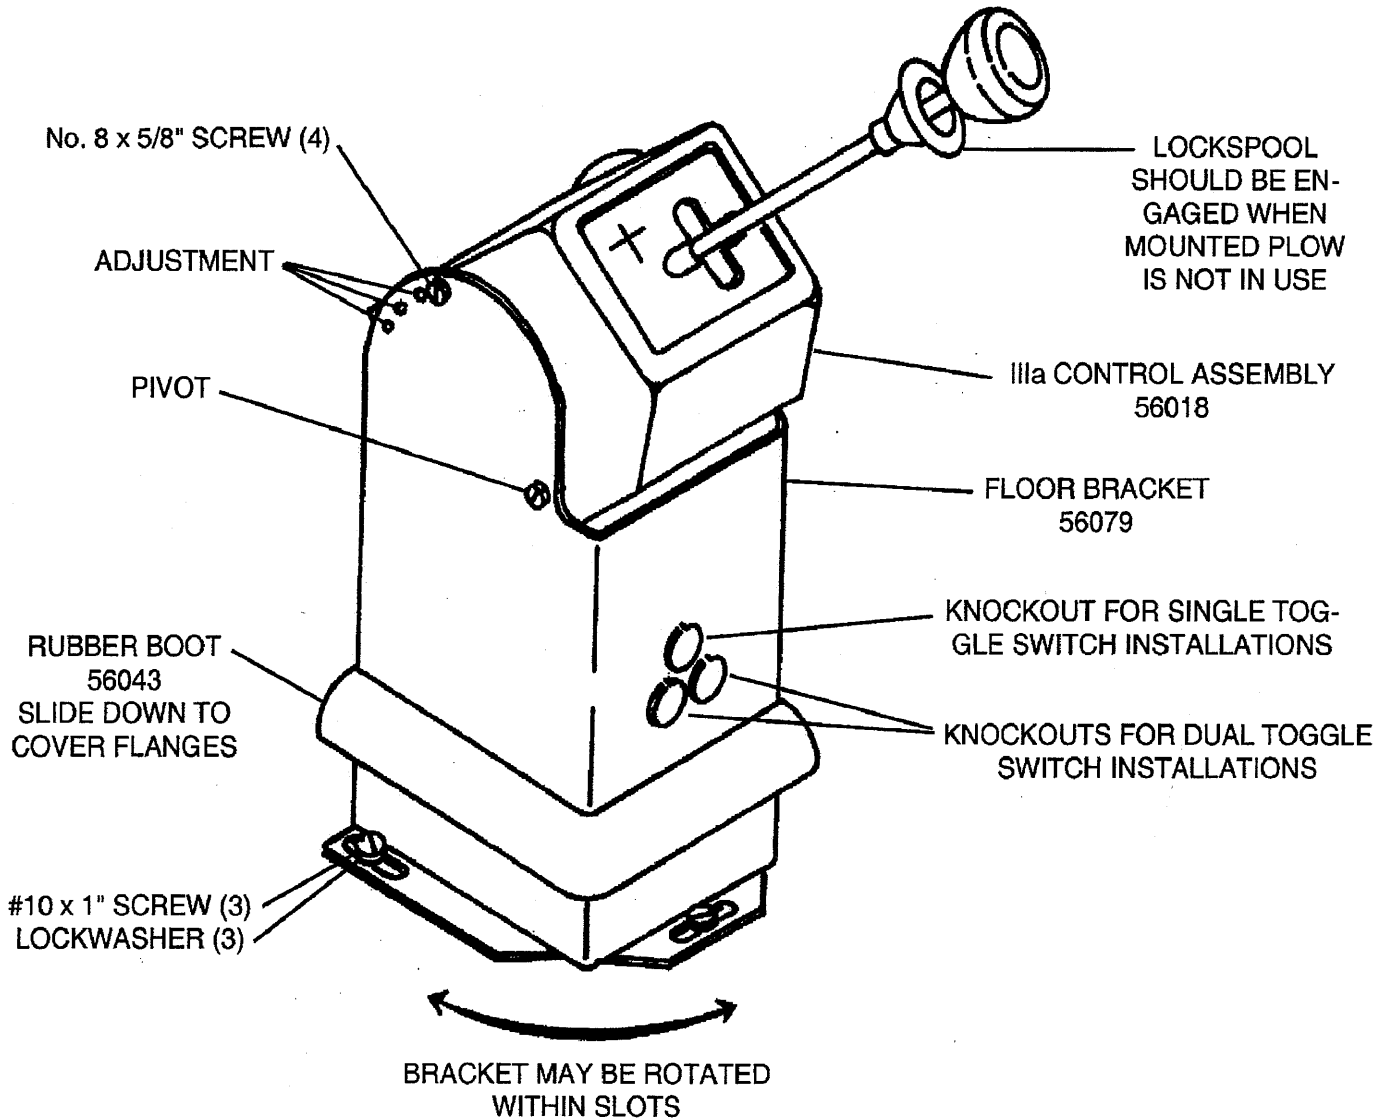

The IIIa Control should be placed in the vehicle so it is convenient to the operator without interfering with shift levers or the seat when it is fully forward. Use the bracket in the location you select as a locating template to drill three 9/64" diameter holes through the floorboard. These holes should be drilled in the center of the floor bracket slots, this will permit the bracket to be adjusted at the operators discretion. Fasten using No. 10 x 1" screws and lock washers (furnished with Hydraulic System). Slide the rubber boot down to cover the flanges. Align forward holes of bracket and IIIa Control, place No. 8 x 5/8" long slotted hex head screws (furnished with Hydraulic System) in these holes. Select best position for the IIIa Control and secure using two more of the same size screws after cable installation is completed.