


A Division of The Toro Company P.O. Box 787 Iron Mountain, MI 49801-0787 ISO 9001:2008 REGISTERED bossplow.com

## MSC11949 Headlight Adapter Installation Procedure



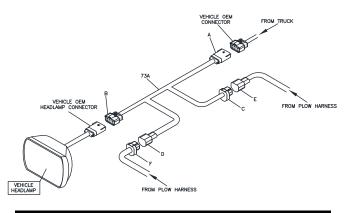

This Installation Procedure is for 2018 and Newer Jeep Wrangler JL with LED or Halogen Headlights.

- 1. Locate and disconnect vehicle OEM headlight harness on Driver Side of vehicle.
- 2. Connect plug (A) of Headlight Adapter (73A) into the vehicle driver side OEM headlight harness.
- 3. Connect plug (B) of Headlight Adapter (73A) into the vehicle Driver Side headlight.
- Connect blue plastic connector (C) of Headlight Adapter (73A) into Driver Side black rubber connector (E) from Plow Harness.
- Connect black rubber connector (D) of Headlight Adapter (73A) into Driver Side blue plastic connector (F) from Plow Harness.
- 6. Repeat steps 1-5 for Passenger Side Headlight Adapter (73B)
- 7. Connect Turn Signals as instructed in Turn Signal Relay Kit (MSC09991).

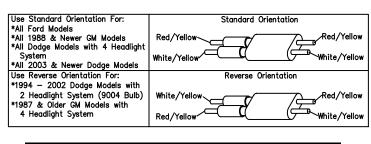


Figure 2. Vehicle Option Connector

- G10202
- 8. Locate vehicle option connector. Align the connector in the Standard Orientation so that the wire colors are positioned to match. This is illustrated in Figure 2.