

MSC15375 Headlight Adapter Installation Procedure

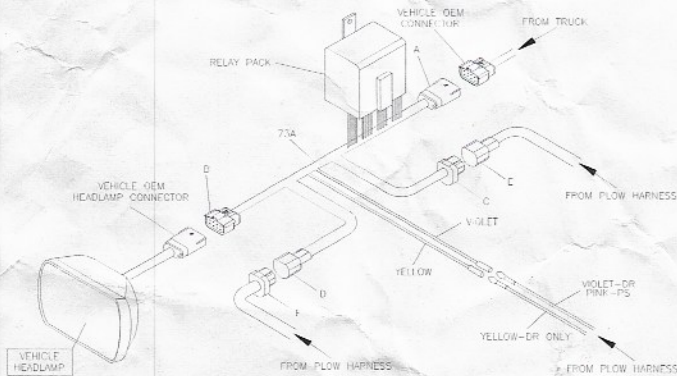


Figure 1. GM 1500 Headlight Adapter G10942

This Installation Procedure is for 2018 and Newer Chevrolet & GMC 1500 trucks.

1. Locate and disconnect vehicle OEM headlight harness on Driver Side of vehicle.
2. Connect plug (A) of Headlight Adapter (73A) into the vehicle driver side OEM headlight harness.
3. Connect plug (B) of Headlight Adapter (73A) into the vehicle Driver Side headlight.
4. Connect blue plastic connector (C) of Headlight Adapter (73A) into Driver Side black rubber connector (E) from Plow Harness.
5. Connect black rubber connector (D) of Headlight Adapter (73A) into Driver Side blue plastic connector (F) from Plow Harness.
6. Connect Yellow Headlight Adapter (73A) female bullet connector to the Driver Side Yellow male bullet connector of Plow Harness.
7. Connect Violet Headlight Adapter (73A) female bullet connector to the Driver Side Violet male bullet connector of Plow Harness.

8. Repeat steps 1-5 for Passenger Side Headlight Adapter (73B).
9. Connect Violet Headlight Adapter (73B) female bullet connector to the Passenger Side Pink male bullet connector of Plow Harness.
10. Dielectric grease and secure the Passenger Side Yellow Headlight Adapter (73B) female bullet connector. This connector will not be used.
11. Mount Relay Pack upright and away from any hot or moving parts.

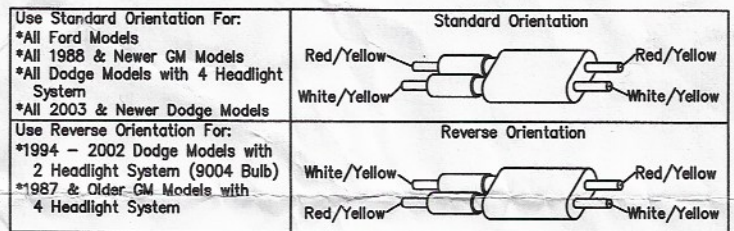


Figure 2. Vehicle Option Connector G10202

12. Locate vehicle option connector. Align the connector in the Standard Orientation so that the wire colors are positioned to match. This is illustrated in Figure 2.