

www.storksplows.com
26641-1 Adapter Kit
Installation Instructions

PLUG-IN HARNESS INSTALLATION


Follow the Isolation Module installation instructions included with the harness kit until directed to use these adapter kit instructions.

NOTE: For vehicles using the 8436 4-Port Harness Kit, the short plug-in harness should be on the same side of the vehicle as the Isolation Module and both of the plug-in harnesses must be configured for HB-5 headlamps (9007).

PLUG-IN ADAPTER INSTALLATION

1. Remove the headlamp connectors on the driver side of the vehicle.
2. On the two-pin connector removed from the innermost headlamp, fill the terminals with dielectric grease and cover connector with tape or heatshrink tubing. This connector will not be used.
3. Apply dielectric grease to the terminals on the three-pin plug removed from the headlamp. Plug the molded three-pin male adapter plug into this plug and cover both connectors with tape or heatshrink tubing.
4. Plug the blue three-pin adapter connector into the molded plug on the plug-in harness.

For vehicles using the 29050/B29050 harness, connect the adapter as shown below:

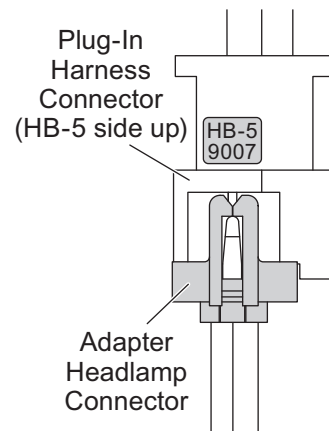

5. Connect the adapter three-pin molded connector to the blue three-pin connector on the plug-in harness.
6. Repeat Steps 1–5 on the passenger side of the vehicle.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.
