

MSC10424 Headlight Adapter Installation Procedure

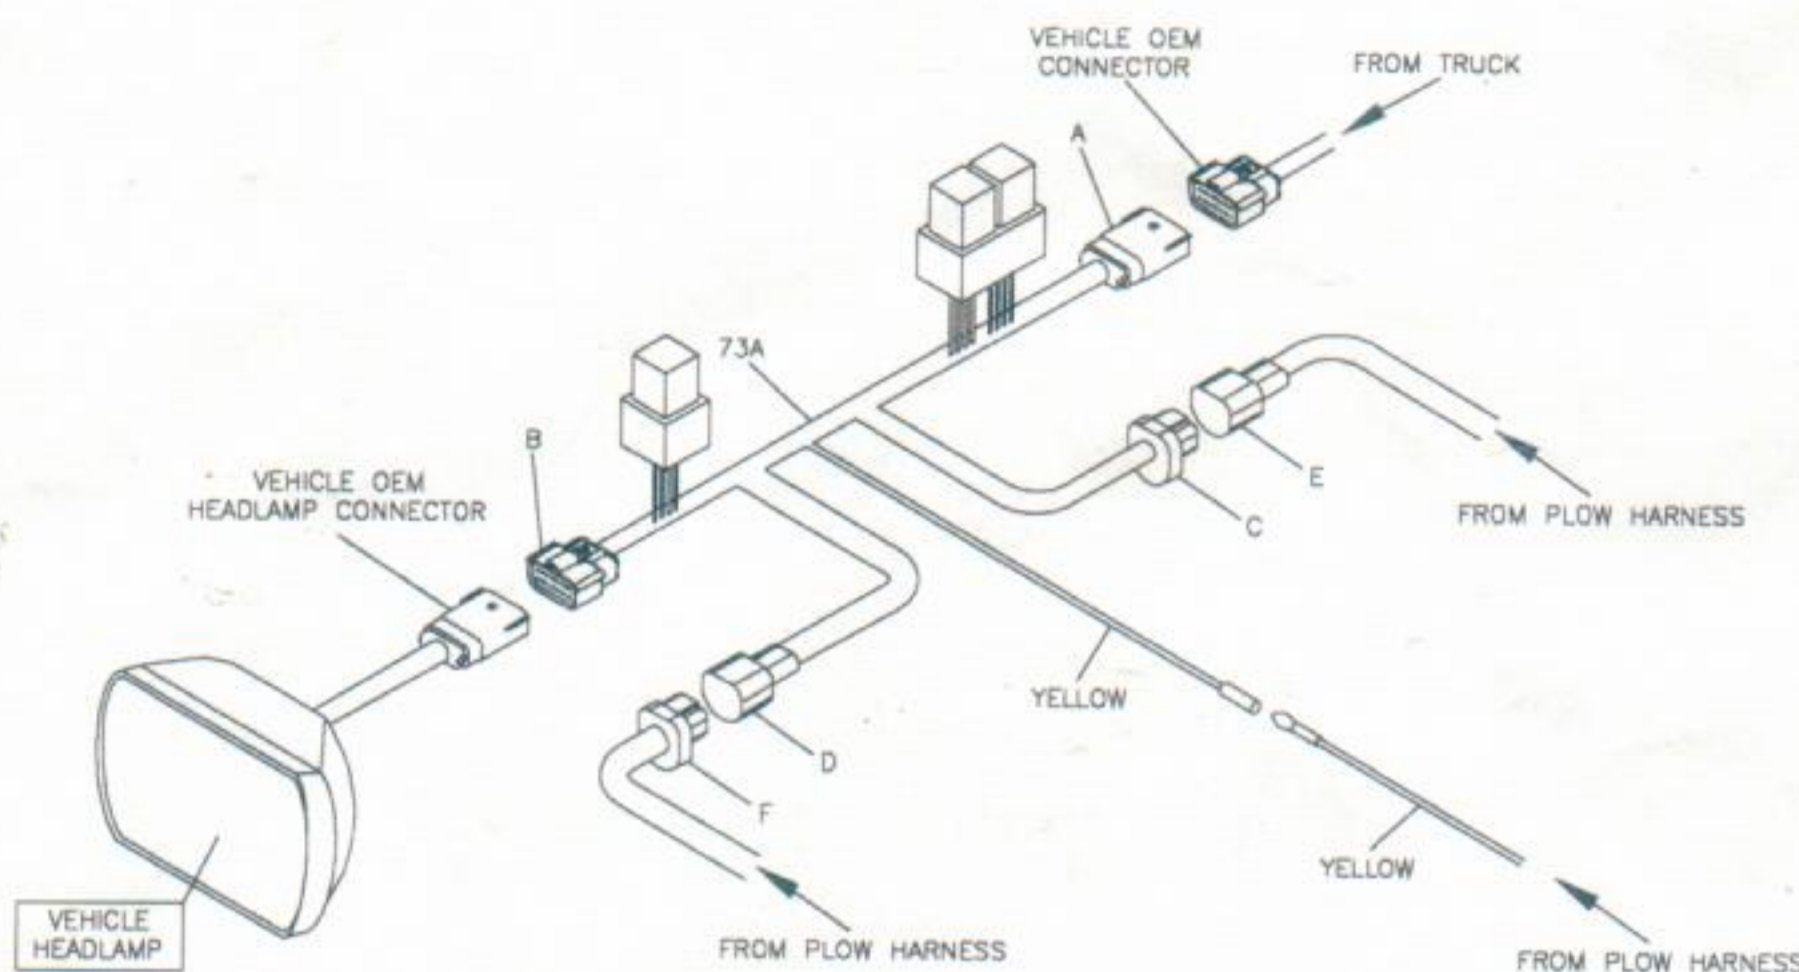


Figure 1. Nissan Titan XD LED Headlight Adapter G10941

This Installation Procedure is for 2018 and Newer Nissan Titan XD trucks with LED Headlights.

1. Locate and disconnect vehicle OEM headlight harness on Driver Side of vehicle.
2. Connect plug (A) of Headlight Adapter (73A) into the vehicle driver side OEM headlight harness.
3. Connect plug (B) of Headlight Adapter (73A) into the vehicle Driver Side headlight.
4. Connect blue plastic connector (C) of Headlight Adapter (73A) into Driver Side black rubber connector (E) from Plow Harness.
5. Connect black rubber connector (D) of Headlight Adapter (73A) into Driver Side blue plastic connector (F) from Plow Harness.
6. Connect Yellow Headlight Adapter (73A) female bullet connector to the Driver Side Yellow male bullet connector of Plow Harness.

7. Repeat steps 1-6 for Passenger Side Headlight Adapter (73B).

8. Dielectric grease and secure the Passenger Side Yellow Headlight Adapter (73B) female bullet connector. This connector will not be used.

<p>Use Standard Orientation For:</p> <ul style="list-style-type: none"> *All Ford Models *All 1988 & Newer GM Models *All Dodge Models with 4 Headlight System *All 2003 & Newer Dodge Models 	<p>Standard Orientation</p>
<p>Use Reverse Orientation For:</p> <ul style="list-style-type: none"> *1994 - 2002 Dodge Models with 2 Headlight System (9004 Bulb) *1987 & Older GM Models with 4 Headlight System 	<p>Reverse Orientation</p>

Figure 2. Vehicle Option Connector G10202

9. Locate vehicle option connector. Align the connector in the Standard Orientation so that the wire colors are positioned to match. This is illustrated in Figure 2.