## 13-Pin Headlight Adapter Kit 2003 & Newer GM C4500/C5500

## MSC09809

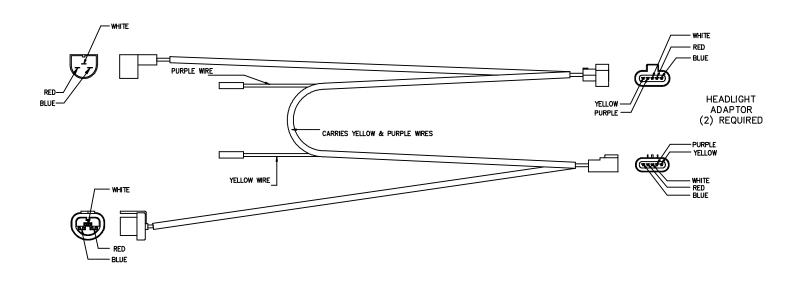


Figure 1. Headlight Adapter Kit, 2003 & Newer GM C4500/C5500



A Division of Northern Star Industries, Inc. P.O. Box 788 Iron Mountain MI 49801-0788 www.bossplow.com

MSC09809 Headlight Adapter Installation Procedure (2 Headlight System)

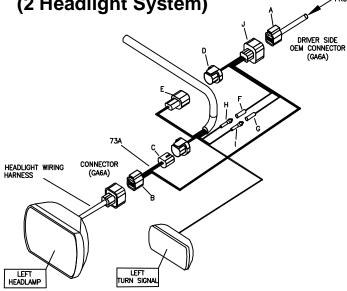


Figure 1. Driver Side Single Connections

G10397

ROM TRUCK

**Note:** This installation Procedure is for 2003 and Newer GMC C4500/5500 trucks with 2 headlight systems.

- 1. Disconnect OEM Headlight Connector Plug (A) from headlight wire harness.
- 2. Insert Five Pin Connector (B) of Headlight Adapter (73A) into headlight wire harness.
- Connect Black Rubber Female Socket (C) of Headlight Adapter (73A) into driver side of plow wiring harness.
- Connect the Blue Sealed Beam Connector (D) of Headlight Adapter (73A) into Black Rubber Female Socket (E) on driver side plow wiring harness.

- 5. Connect Opposite End (J) of Headlight Adapter (73A) into OEM Wiring Harness (A).
- 6. Connect Female Bullet (F) Yellow Wire from headlight adapter (73A) to Male Bullet (H) Yellow Wire on driver side plow wiring harness.
- 7. Connect Female Bullet (G) Violet Wire from Headlight Adapter (73A) to Male Bullet (I) Violet Wire on driver side plow wiring harness.
- 8. Repeat steps 1 through 5 on passenger side.
- Connect Female Bullet (G) Violet Wire from Headlight Adapter (73A) to Male Bullet Pink Wire on passenger side plow wiring harness.
- 10. Grease, tuck, and secure Female Bullet (F) Yellow Wire from headlight adapter (73A) on passenger side.

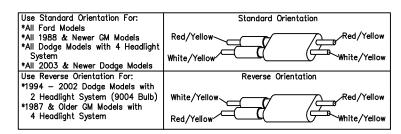


Figure 3. Vehicle Option Connector

G10202

11. Locate vehicle option connector. Align the connector so that the wire colors are positioned in the standard orientation. This is illustrated in Figure 3.