

TrynEx International, LLC, 531 Ajax Drive, Madison Heights, MI 48071-2429 • www.snowexproducts.com

September 15, 2016 Lit. No. 79347, Rev. 00

Vehicle Power Harness Boot Kit for Super Maxx™ Hoppers

INSTALLATION INSTRUCTIONS

A CAUTION

Read this document before installing the boot kit.


A CAUTION

Use standard methods and practices when attaching spreader and installing accessories, including proper personal protective safety equipment.


NOTE: Prior to installing the boot kit, disassemble and remove the connection located at the back of the vehicle power harness. The mounting bracket may also need to be removed.

NOTE: The connector will not pass through the mounting hole in the mounting bracket with the boot attached.


- 1. Park the vehicle on a smooth, level, hard surface, such as concrete. Turn the vehicle ignition to the "OFF" position and remove the key.
- 2. Disconnect both the NEGATIVE (-) and the POSITIVE (+) battery cables.
- 3. Remove the bolts securing the vehicle power harness cables to the connector.

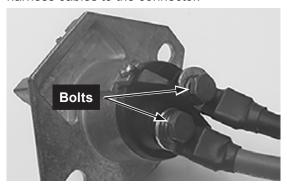

4. Slide the narrow end of the boot over the cables. If necessary, slide the conduit down to allow more room for the boot to slide onto the cables.

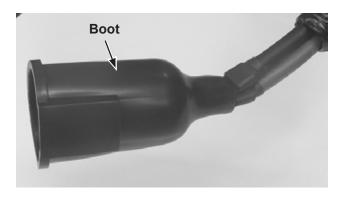


- 5. If the mounting bracket was previously removed, slide it over the connector.
- 6. Attach the vehicle power harness red cable to the POSITIVE (+) post on the connector.

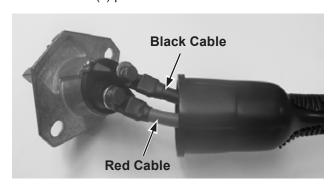

Attach the vehicle power harness black cable to the NEGATIVE (-) post on the connector.

8. Liberally apply dielectric grease to the bolts and screw located on the connector.

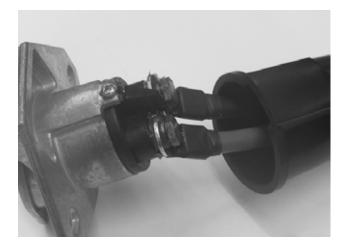


Align the boot with the flange and slide it onto the connector.



- 10. Apply additional dielectric grease through the opening in the narrow end of the boot.
- 11. Snug the boot up to the mounting bracket and secure using the supplied cable ties.

NOTE: Attach the cable tie over the wide end of the boot first.

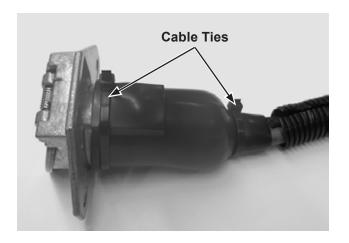

- 12. Slide the conduit over the boot end and secure.
- 13. Clean the connector terminals and liberally apply dielectric grease.



- 14. Reattach the mounting bracket to the bumper in a centralized location, and verify the vehicle power harness cannot drop onto the road when it is disassembled from the spreader.
- 15. Reconnect both the NEGATIVE (-) and the POSITIVE (+) battery cables.

TrynEx International, LLC, reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. TrynEx International, LLC, or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. TrynEx International, LLC, offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered ([®]) or unregistered ([™]) trademarks of Douglas Dynamics, LLC,: SnowEx[®], Super Maxx[™].